


USB WiFi Dongle User Manual

1. Open the driver folder and double-click the installation file, Click "Install" to finish the installation.

Drive download:

Enter "<http://www.xtechamericas.com/st-products/internal/XTC-600-en/?driver=true>" and click "Download Help" and then search for "XTC600" and "click to download".

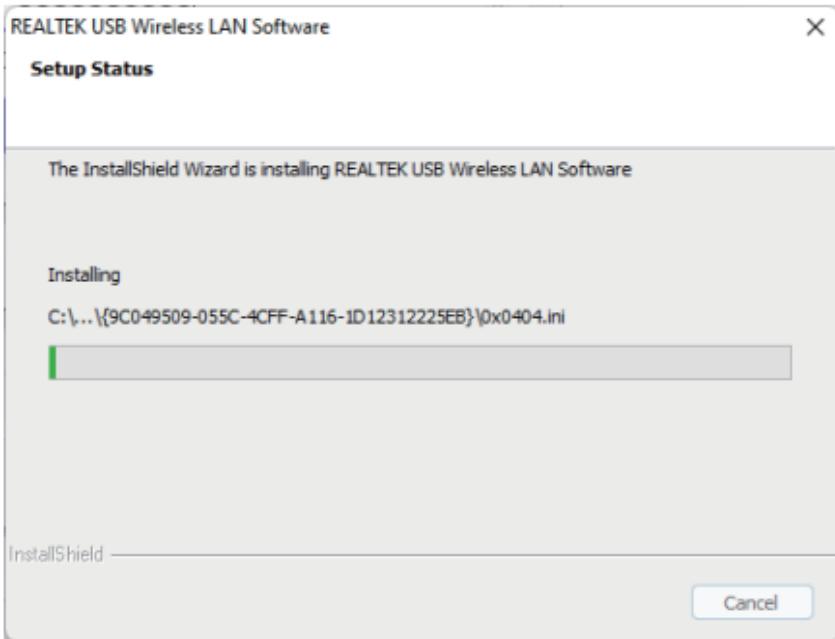

2. After confirming that the driver is installed correctly, you can double-click the wifi icon in the bottom right corner, and click the icon with the left mouse button. The computer will display the connectable WiFi SSIDs.

← Wi-Fi



XTECH-5G



XTECH-2A54-5G



--wpa1--aes--1234567890



--wpa2--aes--1234567890-5g



XTECH-2A54-2.4G



222aJkL222

More Wi-Fi settings

3. Click the WiFi SSID you want to connect and input the password.

← Wi-Fi



XTECH-ASD1-5G

XTECH-5G

Secured

Enter the network security key

••••••••••



You can also connect by pushing the button
on the router.

Next

Cancel



TOGO



TD-LINK TD-8800N

More Wi-Fi settings

4. After connected, open the "Open Network & Internet setting", click the "Wi-Fi" option, you can find the connected WiFi SSID, view the current IP, MAC address, gateway, driver version, etc.

The screenshot shows the Windows Settings interface. On the left, a sidebar lists various settings categories: System, Bluetooth & devices, Network & Internet (which is selected and highlighted in grey), Personalization, Apps, Accounts, Time & language, Gaming, Accessibility, Privacy & security, and Windows Update. The main content area is titled "Network & internet > Wi-Fi > XTECH-5G". Below this, it says "SHZL-COMFAST-5G properties". There is a checkbox for "Connect automatically when in range" which is checked. Under "Network profile type", there are two options: "Public (Recommended)" (selected) and "Private". The "Public" option is described as "Your device is not discoverable on the network. Use this in most cases—when connected to a network at home, work, or in a public place." The "Private" option is described as "Your device is discoverable on the network. Select this if you need file sharing or use apps that communicate over this network. You should know and trust the people and devices on the network." Below this, there is a section for "Configure firewall and security settings" and a "Metered connection" toggle switch set to "Off". There is also a note: "Set a data limit to help control data usage on this network". A table provides detailed information about the network connection:

IP assignment:	Automatic (DHCP)	Edit
DNS server assignment:	Automatic (DHCP)	Edit
SSID:	XTECH-5G	Copy
Protocol:	Wi-Fi 5 (802.11ac)	
Security type:	WPA2-Personal	
Manufacturer:	Realtek Semiconductor Corp.	

Note: If the IP address is not obtained or the data packet is not received, the password may be entered incorrectly. Please re-enter the correct password to obtain the IP again. For networks with fixed IP addresses, you need to manually set the IP address.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.