

YMG®

YMG Portable BT Party Speakers with Rechargeable
Battery and USB/AUX/Guitar/Mic

YMG®



AURORA-204

YMG Portable BT Party Speakers with
Rechargeable Battery and USB/AUX/
Guitar/Mic



BT 5.0



USB



TF CARD



AUX



LED Lamp




Content

Content	1
Technical specifications	1
Safety Precaution	2
Front Panel Functions	3
Remote Functions	4
Instructions	4
SAFETY MEASURES	5

Technical specifications


BT Wireless Standard	5.2
 PMPO	300W
 Rated Power	60W
 Transmission Distance	10m
 Drive Unit	4.5"x2+2"x2
 BT Name	Aurora 204
 DC Input	5V

Safety Precaution

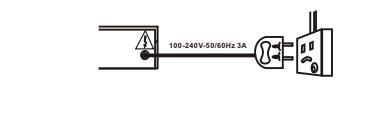


1. Power:


When working under AC power, please operate only under power indicated in the instruction or marked on device.

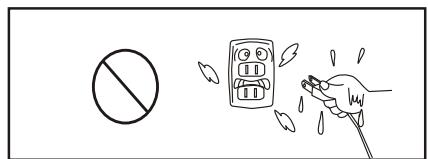


2. Caution for Electrical Shock:
Wet hands are unallowable to plug in or out power plug to avoid electrical shock. Don't suffer raining or watering! Vases or other vessels containing water cannot be placed on the main unit.

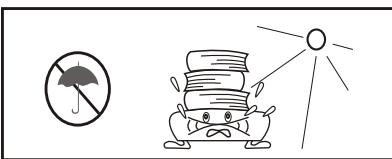


3. This machine cannot bear heavy load:
Avoid sunray hitting directly, and stays away from various heating sources such as stove, radiator and so on. Don't be close to the environments with much dust, high temperature, strong light and strong magnetic field etc.

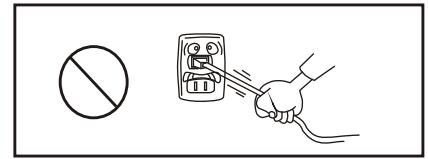

4. Power line protection:
Prevent power line from being stepped on or pinched by heavy objects. Special attention should be paid to plug of power Cord, outlets on backboard and sockets on wall. Never pull or drag power line.

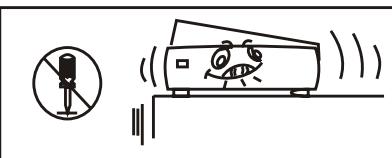


5. Do not dismantle the casing: Serious electric shock may occur if touching internal parts carelessly. Prevent metal pieces or liquid from dropping inside the machine from openings.

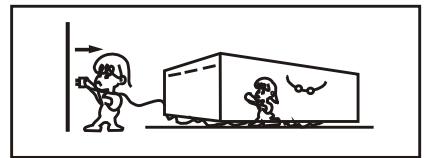

6. The plug as the device completely cut off from the power supply, It should keep easy operation.
If the unit will not be used for a longtime, Please un plug the power cord from AC power Outlet.

Front Panel Functions

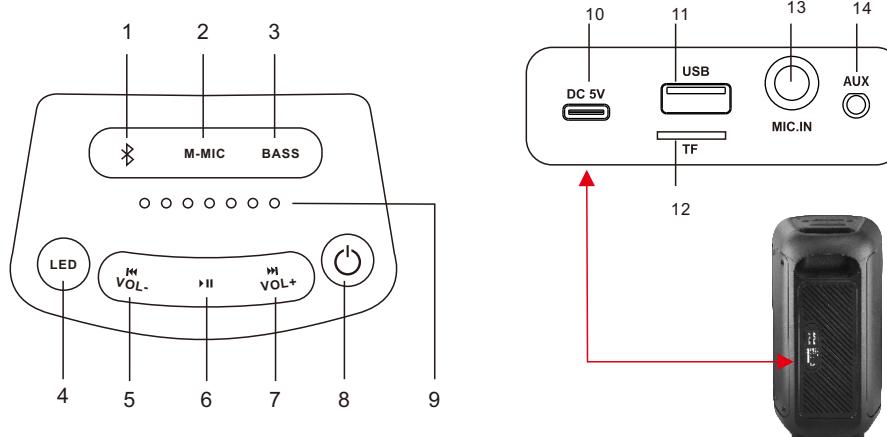


1. Bluetooth Mode: press this button to activate the BLUETOOTH mode, search and connect the device "AURORA 204" on your mobile phone.
2. Music / Microphone Volume Switch:
 - 1 press shortly the M-Mic Button, if the LED light in the front is blue, it's in MUSIC VOLUME control, user can press  or  to decrease or increase the music volume;
 - 2 press again the M-Mic Button, if the LED light turns green, it's in MICROPHONE VOLUME control, user can press  or  to decrease or increase the mic volume



3. Extra Bass: press to have stronger Bass output; press again to normal music output.
4. LED Effect: press to shift the LED light effects in the front. (Press again can turn off)
5. Select Previous Song/Decrease the Volume.
6. Play/Pause.
7. Select Next Song/Increase the Volume.
8. Power Switch: press about 3 seconds to turn on/off the speaker.
9. Battery Level Indicator
10. DC Input 5V (Power Charge by AC/DC Adaptor or By Type-C Cable)
11. USB
12. TF Card
13. MIC Input
14. AUX Input

Remote Functions

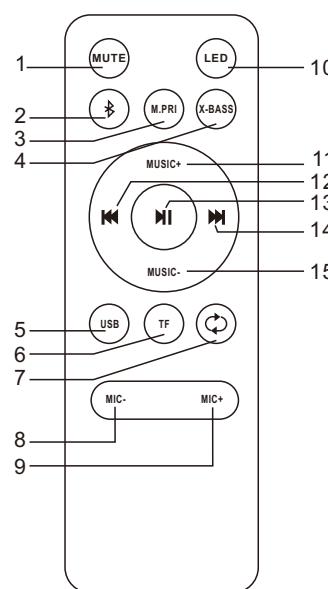

- 1.MUTE
- 2.BLUETOOTH Mode: press this button to activate the BLUETOOTH mode, search and connect the device "AURORA 204" on your mobile phone.
- 3.Microphone Priority
- 4.Extra Bass Output
- 5.USB
- 6.TF Card
- 7.Repeat
- 8.Microphone Volume Decrease key
- 9.Microphone Volume Increase key
- 10.LED Effect: press to shift the LED light effects in the front.
- 11.Music Volume Increase key
- 12.Previous key
- 13.Play/Pause
- 14.Next key
- 15.Music Volume Decrease key

Instructions

- 1.Insert USB/TF card to read Mp3 track
- 2.When using the KARAOKE, please plug your wired microphone cable.
- 3.For full recharging, approximately 8 hours will be needed
- 4.Please recharge the unit only under voltage indicated in this manual or marked on the device.
- 5.To protect the battery, please full recharge every time after using up
- 6.To save battery power, please put the power switch at "OFF" position when finish operation.

SAFETY MEASURES

To ensure proper use of the product , please take the time to read this instruction manual carefully before use. please observe all the instructions about safe operation and please keep this instruction manual in a safe place for future reference .

1. Protection of power supply wire: Do not place the cable in the path of foot traffic. Don't place heavy furniture on the cable , Never pull the cable to unplug the unit from the socket, always disconnect the unit from the main power supply by pulling the plug out of the socket.
2. Ventilation: In order to prevent this unit from overheating, place it in a well ventilated area on a stable surface. Never place it on a bed , sofa or carpet where the ventilation will be restricted .
3. Dismantling: In order to avoid the risk of electric shock, do not dismantle the unit, Should your unit be faulty or broken , please refer servicing to an authorized service center .
4. Strange Odour: Should your unit emit any strange odour , immediately unplug it from the wall socket , do not use the unit again until you have had it repaired by a qualified service center .
5. Do not expose the unit to heavy rain or in Swimming pool , But Outdoor drizzling can be use.

Questions and Answers About YMG bluetooth party speaker with Bass

Q:Why The party speakers shuts down automatically?

A:The Party Speaker's battery is low, please charge it in time, it is recommended to use it after six hours of charging.

Q:The big bluetooth speaker cannot be charged?

A:Please use the charging cable delivered by this Party box speaker to make sure that the voltage of the connected USB interface is normal.

Q:There is no sound from the party box speaker?

A:Make sure in the TF/USB/wireless connection/AUX mode, in the playback state, and adjust the volume to an appropriate level.

Q:There is no sound in the product AUX?

A:1. Please use this machine to distribute the audio cable, and select the correct audio output interface.
2. Insert a TF card or USB disk, it will not automatically enter the AUX mode, It need you press the [M] key to switch AUX mode.

3. Check Whether the volume of the external audio source device(Example CD Player/smartphone) is turned on and the volume to be Max.

Q:The party speakers can't connect automatically?

A:1. Only the paired devices will automatically connect.

2. If the wireless connection device is turned on after 10 seconds after the speaker enters the wireless connection, the speaker will not automatically connect.

Q:There is no sound from the wireless portable speaker?

A:1. Please confirm whether the wireless connection has been successfully connected.

2. Whether the volume of the connected device or connected device is turned on & Adjust to be Normal level.

After-Sales Service

We promise that if the product has quality problems , it will be returned for one month.

Guaranteed for 1 year Since your purchase day .

And free consultation for life, welcome your consultation at YMG Store At AMAZON.COM If you are satisfied with our products , please comments on our service and share to your more friends or classmate. Thank you for your participation and recognition. This will be our greatest motivation. If the product or service you are not satisfied, please contact us in first time , so that we can know the specific problem you encounter and provide you with a better solution.

We are happy to help you answer any questions of the product. Welcome to Email to us for consultation. of course , you can also come to our official website to browse, we will provide you friendly support .

Enterprise Mailbox:Liyankang1997@gmail.com

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference.
- (2)This device must accept any interference received, including interference that may cause undesired operation.