

Bluetooth Remote Controller

Operation Manual Android

A : Music Mode•Video Mode

- 1 : @+A is for Music Mode. The volume is controlled with the rocker in standard mode. A for pause or play; C/D for volume
- 2 : Some brands of mobile phones support video playing in music mode, A for play, pause and touch & hold for fast forward.

B : Game Mode (Landscape)

- 1 : @+B is for landscape gamepad game mode. The direction is controlled by the rocker, D for shooting, A for taking off. It depends on keyboard set of different brands of mobile phone.

C : VR Mode Self-timer Mode, Video Mode


- 1 : @+C switches to VR Mode. When playing game, the direction is controlled by rocker, the front side key for shooting and taking off.
- 2 : @+C switches to Self-timer Mode. Some brands of mobile phone possibly do not support self-timer. Mouse mode self-timer is advised to be switched by @+D.
- 3 : @+C switches to Video Mode when the rocker control fast-forward-fast-backward. Some brands of mobile phone possibly do not support volume control.

D : Mouse Mode, Self-timer Mode

- 1 : @+D switches to Mouse Mode when the rocker controls mouse, C/D for volume and A/B for confirm and quit.
2. When some brands of mobile phone are not to be used under the self-timer mode, the mouse mode is suggested.

E.Simple operation instruction please open battery cover

Look up bottom of battery cover by Phone Torch to see simple application operation.

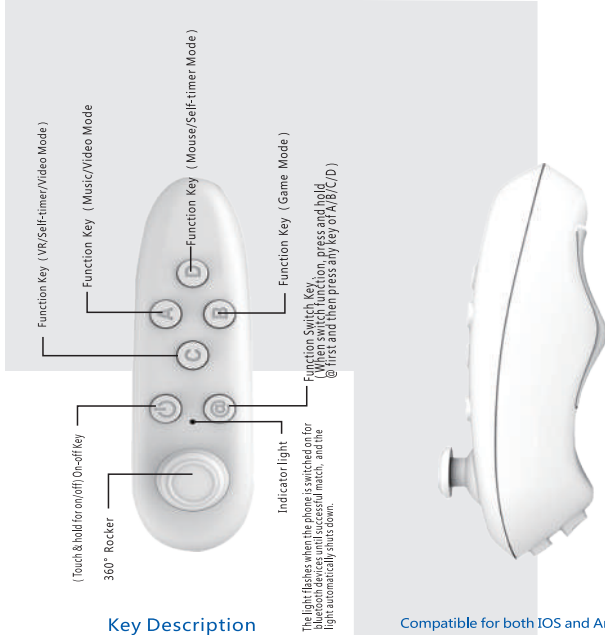

Key Description

Compatible for both IOS and Android

Technical Parameters

Product model: VR
Size: 118*33*42MM
Wireless Protocol: Bluetooth 4.0 compliant
Support System : Android/IOS/PC
Support Game : Android/PC (GAMEPAD)
NES/GB/SMD SX/GB C/N64/MAME; Android APK
Game Apple/IOS: Icade Game
CPU: ARM968E-S Coer
Battery: two 7th batteries of R03 1.5 v
Working Current: 0.5-8Ma Standby Current 0.5-1mA
Shutdown Current : 0
Continuous Game Time: about 40-120 hours

Apple IOS System

ISO game mode, after switching to a game mode, the mobile phones must be switched to the

- @+A Music mode/Video mode
- @+B Landscape Game Mode
- @+C vertical Game Mode

Pair the controller with your phone by inserting 2 AAA batteries. Switch the controller to either IOS or Android then turning on the controller by holding the on/off button for 5 seconds until you see a blue light. Search for the controller on your phones bluetooth. Once paired you will be able to enjoy games and other apps that use a bluetooth controller. Hold the on/off button again for 5 seconds to turn the controller off.



Andrews and ios system automatically switches

蓝牙遥控使用手册

一键开启智能生活

操作手册 Android/安卓系统

一：A:音乐模式 视频模式

- 1：@+A 为音乐模式，标准为摇杆控制切换与音量 A 键为暂停、播放；C/D 音量。
- 2：有些品牌手机也可以在音乐模式下播放视频，A 键播放、暂停、长按快进。

二：B:游戏模式（ 横向 ）

- 1：@+B 为 横向手柄游戏模式，标准为摇杆控制方向，D 键开枪，A 键起跳。具体按各品牌 手机对键盘的设定来取决。

三：C：VR 模式、自拍模式、视频模式

- 1：@+C 为 VR 模式时，在玩游戏时，摇杆控制方向，前面侧键为开枪与起跳。
- 2：@+C 为自拍模式时，有些品牌手机可能不支持自拍，建议转换为鼠标模式自拍（@+D）。3：@+C 为视频模式时，摇杆可以快进快退，C 键暂停。有些品牌手机可能控制不了音量。

四：D:鼠标模式、

自拍模式

- 1：@+D 为鼠标模式时，摇杆控制鼠标，C、D 音量，A、B 确认与退出。
- 2：有些品牌手机不可以在自拍模式下使用时，建议用鼠标模式来自拍。

操作手册 IOS系统

一、音乐模式:@+A

支持默认播放器、酷狗音乐、酷我音乐、QQ音乐等常用音乐播放器，@键：暂停/播放，A键静音，C/B键音量加/减，D键home键，摇杆切换歌曲。

二、视频模式:@+B


暴风魔镜：蓝牙连接手机后，进入暴风魔镜，点击中间眼镜图标进入设置界面，在“其他遥控器”中打开MOCUTE，返回后手机横过来放入魔镜，即可开始操作。

@+B进入视频模式，B键：播放/暂停，摇杆：控制方向上下左右，控制快进快退，音量加减，A键：返回上一步。

3D播播：B/@键：播放/暂停，遥控：快退快进亮度，D/@+C键：返回上一步，音量加减速操作：按@+A，视频暂停，A为静音，C为音量加，B为音量减，@为重新播放。

三、游戏模式

进入游戏前，需切换为英文输入法，即可使用，@+B为手机横向游戏模式，@+C为手机竖向游戏模式。

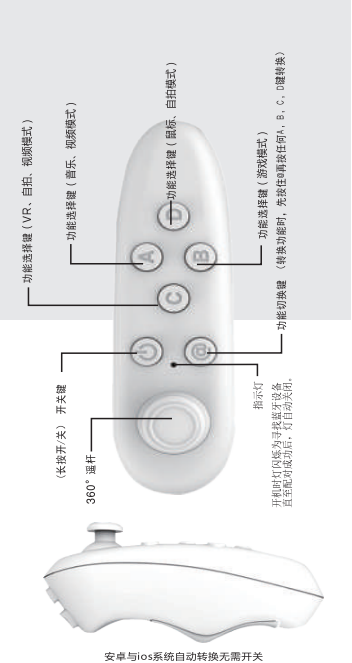

安卓与ios系统自动转换无需开关

按键说明图

技术参数

产品型号：VR
产品尺寸：118*33*42MM
无线协议：Bluetooth 4.0 compliant
支持系统：Android 安卓/IOS 苹果/PC
支持游戏：安卓/PC (GAMEPAD):NES/GB/SMD
PSX/GBC/N64/MAME;AndroidAPK 游戏
苹果/IOS:Icade 游戏
CPU: ARM968E-S Coer
电池： R03 7号 1.5 伏电池 2 节
工作电流： 0.5-8mA 待机电流：0.5-1mA
关机电流：0
连续游戏时间：约 40-120 小时

常见问题：

1. 出现摇杆不灵敏，可能是电池电量不足请更换电池
2. 出现连接时无法与蓝牙配对，请重新打开手机再连接
3. 使用 WIFI 时会影响蓝牙连接。
4. 有些品牌手机的键盘设置可能存在非标准 Android 系统键盘，本蓝牙手柄为标准 Android 系统开发在这种情况下可能存在连接后使用不是很灵活或性能不匹配。请选择@键+ A、B、C、D 任何一键测试匹配。
5. 如果出现死机，请拔掉电池重新装上。
6. 适合游戏如：愤怒的机器人、miku 初音、PC 版永航战士等等。



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.