


## PRINT CAMERA

## Instant Print Camera

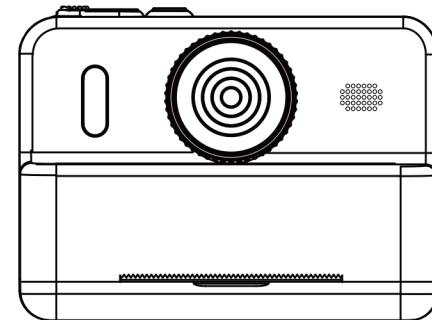

Please read the instructions carefully before using this product and keep it properly for future reference.

## product information

product name: Instant Print camera

PRODUCT FUNCTION: photo/video/printing

Maximum SD Card Memory: 32GB Input: 5V  $\approx$  2A

MAIN MATERIALS: ABS SCREEN SIZE: 2.8-INCH

Charging time: 1-3 hours

## Features

- 1. Built-in a variety of lens effects and film effects, can achieve a variety of different image performance.
- 2. Fully Automatic photo shooting mode, automatic fixed focusing, coloring, and dimming, no need to adjust the parameters for easy operation.
- 3. You can take a picture with the LCD display and save the photo in the Microsd card.
- 4. You can choose to print the photo data.
- 5. Support multi-language settings.

- Please check whether the connection part is firm regularly or irregularly during use.
- This product picture may be slightly different from the actual product, please refer to the actual product.
- After receiving the product, please use the product after full charging. (Close the camera before charging)

## Product List



camera



Lanyard



USB cable

## Icon description



Print Density



Picture resolution



Video resolution



Sound regulation



Flash



Memory Format



language settings



Time watermark




Date settings



version number

## Component Description


**Memory card installation**  
Remarks: Microsd card needs to be purchased by yourself

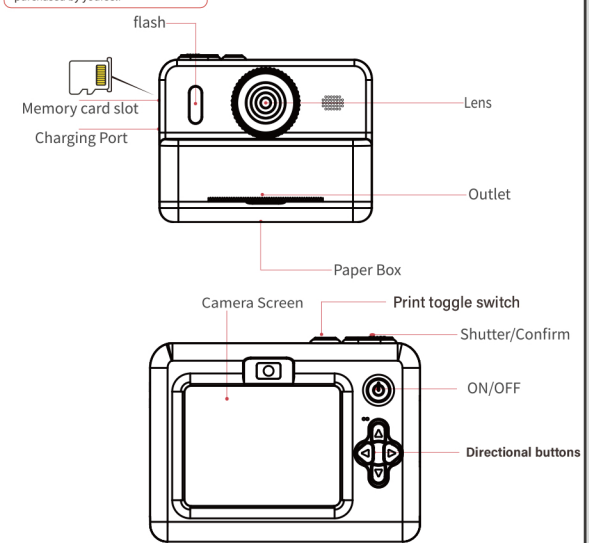

## Install/remove the photo paper

1. Find the photo paper compartment at the bottom of the camera
2. Use your fingers to slide the hatch **downward**
3. Place the photo paper making sure it is smooth and facing upwards
4. Close the door and slide it down

## Reset

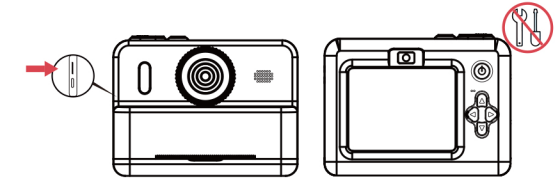

Do not disassemble the camera if there is any abnormality.

## Charge and transfer files to computer

1. Can use 5V charger USB port for charging, turn off the camera before charging.
2. Connect the computer USB interface to read the photos and videos.

\*If the camera is turned on and no operation for a period of time, the camera will turn off automatically. If the camera turns off automatically, turn it on again to use it.

## warn:

1. Built-in 7.4V lithium battery, non-removable and replaceable.
2. Regularly check whether the wires, plugs, cases and other components of the charger are damaged, It should be stopped when it is damaged until it is repaired well.
3. The charger is not a toy. Toys can only use recommended chargers (5V  $\approx$  2A).
4. The charger is used by adults or adults.
5. This toy cannot be cleaned with liquid.
6. Discarding this toy may affect the environment. Please recycle it properly
7. This manual contains important information, please keep it for future use.

THANK YOU

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction