 


尺寸:60\*70


材质:105g铜版纸

## K9 WIRELESS EARBUDS

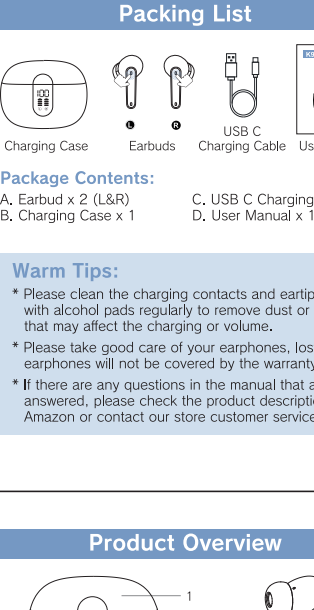
 
### USER MANUAL

### Packing List

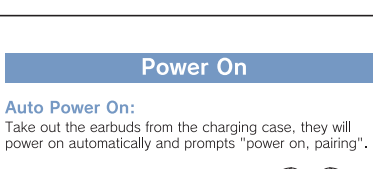


**Package Contents:**  
A, Earbud x 2 (L&R)  
B, Charging Case x 1  
C, USB C Charging Cable x 1  
D, User Manual x 1

### Warm Tips:

 - \* Please clean the charging contacts and eartip mesh with alcohol pads regularly to remove dust or earwax that may affect the charging or volume.
- \* Please take good care of your earphones, lost earphones will not be covered by the warranty.
- \* If there are any questions in the manual that are not answered, please check the product description on Amazon or contact our store customer service team.


### Product Overview

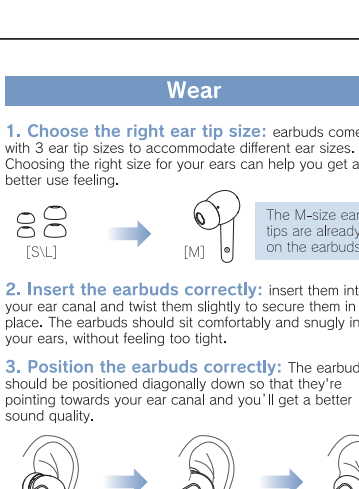


1. Charging Case
2. Charging Case Digital Display
3. Earphone Digital Display
4. Charging Terminal
5. Earphone Indicator Light
6. Touch Button
7. Microphone
8. L/R Indicator
9. Type-C Charging Port

### Power On

 **Auto Power On:**  
Take out the earbuds from the charging case, they will power on automatically and prompts "power on, pairing".

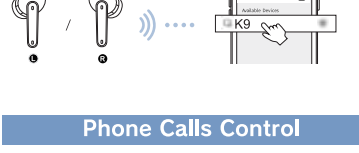


 **Manual Power On:**  
When the device is not connected, press the left or right earbud 3 seconds. The green indicator blinks and prompts "power on, pairing".

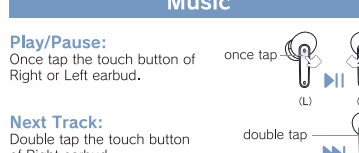


### Power Off

 **Auto Power Off:**  
Put the earbuds into the charging case, they will power off automatically.

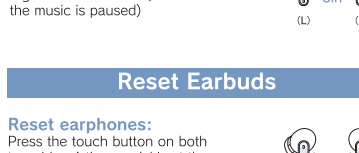


 **Manual Power Off:**  
When the device is not connected, press the left or right earbud 5 seconds. The green indicator blinks, then the indicator goes off and prompts "power off".

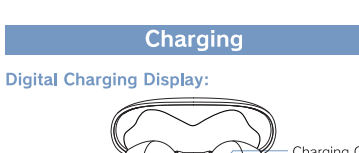


### Wear

 **1. Choose the right ear tip size:** earbuds come with 3 ear tip sizes to accommodate different ear sizes. Choosing the right size for your ears can help you get a better use feeling.

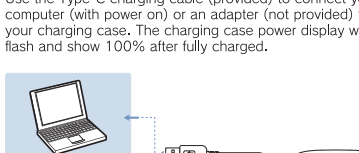

**2. Insert the earbuds correctly:** insert them into your ear canal and twist them slightly to secure them in place. The earbuds should sit comfortably and snugly in your ears, without feeling too tight.

 
**3. Position the earbuds correctly:** The earbuds should be positioned diagonally down so that they're pointing towards your ear canal and you'll get a better sound quality.

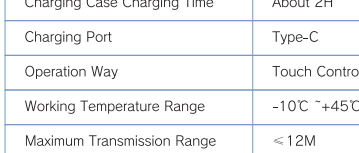

**4. Take breaks:** Wearing earbuds for an extended period of time can be uncomfortable and potentially harmful to your ears. Make sure to take breaks every few hours to give your ears a rest.


### Pairing

 **Stereo Mode:**  
1. Open the charging case and take the earbuds out of the case, the two earbuds will automatically turn on and connect to each other, the master earbud's green indicator will flash continuously to wait to be paired.  
2. Turn on your phone's Bluetooth, search for "K9" and select it. The earbuds connect with your phone successfully and prompts "connected".

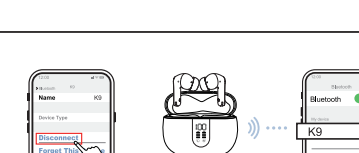


### Single Earbud Mode:

 1. Take an earbud (left/right) out of the charging case.
2. Turn on your phone's Bluetooth and select "K9". The earbud connect with your phone successfully and prompts "connected".

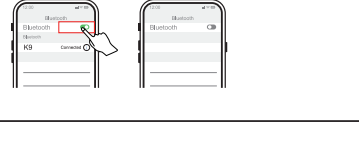


### Phone Calls Control

 **Answer/ End Calls:**  
Double tap the touch button of Right or Left earbud.

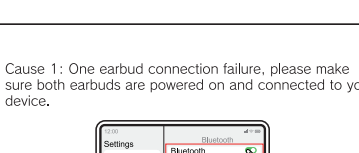


 **Reject Calls:**  
Long press 2s the touch button of Right or Left earbud.

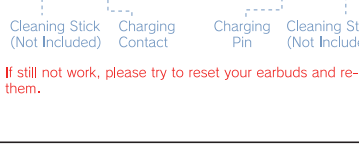


### Music

 
**Play/Pause:**  
Once tap the touch button of Right or Left earbud.

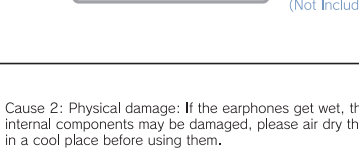

 
**Next Track:**  
Double tap the touch button of Right earbud.

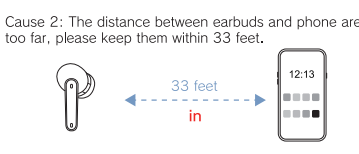

 
**Previous Track:**  
Double tap the touch button of Left earbud.

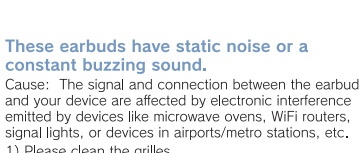

 **Volume Up:**  
Long press the touch button of Right earbud.

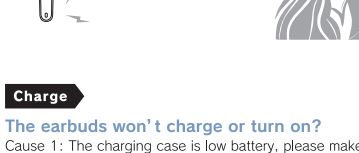


 **Volume Down:**  
Long press the touch button of Left earbud.

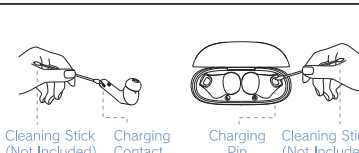


### Active Siri

 **Active Siri:**  
Triple tap the touch button of Right or Left earbud. (when the music is paused)

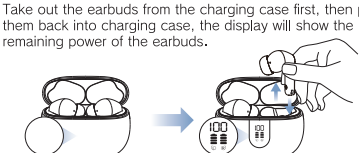


### Reset Earbuds

 **Reset earphones:**  
Press the touch button on both two sides 4 times quickly at the same time, then delete pairing record on the phone, put earbuds back to charging case, the earphones will turn off. Wait 20S to reconnect again.

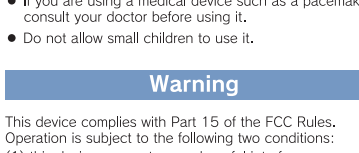


### Charging

 **Digital Charging Display:**  
Left Earbud Power Display  
Right Earbud Power Display

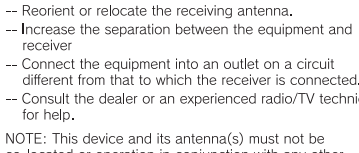


 **Charging Earbuds:**  
Put the earbuds into the charging case and close the case. The earbuds' light will remain green for 15s then go out.

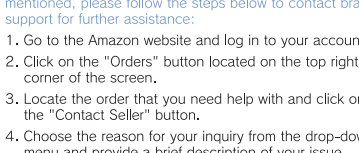

**Charging the Charging Case:**  
When the battery level of the charging case falls below 1%, the power display will flash and show 0%.

 Use the Type-C charging cable (provided) to connect your computer (with power on) or an adapter (not provided) to your charging case. The charging case power display will flash and show 100% after fully charged.

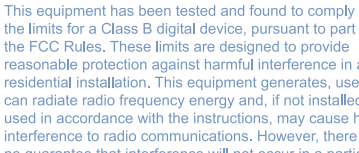

**NOTE:**  
\* Please separate the charging cable and earphone when fully charged.  
\* 5V adapter is the best choice for charging to avoid battery damage. Improper current and voltage may damage earbuds and charging case and thus warranty is not valid.

### Specification

Model	K9
Version	V5.3
Charging Case Battery Capacity	500mAh
Charging Case Charging Time	About 2H
Charging Port	Type-C
Operation Way	Touch-C
Working Temperature Range	-10°C ~+45°C
Maximum Transmission Range	<12M

### Q&A

**Bluetooth**  
**How to connect with my Phone?**



Take earbuds out of the charging case. Activate the Bluetooth setting on your phone, click "K9" to connect.

**Occur connection-related issues?**  
Cause: The Bluetooth connection is unstable, please reconnect it.



Forget Bluetooth record on your phone. Wait for 10s to reconnect.



**Earbuds can pair with phone, but can't pair with Pad.**  
Cause: These earbuds connected with previous device automatically, please forget the previous device's Bluetooth record then pair with new device.



**Previous device**



**New device**



**I bought two pairs of K9 earbuds, when I use them at the same time, they would get messy or not work.**  
Cause: There's interference between the two pairs of earbuds.

Step 1: Please connect one pair of them to your device first, and then wait a few minutes before you connect another pair to another device.

If interference has occurred, please reset both pairs of earbuds, and try step 1.

**Sound**  
**There is no sound from one earbud? The volume from one earbud is lower than the other side?**

Cause 1: One earbud connection failure, please make sure both earbuds are powered on and connected to your device.



Cause 2: The grilles or the ear tips are dirty, please use alcohol to gently clean the metal mesh filter under the ear tips.



**If still not work, please try to reset your earbuds and re-pair them.**

**The Earbuds' sound is very low.**  
Cause: Android phones don't synchronize audio. Please turn on "sync volume with phone" in your phone.



**The audio quality of Bluetooth earphones may deteriorate over time with use.**  
Cause 1: Low battery: Audio quality may be degraded when the earphones' battery are low, please charge them.



Cause 2: Physical damage: If the earphones get wet, the internal components may be damaged, please air dry them in a cool place before using them.



**Sound Cut in/out or disconnected.**  
Cause 1: There is electromagnetic interference around earbuds, please keep away from them.



Cause 2: The distance between earbuds and phone are too far, please keep them within 33 feet.



Cause 3: The Earbuds in low battery or high temperature, please charge it.



**After eliminating the above causes, please re-pair these earbuds with phone.**

**These earbuds have static noise or a constant buzzing sound.**  
Cause: The signal and connection between the earbuds and your device are affected by electronic interference emitted by devices like microwave ovens, WiFi routers, signal lights, or devices in airports/metro stations, etc.

1) Please clean the grilles.  
2) Try to use the earbuds in different locations and see whether the static noise is less or gone.  
3) Keep a distance from electromagnetic interference sources.  
4) Turn off the devices nearby that may cause interference.



**The earbuds won't charge or turn on?**  
Cause 1: The charging case is low battery, please make sure the charging case is not out of battery and use the Type-C cable to charge it for more than 3 hours.



Cause 2: The pin is dirty, please check the pin connection, they may be dirty or broken. Clean the pins in the case and the dots in the earbuds with a cotton swab, better dipped with alcohol.



Cause3: Make sure the earbuds are properly plugged in.



**The charging case can't be charged?**  
Cause1: The type-C cable is broke, please use different type-C charging cables to charge.



Cause 2: Check if the charging interface is loose.



Cause 3: Try using a different power source.

**The LED display doesn't show the remain power?**  
Take out the earbuds from the charging case first, then put them back into charging case, the display will show the remaining power of the earbuds.



### Safety Instruction

Pay close attention to the surrounding traffic when using it on foot. It may cause traffic accidents.

● Reduce the volume to a minimum before use. Sudden loud noises can damage your hearing.

● To protect your ears, do not turn the volume up too high.

● Stop using this product if it falls into flammable or liquid (such as water). Continued use may result in fire, malfunction or electric shock.

● Opening the inside may result in malfunction or electric shock.

● Do not touch the inside. Also, we cannot guarantee performance if the interior has been manually modified.

● Do not charge with wet hands or touch the charging port. This may result in electric shock.

● If you feel uncomfortable while using this product, stop using it immediately.

● If you are using a medical device such as a pacemaker, consult your doctor before using it.

● Do not allow small children to use it.

### Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

### Asking for more help

If none of the above solutions work or if you receive your package with missing parts or other problems not mentioned, please follow the steps below to contact brand support for further assistance:

1. Go to the Amazon website and log in to your account.

2. Click on the "Orders" button located on the top right corner of the "Orders".

3. Locate the order that you need help with and click on the "Contact Seller" button.

4. Choose the reason for your inquiry from the drop-down menu and provide a brief description of your issue.

5. Click on the "Send" button to submit your message to us.

6. Alternatively, you can also go to the seller's storefront on Amazon and click on the "Ask a Question" button located on the top right corner of the screen. This will allow you to send a message directly to us.

\* It is recommended to be as clear and concise as possible when describing your problem to us, as this will help us understand your problem and provide you with the best solution.

### FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used as portable exposure without any restriction.

**FCC ID:2BKR3-K9**