

※65" capacitive touch all-in-one machine introduction



This capacitive all-in-one machine uses 3mm fully tempered glass, capacitive G+G touch, LG/BOE original screen, bright colors, widely used in customized scenes, embedded scenes, wall-mounted installation, touch coffee table, customized conference desktop etc.

Precautions for safe use

- 1) In order to prevent fire, don't put any serious of Candles and flames on this machine top or around
- 2) Don't place vase or any other containers which can be fill in liquid on the top. Noticing that don't let the (Solid powder, granules, liquid) fall into or flow into the machine, in case cause fire or electric shock
- 3) Don't inset the external objects to the machine inside. If you inset the objects to ventilation holes, it will cause fire or electric shock. Be more carefully if there have kids in the surrounding
- 4) Don't use the machine in the wet places and near the water. Such as bathtub, wash basin, kitchen sink, Washtub, swimming pool, wet basement
- 5) Don't set this machine near to heat source, such as radiator, heat storage, stove or other heating device.
- 6) The machine should away from electromagnetic interference equipment, otherwise it will cause unnormally.
- 7) The machine should away from corrosive chemical gases and drugs: don't use the highly volatile solvents and detergents to clean the exterior and interior, such as gasoline, thinner, acetone etc all are prohibited
- 8) The ventilation holes and other holes places on the machine shell, for heat dissipation and ventilation, don't block any ventilation holes on the machine shell
- 9) If the weather is thunder and lightning, or you don't need to use it for a long time. Please pull out the power plug. If the power plug always insert in the socket, at least will cause the power consumption
- 10) Unplug or reconnect the any parts of machine(except the hot Swap) you must need to cut off the power supply.
- 11) Unstable installation way will make the machine fall down, maybe cause serious personal injury, products damage. Please use the mounting bracket recommended by our company or sold together with this product for installation.
- 12) The machine screen materials is made by glass. Hence if the machine is dropped or hit it will be broken. By chance the screen is broken, please take care, don't get cut by broken glass
- 13) The manufacturing process of LCD screen is quite demanding and complex. Due to a lot of pixels, there

will have a few invalid pixels in the screen accidentally, it will seems like fixed blue, green, red light pots.

Please note it's belong to products specs, it's not faults

14) Please don't try to repair the machine by yourself. If you open the machine cover it will make you in exposure high voltage and other dangerous situations. If there have some situations **as below**, please delegation the servicing to qualified personnel.


The power cord or plug is damaged:

The machine is exposed to rain:

The machine is fallen or damage:

Objects have fall into the machine or liquid has inflowed the machine, the machine can't operate normally, or the performance is changed apparently


※Size pictures

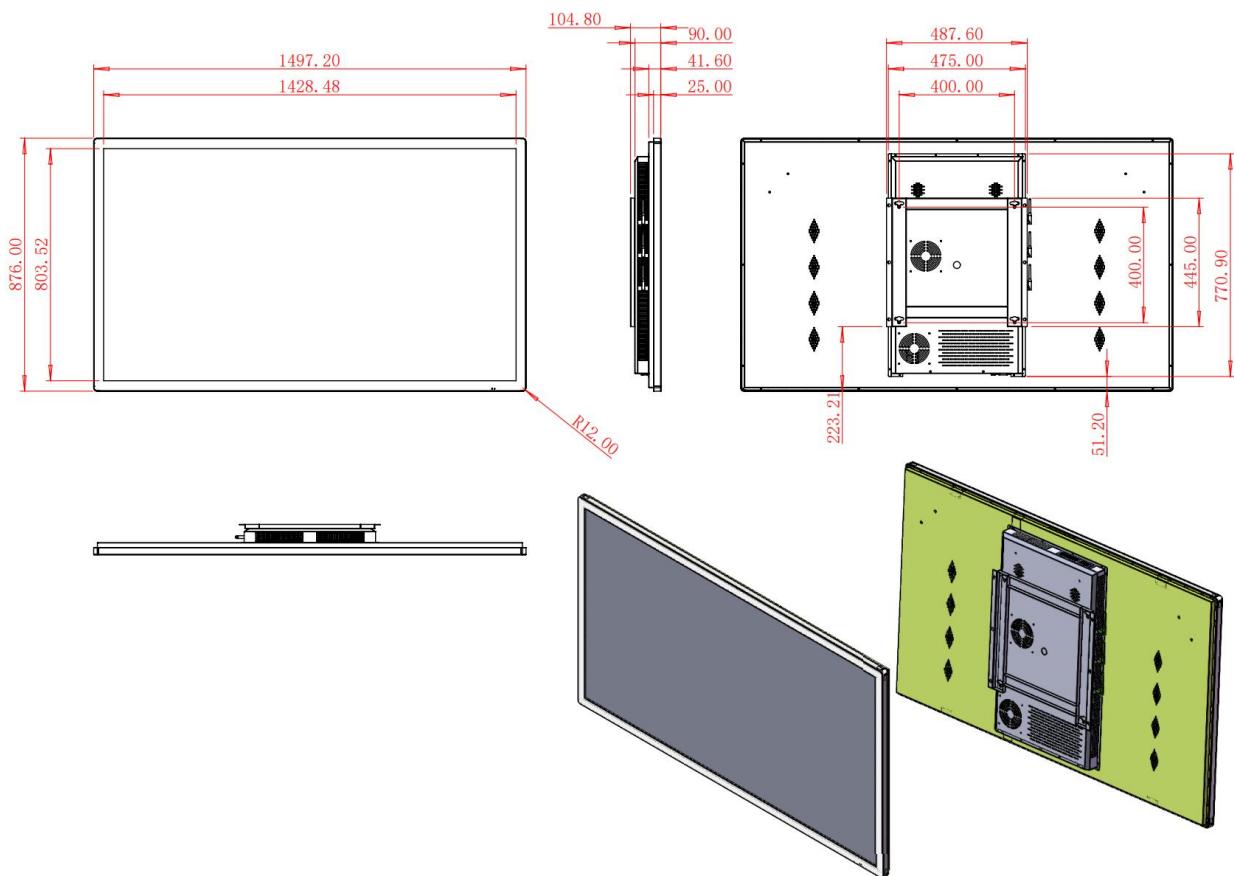

※Mainboard pictures

Statement:

The picture is selected from a batch of complete boards produced by our company. Due to the continuous maintenance of the product and the different specs selected by customers, the actual shipment may not be consistent with the pictures in this specs

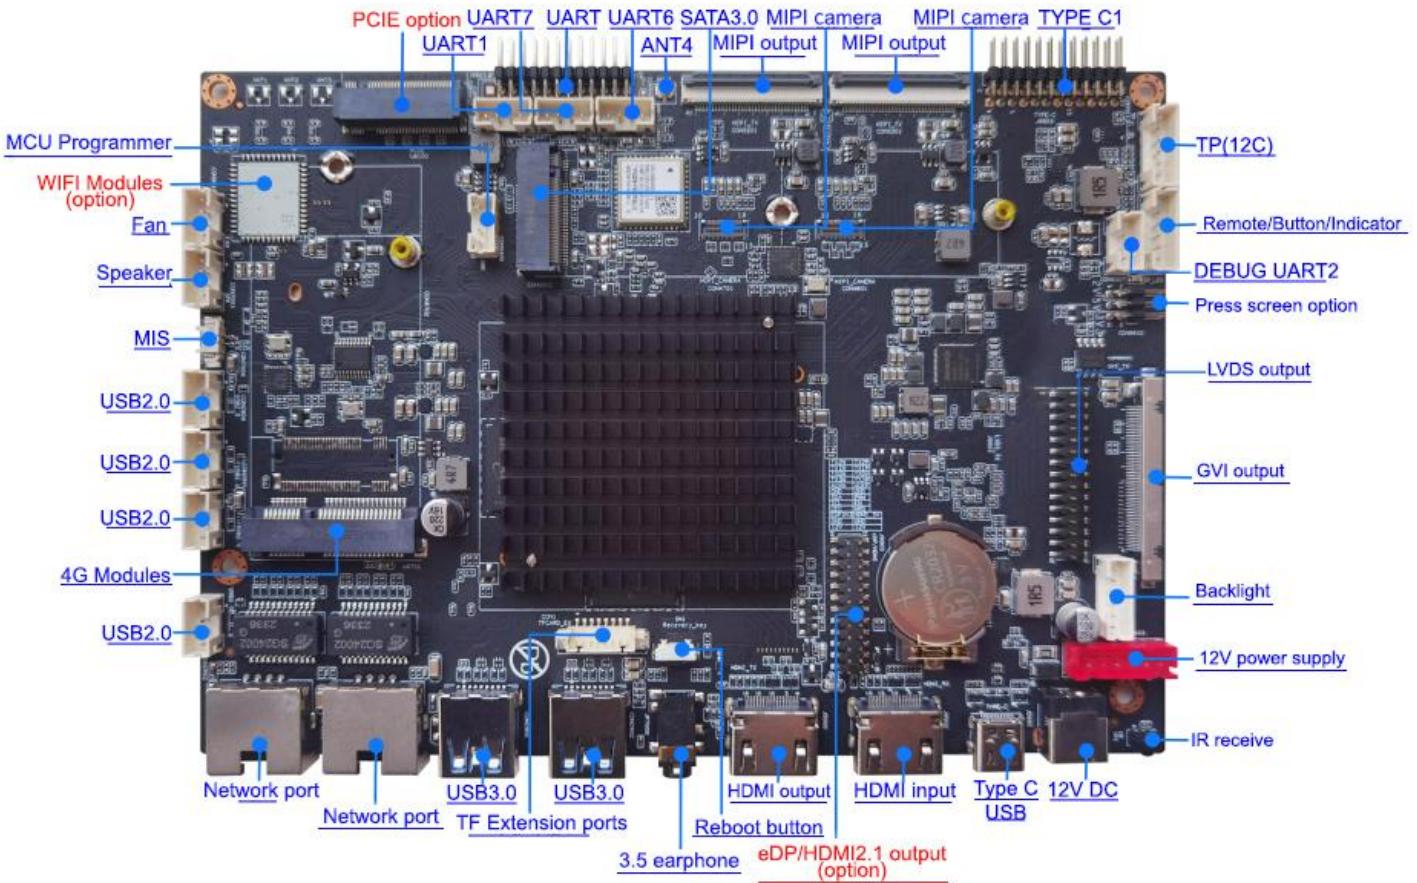

※LCD display specs

Screen brand	LG/BOE	Screen size	65 inch
Exterior size	1497.2mm*876mm*104.8mm	Display size	1428mm*803.52mm
Resolution	3840*2160	Lifetime	≥ 50000 hours
Power input	AC110~240V 50 /60 HZ	Maximum power consumption	≤ 95W
Standby power	<0.5W	Maximum brightness	300cd
Contrast ratio	1200:1	Viewing angle	178/178 (Min.)(CR≥10)
Screen ratio	16:9	Best angle	Full view
Display color	16.7M	Working temperature	0°C~50°C
Appearance Material	Frame aluminum profile drawbench+ sheet metal+ customization		

※Capacitive screen specs

Touch type	10-point capacitive touch	Touch screen sensing method	finger
Calibration	Calibration-free	Touch frequency	Same location more than 60 million times
Response time	Click: 8ms Continuous: 3ms		

※Mainboard Specs

OS	Android 12	CPU	RK3588 , Quad-core Cortex-A76 and quad-core Cortex-A55 NEON
Frequency	Maximum frequency 2.4GHz	Decoding resolution	4K
Running memory	8GB	Store memory	128GB
Network	RJ45/WiFi/Bluetooth	Interfaces	RJ45*1/USB3.0*2/ Audio 3.5*1/HDMI OUT*1/HDMI in*1/Tyoe-c*1/DC12V*1
Image Format	JPEG、PNG etc	Video format	(rm、rmvb、avi、mpeg、mpg、dat、mov、ASF、mtv、mkv、wmv、3gp、amv、dmv、divx etc)

※Cooling system

Cooling system	fans
Appearance size	120*120*25mm
Operating Voltage	DC 12V
Current Limit	0.21A
Power consumption	2.5W
Maximum speed	1500RPM
Noise	26DB-a
Blowing rate	45CFM

Proper temperature	-10°C~60°C
Cooling fan effect drawing	

※Remote Function way

Connection way: Pairing method: Press and hold the 5 and 6 buttons at the same time to enter the connection, enter the Bluetooth setting interface of the advertising machine, search for the Bluetooth remote control device, click connection, and it will show connected.

	<table border="1"> <tr><td>Press 1: Power button</td></tr> <tr><td>Press 2: Menu button</td></tr> <tr><td>Press 3: Setting button</td></tr> <tr><td>Press 4,5,6,7: Up, down, left, and right movement buttons</td></tr> <tr><td>Press 8: OK button</td></tr> <tr><td>Press 9: Volume down button</td></tr> <tr><td>Press 10: Volume up button</td></tr> <tr><td>Press 11: Home button</td></tr> <tr><td>Press 12: Return button</td></tr> <tr><td>Press 13: None</td></tr> </table>	Press 1: Power button	Press 2: Menu button	Press 3: Setting button	Press 4,5,6,7: Up, down, left, and right movement buttons	Press 8: OK button	Press 9: Volume down button	Press 10: Volume up button	Press 11: Home button	Press 12: Return button	Press 13: None
Press 1: Power button											
Press 2: Menu button											
Press 3: Setting button											
Press 4,5,6,7: Up, down, left, and right movement buttons											
Press 8: OK button											
Press 9: Volume down button											
Press 10: Volume up button											
Press 11: Home button											
Press 12: Return button											
Press 13: None											

※Packing list and warranty terms, daily maintenance

Accessories list	Certificate of conformity*1, warranty card*1, wall mounting plate*1, wifi antenna, AC power cord, wall mounting bracket,
Warranty	One year (except human factors, self-disassembly)
Daily maintenance	Check the fan dust condition of the machine once a month and clean the external dust (determine the inspection time according to the external use environment)

※Troubleshooting (High voltage inside the machine, non-professionals please don't remove the back cover)

No electricity	The machine has no response. Check whether the power is normal and the switch is turned on. Try replacing the power cord or the power strip. If the fault still exists, you need to turn off the power and disassemble the machine to check the internal power supply of the machine.
No Touch	Check if there is any damage on the touch screen surface, turn off the power and then turn it on again. If the fault still exists, you need to turn off the power and disassemble the machine to check if the touch screen cable is properly plugged in, unplug and plug it again,

	and restore it to factory settings.
Display Error	Check if the display screen has any signs of damage, turn off the power and then turn it on again. If the fault still exists, you need to turn off the power and disassemble the machine to check if the display screen cable is properly plugged in, unplug and plug it again, and try to restore the factory settings.
No Internet	Check whether the WiFi switch is turned on and whether the WiFi hotspot can be searched and connected normally. If the fault still exists, try restoring the factory settings.
Bluetooth can't connect	Check whether the Bluetooth switch is turned on and whether the Bluetooth can search the device normally. If the fault still exists, try restoring the factory settings.
Fan Not Working	The machine can be used normally, but the fan doesn't work. Check whether the fan is stuck or the fan cable is loose.
No sound	Check whether the volume is turned up and whether the speaker socket is loose.

※Outer box packaging specs

Packaging Specs	Foam + carton packaging + customized wooden box packaging
Pakaging effect drawing	

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.