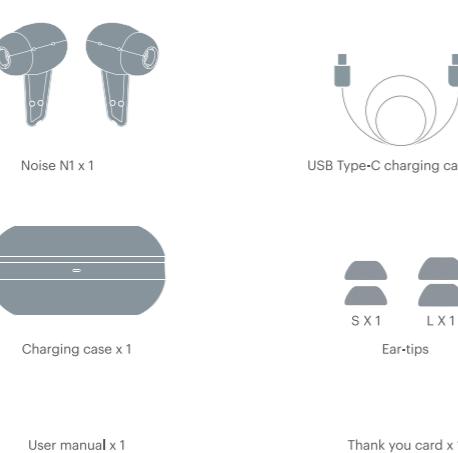


<p><b>TABLE OF CONTENTS</b></p> <ul style="list-style-type: none"> <li>• Package Contents and Features</li> <li>• Specifications</li> <li>• Power and Pairing</li> <li>• Reset and Sizing</li> <li>• Charging</li> <li>• Controls</li> <li>• Warranty</li> <li>• Safety</li> </ul> <p>01 02 03 04 05 06 08 09</p>	<p><b>PACKAGE CONTENTS</b></p>  <p>Noise N1 x 1 USB Type-C charging cable x 1 Charging case x 1 Ear-tips User manual x 1 Thank you card x 1</p> <p>1</p>	<p><b>SPECIFICATIONS</b></p> <ul style="list-style-type: none"> <li>• Earbud weight: 4.2 g each earbud</li> <li>• Speaker driver size: 11 mm</li> <li>• Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP</li> <li>• Bluetooth version: 5.3</li> <li>• Earbud charging time: Up to 30 minutes</li> <li>• Working voltage: 5V</li> <li>• Standby time: Up to 500 hours</li> <li>• Buds Playtime: Up to 7 hours at 70% Volume</li> <li>• Bluetooth range: 15 m</li> <li>• Waterproof rating: IPX5</li> <li>• Working temperature: 0-45°C</li> </ul> <p><b>CHARGING CASE SPECIFICATIONS</b></p> <ul style="list-style-type: none"> <li>• Charging case weight: 28 g</li> <li>• Charging port: Type-C</li> <li>• The number of earbud charges from the case: 5 times</li> <li>• Case charging time: Up to 90 minutes</li> <li>• Total playtime with charging case: Up to 40 hours</li> </ul> <p>2</p>	<p><b>POWER ON</b></p> <p>The earbuds will automatically turn on when you open the charging case.</p> <p><b>POWER OFF</b></p> <p>The earbuds will automatically turn off once placed inside the charging case with the lid closed.</p> <p><b>PAIRING</b></p> <ul style="list-style-type: none"> <li>• Open the charging case.</li> <li>• Turn on the Bluetooth of your device.</li> <li>• Select 'Add Device', and from the list of devices, select 'Noise N1'.</li> <li>• Your Noise N1 is now paired with your device and ready to use.</li> </ul> <p>Note: Your Noise N1 will automatically connect to the last paired device as soon as you take them out of the charging case.</p> <p>3</p>	<p><b>RESET</b></p> <ul style="list-style-type: none"> <li>• Make sure your earbuds are fully charged.</li> <li>• On your paired devices, delete/remove Noise N1 from the list of paired devices in the Bluetooth menu.</li> <li>• Take out the earbuds from the charging case.</li> <li>• Long press both earbuds for 10 seconds.</li> <li>• The LED will blink 3 times and a voice prompt saying "reset" will indicate earbuds have been reset.</li> <li>• Place the earbuds inside the charging case and repeat the pairing process.</li> </ul> <p><b>CHOOSING YOUR EART-TIP SIZE</b></p>  <p>Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear-tips.</p> <p>Follow the images and chart to learn how to wear earbuds in the right manner.</p> <p>4</p>
---	--	--	--	---

<p><b>CHARGING</b></p> <p><b>Earbuds</b> Place both earbuds inside the charging case to charge them.</p> <p><b>Indication (on case)</b> • Solid White LED = Charging </p> <p><b>Case</b> Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.</p> <p><b>Indication (on case)</b> • Flashing red LED = Charging  • Solid red LED = Fully Charged </p> <p>5</p>	<p><b>CONTROLS</b></p> <table border="0"> <tr> <td> Play/Pause Tap either earbud twice</td><td> Answer Call Tap either earbud twice</td></tr> <tr> <td> Previous Song Tap the left earbud thrice</td><td> End Call Tap either earbud twice</td></tr> <tr> <td> Next Song Tap the right earbud thrice</td><td> Reject Call Touch and hold either earbud for 2 seconds</td></tr> <tr> <td> Volume Up Tap the right earbud once</td><td> Voice Assistant Tap right earbud four times</td></tr> <tr> <td> Volume Down Tap the left earbud once</td><td> Gaming Mode Touch and hold either earbud for 2 seconds.</td></tr> </table> <p>6</p>	 Play/Pause Tap either earbud twice	 Answer Call Tap either earbud twice	 Previous Song Tap the left earbud thrice	 End Call Tap either earbud twice	 Next Song Tap the right earbud thrice	 Reject Call Touch and hold either earbud for 2 seconds	 Volume Up Tap the right earbud once	 Voice Assistant Tap right earbud four times	 Volume Down Tap the left earbud once	 Gaming Mode Touch and hold either earbud for 2 seconds.	<p><b>WARRANTY</b></p> <p>The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.</p> <p><b>Things that are not covered in the warranty are listed below:</b></p> <ul style="list-style-type: none"> <li>• Unauthorized tampering, modifications or repairs of the product.</li> <li>• Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.</li> </ul> <p>7</p>	<p><b>REGISTER YOUR WARRANTY</b></p> <p><a href="http://www.gonoise.com/pages/warranty-registration">www.gonoise.com/pages/warranty-registration</a></p> <p> SUPPORT AND SERVICE  1 YEAR LIMITED WARRANTY</p> <p> SCAN ME</p> <p><b>CUSTOMER QUERY</b></p> <p>For any assistance, please reach out to us at <a href="mailto:support.gonoise.in">support.gonoise.in</a></p> <p>For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on <a href="http://www.gonoise.com">www.gonoise.com</a>.</p> <p>8</p>	<p><b>SAFETY FOR YOU AND YOUR NOISE N1</b></p> <p>Follow these tips to get the best out of your new Noise N1:</p> <table border="0"> <tr> <td> Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.</td><td> Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.</td></tr> <tr> <td> Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.</td><td> Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.</td></tr> <tr> <td> Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.</td><td> Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.</td></tr> <tr> <td> Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.</td><td> Never listen to music at a high volume or you may permanently damage your hearing.</td></tr> <tr> <td> Do not throw the earbuds in a fire to dispose them. The internal battery may explode.</td><td> Pay attention to your surroundings and never wear any earbuds while riding, driving or walking in traffic.</td></tr> </table> <p>Noise Buds N1</p> <p>9</p>	 Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.	 Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.	 Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.	 Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.	 Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.	 Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.	 Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.	 Never listen to music at a high volume or you may permanently damage your hearing.	 Do not throw the earbuds in a fire to dispose them. The internal battery may explode.	 Pay attention to your surroundings and never wear any earbuds while riding, driving or walking in traffic.
 Play/Pause Tap either earbud twice	 Answer Call Tap either earbud twice																							
 Previous Song Tap the left earbud thrice	 End Call Tap either earbud twice																							
 Next Song Tap the right earbud thrice	 Reject Call Touch and hold either earbud for 2 seconds																							
 Volume Up Tap the right earbud once	 Voice Assistant Tap right earbud four times																							
 Volume Down Tap the left earbud once	 Gaming Mode Touch and hold either earbud for 2 seconds.																							
 Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.	 Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.																							
 Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.	 Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.																							
 Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.	 Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.																							
 Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.	 Never listen to music at a high volume or you may permanently damage your hearing.																							
 Do not throw the earbuds in a fire to dispose them. The internal battery may explode.	 Pay attention to your surroundings and never wear any earbuds while riding, driving or walking in traffic.																							

Please refer to this manual before using the product

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.