

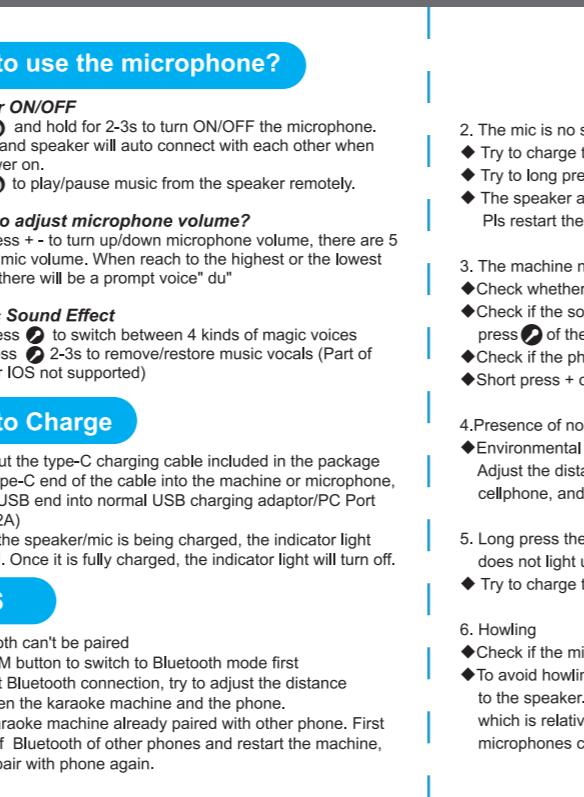


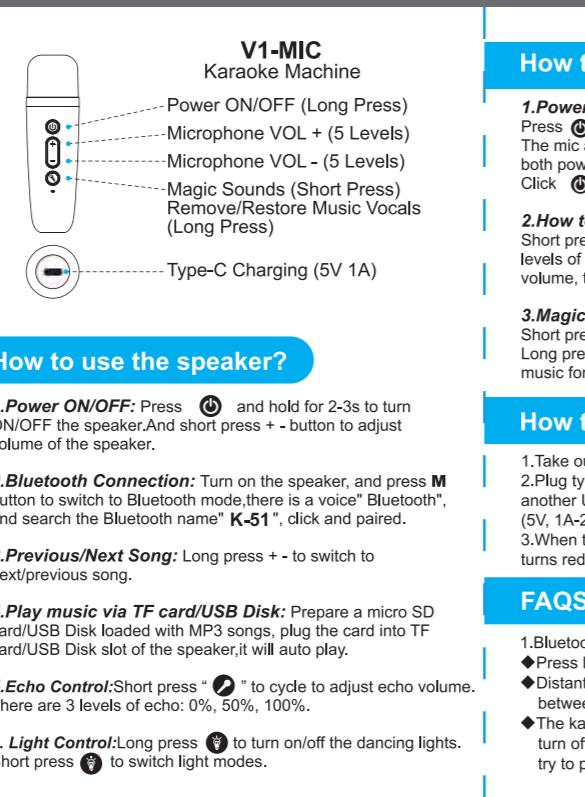

USER MANUAL

K-51 Karaoke Machine

Portable Wireless Microphone & Speaker

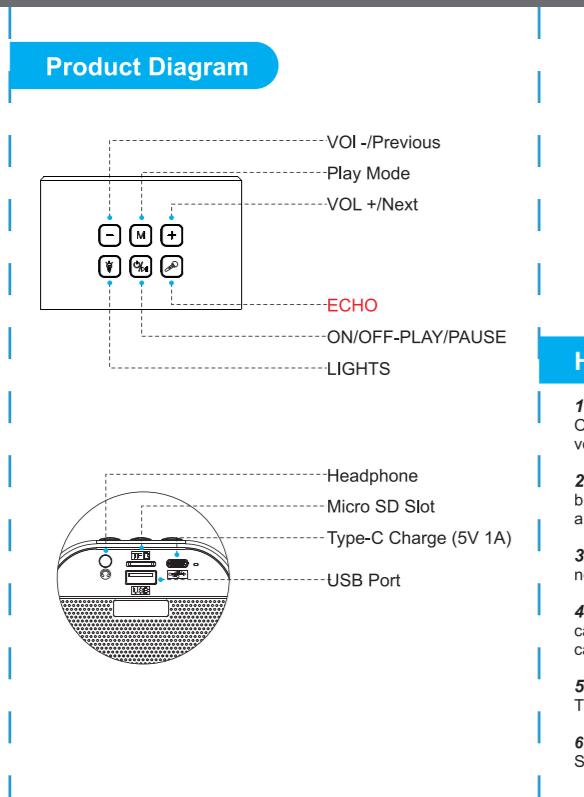

How to use the speaker?

1. Power ON/OFF: Press and hold for 2-3s to turn ON/OFF the speaker. And short press + - button to adjust volume of the speaker.

2. Bluetooth Connection: Turn on the speaker, and press button to switch to Bluetooth mode, there is a voice "Bluetooth", and search the Bluetooth name "K-51", click and paired.

3. Previous/Next Song: Long press + - to switch to next/previous song.

4. Play music via TF card/USB Disk: Prepare a micro SD card/USB Disk loaded with MP3 songs, plug the card into TF card/USB Disk slot of the speaker, it will auto play.

5. Echo Control: Short press to cycle to adjust echo volume. There are 3 levels of echo: 0%, 50%, 100%.

6. Light Control: Long press to turn on/off the dancing lights. Short press to switch light modes.

V1-MIC

Karaoke Machine

Power ON/OFF (Long Press)
Microphone VOL + (5 Levels)
Microphone VOL - (5 Levels)
Magic Sounds (Short Press)
Remove/Restore Music Vocals (Long Press)

How to use the microphone?

1. Power ON/OFF

Press and hold for 2-3s to turn ON/OFF the microphone. The mic and speaker will auto connect with each other when both power on.

Click to play/pause music from the speaker remotely.

Pls restart them and turn up mic vol to try again.

2. How to adjust microphone volume?

Short press + - to turn up/down microphone volume, there are 5 levels of mic volume. When reach to the highest or the lowest volume, there will be a prompt "voice" du"

3. Magic Sound Effect

Short press to switch between 4 kinds of magic voices. Long press 2-3s to remove/restore music vocals (Part of music for IOS not supported)

How to Charge

1. Take out the type-C charging cable included in the package

2. Plug type-C end of the cable into the machine or microphone, another USB end into normal USB charging adaptor/PC Port (5V, 1A-2A)

3. When the speaker/mic is being charged, the indicator light turns red. Once it is fully charged, the indicator light will turn off.

FAQS

1. Bluetooth can't be paired

◆ Press M button to switch to Bluetooth mode first
◆ Distant Bluetooth connection, try to adjust the distance between the karaoke machine and the phone.

◆ The karaoke machine already paired with other phone. First turn off Bluetooth of other phones and restart the machine, try to pair with phone again.

6. Howling

◆ Check if the microphone too close to the machine's speaker area.
◆ Avoid howling, please do not keep microphone head too close to the speaker. If too close, it will make sharp and strange sounds, which is relatively common sound feedback, so try to avoid microphones close to speakers.

How to use

Service Description

No worry about this purchasing!

30 days no reason money back guarantee, 1 year warranty and 24 hours warm customer service! Any assistance needed, pls no hesitation to contact us.

How to use

How to use