


## USER MANUAL

Portable Wireless Microphone & Speaker



K1-L

Digitized by srujanika@gmail.com

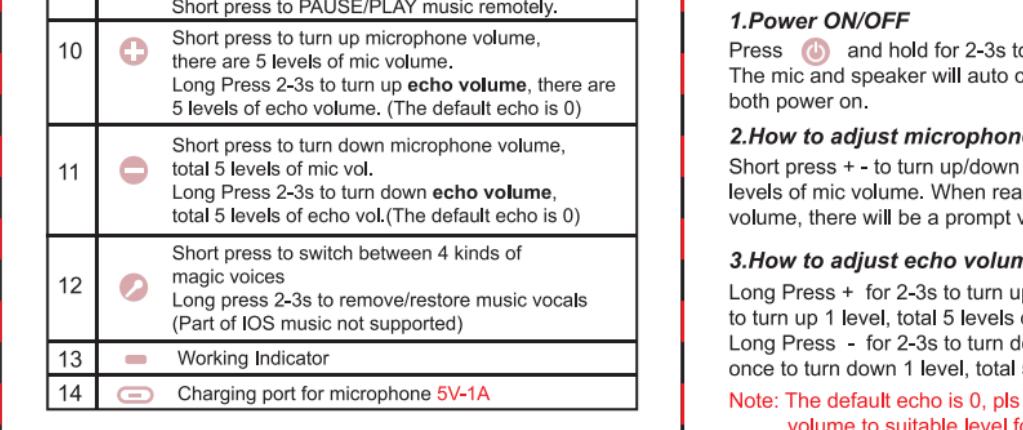

down volume of the speaker

down volume of the speaker to the previous song	<b>How to use the speaker?</b>	<b>4.Magic Sound Effect</b> Short press  to switch between Long press  2-3s to remove music for IOS not supported)
POWER ON/OFF the machine PAUSE the music	<b>1.Power ON/OFF:</b> Press  and hold for 2-3s to turn ON/OFF the speaker.And short press + - button to adjust volume of the speaker.	
up volume of the speaker to the next song	<b>2.Bluetooth Connection:</b> Turn on the speaker, and press <b>M</b> button to switch to Bluetooth mode,there is a voice" Bluetooth", and search the Bluetooth name" <b>K1-L</b> ", click and paired.	
on/off LED dancing light modes(TF/Bluetooth)	<b>3.Previous/Next Song:</b> Long press + - and hold for 2-3s to switch to next/previous song.	
A	<b>4.Play music via TF card:</b> Prepare a micro SD card loaded with MP3 songs, plug the card into TF card slot of the speaker,	

The diagram shows a vertical remote control for a microphone. It has a central rectangular button with a power symbol. Above this are two circular buttons, one with a plus sign and one with a minus sign. Below the central button are two more circular buttons, also with plus and minus signs. Red callout lines point from the text in the 'FAQS' section to these buttons. The text describes how to pair the microphone with a phone, handle no sound issues, and manage volume levels.

FAQS

1. Bluetooth can't be paired

- ◆ Press M button to switch to Bluetooth mode first
- ◆ Distant Bluetooth connection, try to adjust the distance between the karaoke machine and the phone.
- ◆ The karaoke machine already paired with other phone. First turn off Bluetooth of other phones and restart the machine, try to pair with phone again.

2. The mic is no sound;

- ◆ Try to charge the mic and use it
- ◆ Try to long press  of the mic to turn on
- ◆ The speaker and mic are not connected successfully. Pls restart them and turn up mic vol to try again.

3. The machine no sound when playing music;

HOW TO USE THE

MODE  
Karaoke

Press and hold for 2s  
Short press to PAUSE

Short press to turn up  
Long Press 2-3s to **turn on**  
(The default echo is 0)

Short press to turn down  
Long Press 2-3s to **turn off**

Short press to switch  
Long press 2-3s to **reboot**  
(Part of iOS music note)

► Check if the sound was paused  
press  of the mic to PLAY

en 4 kinds of magic voices  
restore music vocals (Part of

cable included in the package  
into the machine or microphone,  
SB charging adaptor/PC Port

g charged, the indicator light

- ◆ Check if the phone volume is turned up
- ◆ Short press + of the speaker to turn up speaker's volume

4. Presence of noise

- ◆ Environmental noise, or mobile phone signal interference, Adjust the distance between karaoke machine and the cellphone, and adjust the distance between mic and machine

5. Long press the power button and the machine/mic indicator does not light up;

- ◆ Try to charge the device/mic and use it



The diagram shows a rectangular device with a power button on the left and a volume control with a central mic/Power indicator on the right. Red lines point from the text labels to the corresponding buttons and indicator on the device.

- Short play Long
- Short Long
- Press the s Short
- Short

How to use a microphone?

**L: V1-C**  
**Machine**

3s to turn ON/OFF the microphone.  
E/PLAY music remotely.

Up microphone volume,  
**Turn up echo volume,**  
(+)  
Down microphone volume,  
**Turn down echo volume.**

between 4 kinds of magic voices  
remove/restore music vocals  
(not supported)



FA

- 1. Bluetooth can't be connected**  
PIs press M button to switch to Blue  
If the speaker has been connected  
pls turn off other Bluetooth first.
- 2. Microphone volume too low**  
Pls turn up both echo and mix volume

3. Microphone doesn't work  
Fully charge the speaker and the microphone.

• Long press to switch between Bluetooth and TF card mode  
• Long press to turn on/off lights.

• Short press to turn up music volume.  
• Long press to switch to next song.

• Press and hold for 2-3s to turn ON/OFF speaker.

• Short press to PAUSE/PLAY music.

• Short press to turn down music volume.  
• Long press to switch to previous song.

• Fully charge the speaker and the microphone.

**Service**

**No worry about this purchasing**

30 days no reason money back guarantee  
24hours warm customer service!  
If you encounter any issues with the product or contact us for assistance.

**How to Contact Us**

**FCC Statement**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

!  
arantee, 1 year Warranty and  
the machine, refer to the user manual  
**contact Us?**  
→click "Order Questions"→write down  
subject to the following two conditions:  
cause harmful interference, and (2) the  
interference received, including in  
undesired operation.  
**Portable**  
RF Exposure Information  
The device has been evaluated to  
requirement. The device can be used  
condition without restriction.  
**ISED Statement**  
English: This device contains licenser(s) that comply with Innovation, Development Canada's licence-exemptions.

(1) This device may not cause interference and found to comply with the limits

ant to part 15 of the FCC Rules. Provide reasonable protection against illegal installation. This equipment emits radio frequency energy and, if not used with the instructions, may cause communications. However, there is no guarantee that it will not occur in a particular installation. Careful interference to radio or television reception can be determined by turning the equipment on and off. It is encouraged to try to correct the interference by one or more of the following measures:  
• Change the antenna.  
• Relocate the equipment and receiver.  
• Use a different power outlet on a circuit different from that of the equipment.  
• Consult a licensed radio/TV technician for help.  
• Do not connect to this device not explicitly authorized by the manufacturer.  
• Avoid your authority to operate this equipment.

courante dans la section 6.3 du cr 102 de l'exposition aux rf. les utilis

ions: (1) This device may not  
2) this device must accept any  
terference that may cause  
meet general RF exposure  
sed in portable exposure  
ce-exempt transmitter(s)/receiv-  
Science and Economic  
xempt RSS(s). Operation is  
102 de l'exposition aux RF, les utilis-  
données canadiennes sur l'exposi-  
conformité.  
This equipment complies with Can-  
forth for an uncontrolled environm-  
Cet équipement est conforme aux  
rayonnements du Canada établies  
contrôlé.  
Portable  
RF Exposure Statement  
The device has been evaluated to  
requirement. The device can be us-  
without restriction.  
L'appareil a été évalué pour répon-  
d'exposition aux radiofréquences.

**Product name:** Karaoke Machine

émetteurs/récepteurs exempts de SS exemptés de licence pement économique Canada. ux conditions suivantes : quer d'interférences. e interférence, y compris les voquer un fonctionnement forme canadien peut - 3 (b) / nmb from the routine evaluation limits compliance with RSS 102 RF anian information on RF exposure

hr - 102 et conformité avec rss  
icateurs peuvent obtenir des

canada radiation exposure limits set  
ent.  
limites d'exposition aux  
s pour un environnement non  
meet general RF exposure  
sed in portable exposure condition  
ndre aux exigences générales  
L'appareil peut être utilisé en