


User Manual

SP-026

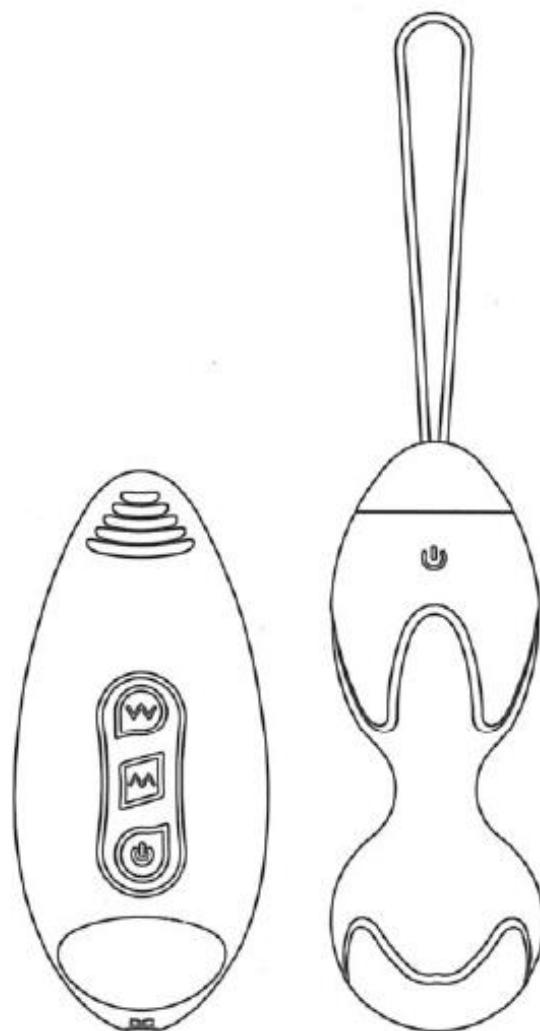

Thank you for using our products
please read this carefully before use

Made In China

Product description



It is the elegant appearance and perfect touch that gives you an array of options. It has super strong vibration and multiple vibration modes. You'll have the anticipation of the most dynamic stimulation.



The product also provides a sense of safety and environmental protection which is a part of our design philosophy. We hope this culminates in a superior experience for the user. This product is destined to be an extraordinary product.

1. Mode: 10 vibration modes
2. Material: Food grade silicone, ABS
3. Max noise: ≤50db
4. Battery: 170/300mAh rechargeable polymer lithium battery
5. Charge: USB 5V 150mA DC charge
6. Charge/Use Time: 1.5H/2H
7. Waterproof rating: Ip65

※ Package:1× remote controller&vibrating egg, 1×Charge USB cable, 1×User manual.

Instruction

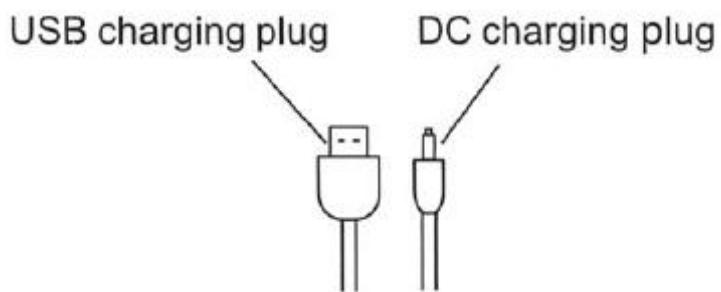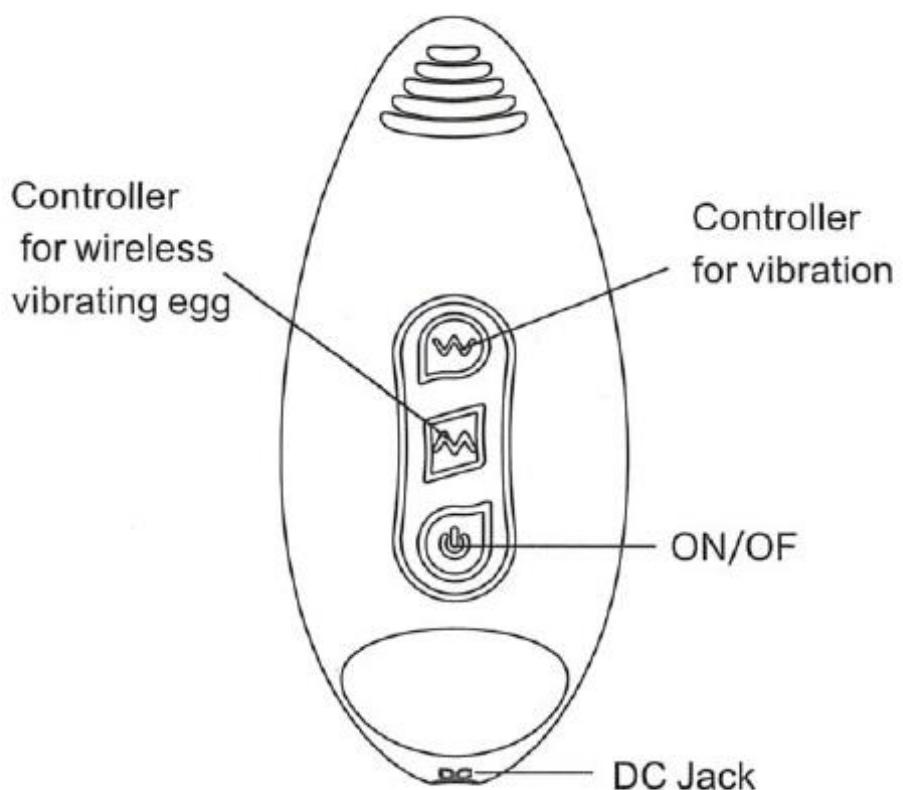

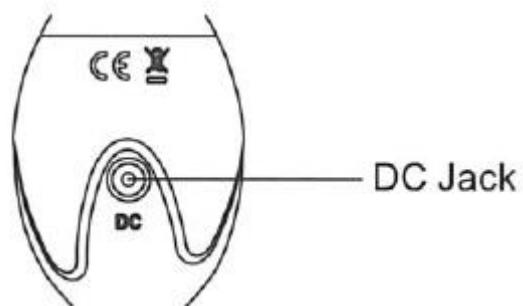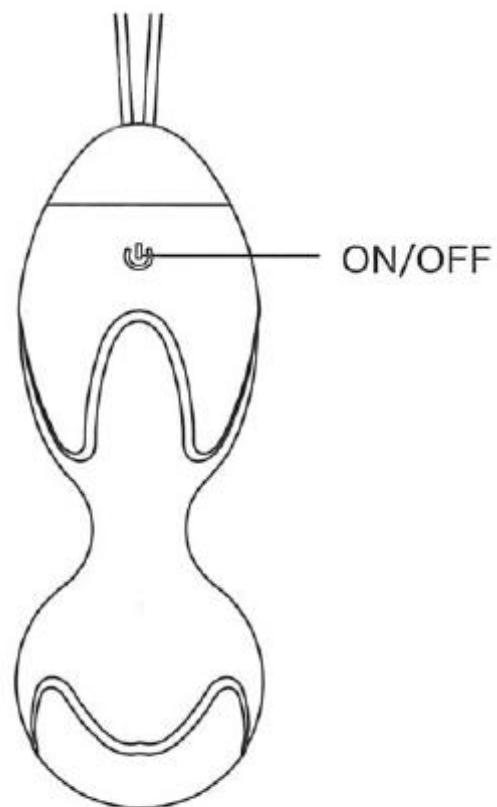

USB charging plug




DC charging plug



Charging guide

1

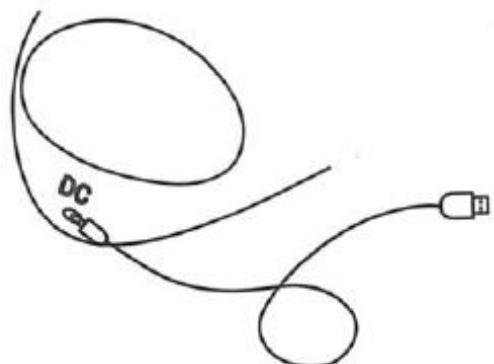


Put the DC charging plug into the hole of product to charge. Then insert the USB charging plug into the USB port of your computer or other charger.(output:5V=1A or 5V=1.5A).

2




When product is charging,
the LED will be flashing light.

3

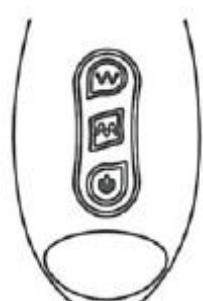

When a solid light appears,
charging is complete.

※ When charging, the toy must be in a shutdown state, make sure products cannot be used while charging.

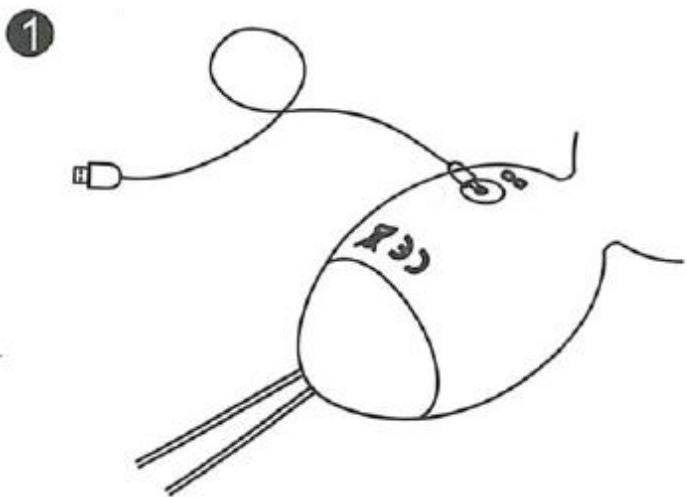

Put the DC charging plug into the hole of product to charge. Then insert the USB charging plug into the USB port of your computer or other charger.(output:5V=1A or 5V=1.5A).



②

When product is charging,
the LED will be flashing light.




③

When a solid light appears,
charging is complete.


※ When charging, the toy must be in a shutdown state, make sure products cannot be used while charging.

Directions for use

1. When product is received, please charge at once (Refer to charging guide).
2. Press button **c** (Remoter)/ **d** (Vibrating egg) 1.5 seconds to open /off the product .
3. Press button **a** Controller for vibration button, Press 1.5 seconds to stop vibrating.
4. Press button **b** Controller for wireless vibrating egg button, Press 1.5 seconds to stop vibrating.

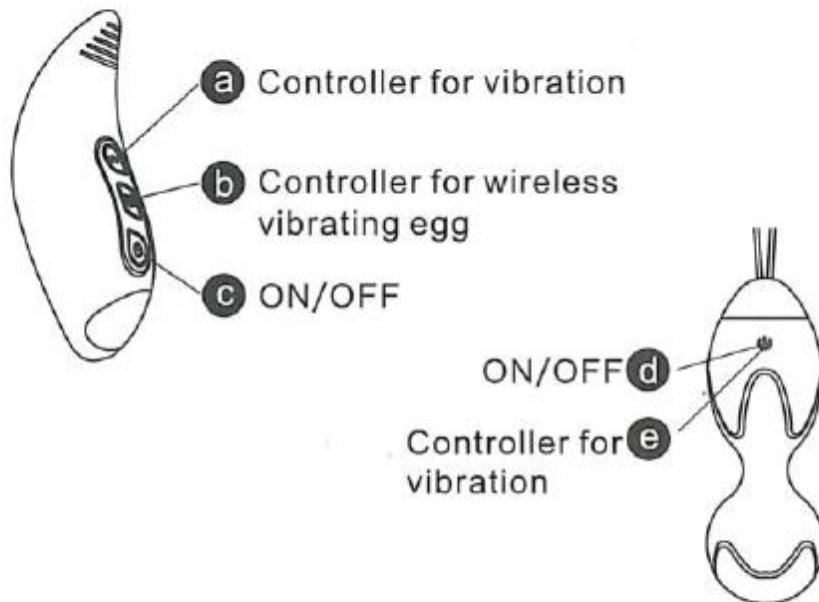

Vibration curve graph

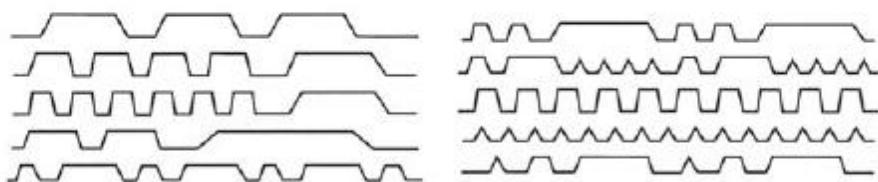

Attention

1. You must charge the toy in a safe place.
2. Only water based lube can be used for lubrication.
3. Stop using it if you feel uncomfortable or you find the toy is no longer smooth or has sharp edges.
4. Not recommended to use in depth of one meter pool.
5. After use, the toy should be cleaned immediately. Warm water and soap can be used to clean the toy, or with special detergent, disinfectant or 75% alcohol sometimes. But long-time disinfection is not recommended, as it may be harmful to the silicone.
6. Do not immerse in water. Wash thoroughly with clean water flow. Not recommended to use boiling water for disinfection.
7. Keep the toy in dry environment, and away from direct sunlight.
8. Store it beyond the reach of children.
9. The product contains lithium battery. Please put the toy into the non-recyclable bin for disposal.



-8-

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.