

JA-318 - manual - Printing

Size
80 x 90 mm

Color
CMYK

Printing
Printing




CD MICRO SYSTEM
JA-318

Product Specification


Product specification	CD MICRO SYSTEM
Product number	JA-318
Bluetooth version	5.0 (within 10 meters receiving distance)
Power supply	DC 12V/3A
Disc format	CD/CD-R/RW/MP3
Output Power	2X15W(RMS)
SNR	≥ 80dB
High and low	-10dB/+10dB
Audio input	3.5MM AUX IN
Audio output	3.5MM EARPHONE /LINE OUT(RCA)
Standby power consumption	<0.5W
Product Size	(W)361x(D)193x(H)121mm
Product Weight	3.10KG
Composition	JA-318*1, Adapter * 1, remote control * 1, manual * 1, FM antenna * 1, AUX cable * 1

Introduction To Panel Buttons

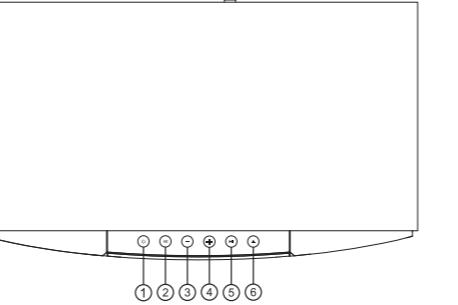


- 1 Switch
- 2 Mode switch key
- 3 Short press previous song, long press volume down
- 4 Short press next song, long press volume up
- 5 Play/ Pause
- 6 CD in and out key

Rear Panel Terminals

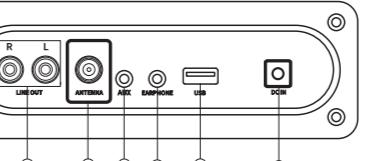

- 7 Audio output (R/L)
- 8 Antenna port
- 9 AUX audio input
- 10 EARPHONE output jack
- 11 USB port
- 12 Power port (DC 12V/3A)

Remote Control Panel

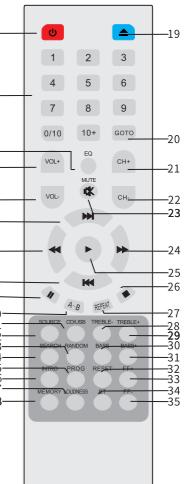

- 1 Power
- 2 Number keys
- 3 EQ mode
- 4 Volume increase.
- 5 Volume reduction
- 6 Next song
- 7 Fast rewind
- 8 Previous song
- 9 Pause
- 10 A-B key
- 11 CD/USB
- 12 Mode switching
- 13 Shuffle
- 14 Automatic channel search
- 15 Programming
- 16 Introduction
- 17 Loudness
- 18 Memory
- 19 Time selection
- 20 FM channel +
- 21 FM channel -
- 22 FM channel -
- 23 Mute
- 24 Fast forward
- 25 Play
- 26 Stop
- 27 Repeat
- 28 Treble+
- 29 Treble-
- 30 Bass-
- 31 Bass+
- 32 Reset
- 33 Tune+
- 34 Bluetooth
- 35 Tune-

Power Supply

- Before turning on the machine, use the supplied power adapter to properly connect and power on.

AUX IN

- Press the mode key (AUX) on the panel or the mode key on the remote control to switch to "AUX" mode.
- Use the provided audio cable, connect one end to the AUX interface on the back of the speaker, and the other end to a mobile phone or other product for playback.



Bluetooth Mode

- Set to Bluetooth mode by pressing the mode change button on the device or remote control.
- When waiting for connection, the BT text on the screen flashes, and it stops flashing when connected.
- In the Bluetooth list of your device, find "JA-318" and connect to it.

FM Radio FM

*Before using the FM radio, please connect the included FM antenna to the antenna terminal.

- Automatically scan and preset radio stations: Press the mode key on the panel or the "SOURCE" key on the remote control to switch to "FM" mode. Then press the "SEARCH" button on the remote control or long press the "FF/II" button on the panel to automatically scan for stations.
- Listen to the preset radio station: In the FM radio listening mode, press the FM channel "CH+/CH-" on the remote control to select the stored radio station.
- Frequency fine-tuning or manual channel tuning: press the "FF +/-" key on the remote control to increase or decrease. Long press the "FF +/-" key to automatically search for a station. After that, the search will stop automatically.
- Use of the "GOTO" key: Press the "GOTO" key once, CH-- is displayed, type in the numbers directly, listen to the stored radio program, press the time selection key twice, GOTO is displayed, Directly type in the radio frequency you want to listen to to listen to the radio program.
- Use of the "MEMORY" key: After manually adjusting the station, type in the radio frequency to select the radio station, press the memory key to display M CH-, then key in the number to be stored, and then press the memory key to store the radio station and then enter the position of the number.

USB Playback

- Insert a USB compatible with the USB terminal. The maximum supported capacity of USB is 32G. [Compatible format: FAT32/exFAT(WAV/MP3/WMA)]
- Set to USB mode through the mode switch button on the device or remote control

CD Play

- Set to CD mode through the mode switch button on the device or remote control. CD supports (CD/CD-R/CD-RW/MP3) audio formats.
- Press the CD in/out button, put the CD into the CD tray, and the CD will play automatically.
- A-B keys, during CD playback, first press the A-B keys to define the important part from A to B in the song that can be played repeatedly. Pressing it again will cancel the function.
- Create your own favorite song list (programming).
 - When the CD is stopped, press the "Programming" button on the remote control.
 - The display shows P01---, then press the corresponding number key, select the first track you want to edit and play, and then press the "PROG" key. The tracks after P02 are also added using the same method. (If you want to select more than the 10th track, you need to press the 10+ key first and then press the corresponding number character).
 - Press the play button to start playing the track you have edited.
 - To cancel the playlist, press the stop button twice or press to eject the CD disc.



Follow us! Thinkya



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.