 




ZAY-L07

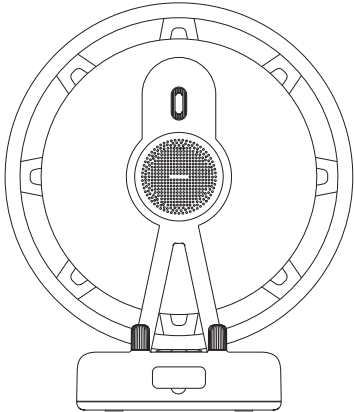

摩天轮水波纹蓝牙音箱

使用前请仔细阅读本说明书，严格按照说明书要求正确使用，并妥善保管说明书。本说明书的内容及产品的规格技术说明如有变更，恕不另行通知。注：本说明书上均为示意图，请以实物为准。

  产品示意图：

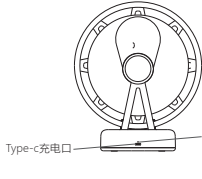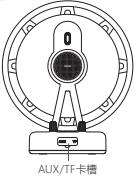

1.音量及音频模式

短按	切换音频模式（蓝牙模式-白噪音模式-TF卡模式-AUX模式）
长按	关机（开机状态下），任何音频模式下，长按关机
旋钮	调节音量大小

2.亮度及灯光模式

短按	切换灯光模式（暖色氛围灯-白色氛围灯-七彩渐变氛围灯-锁定当前颜色氛围灯）
长按	关机（开机状态下），任何灯光模式下，长按关闭灯光
旋钮	调节灯光亮度强弱

3.上一曲、播放及暂停（或接听及挂断电话）、下一曲

	上一曲
	播放音乐&暂停音乐 接听电话&挂断电话、长按拒接并挂断电话
	下一曲

产品参数：

产品名称：摩天轮水波纹音箱

产品型号：ZAY-L07

产品尺寸：198*104*232mm

包装尺寸：209*114*256mm

产品净重：443g

产品毛重：630g

输出功率：5W

电池容量：2000mAh

充电时间：3 小时

扬声器：40mm4Ω3W

输入电压电流：5V=1A

蓝牙版本：5.1

接收距离：10M以内

执行标准：GB4943.1.2022

使用时间：80%音量+灯光（最亮）:4小时30分、20%音量+灯光（最暗）:12小时

物品清单：

音箱*1 数据线*1 水波纹片*1 中英文说明书*1

操作使用说明：

1：单击“音量旋钮”，打开蓝牙模式。
语音提示“bluetooth”，搜索蓝牙显示“ZAY-L07”连接后语音提示“Conected”；
通过上下曲/播放/暂停按键进行调节；通过旋转调节音量大小；通过“播放/暂停”按键接听和挂断电话，长按此按钮可拒接电话；
*当蓝牙未连接或连接不成功，将一分钟语音提示一次，十分钟后自动关机。

2：第二次单击“音量旋钮”，打开白噪音模式。
语音提示“white noise”直接播放白噪音，通过切换按键上下曲进行声音切换“流水声、鸣声、雨声、海浪声、摇篮曲、森林风声”；通过旋转调节音量大小。

3：第三次单击“音量旋钮”，打开TF卡模式。
语音提示“T-flash card”，插入TF卡进行音频播放，通过上下曲/播放/暂停按键进行调节；通过旋转调节音量大小；

4：第四次单击“音量旋钮”，打开音频输入模式。
语音提示“AUX”，通过连接音频线进行播放，通过上下曲/播放/暂停按键进行调节；通过旋转调节音量大小；

5：第五次单击“音量旋钮”，设备音频关机或在任何一种模式下长按“音量旋钮”，都可关闭设备音频。

6：第一次单击“灯光亮度旋钮”，打开暖色氛围灯，通过旋钮调节灯光亮度；

7：第二次单击“灯光亮度旋钮”，打开白色氛围灯，通过旋钮调节灯光亮度；

8：第三次单击“灯光亮度旋钮”，打开七彩渐变氛围灯，通过旋钮调节灯光亮度；

9：第四次单击“灯光亮度旋钮”，锁定当前七彩灯光颜色，通过旋钮调节灯光亮度；

10：第五次单击“灯光亮度旋钮”，关闭氛围灯或在任何灯光模式下长按“灯光亮度旋钮”都可关闭设备灯光。

指示灯说明：

充电指示灯：充电时红灯闪烁，充满红灯长亮。
低电量提示：当使用音频功能低电量时，语音提示“Low Power”；
单独使用灯光模式低电量时，语音不提示，氛围灯光频闪5次后自动关机。

保养及维护：

在使用时，请阅读一下建议有助于您遵守保修条款，并延长产品的使用寿命。

●在减少火灾和触电危险，请勿让本产品淋雨受潮。

●请不要在靠近水的地方使用本产品，也不要将本产品浸入液体中或将液体滴落、泼溅到本产品。

● 请不要在靠近任何热源（如散热器、暖气设备、炉灶或其它产生热量的设备）的地方安装和使用。

● 请勿将产品放置在太阳直射或温度高的地方，高温会缩短电子产品部件的使用寿命、损坏电池，使某些塑料部件变形。

● 请勿将产品放置在过冷的地方，以免损坏内部电路板。

● 请勿试图拆开产品。如果非专业人员，以免会损坏产品。

● 不要跌落、强烈震动、用硬品撞击产品，以免会损坏内部电路。

● 请勿使用腐蚀性化学制品、清洁剂清洁产品。

● 不要用手尖在产品表面上乱划，以免损坏外壳和影响外观。

如果产品不能正常工作，请将其送至您的合格维修机构，工作人员会热心为您解决问题。

电池废弃说明：

(1) 废弃器具前，确保电源断开，必须将电池从器具中取出（用螺丝刀卸下螺丝，打开产品上下盖）；

 
(2) 电池应安全地放置（按照国家环保要求处置电池、避免污染）

以下情况恕不提供免费维修：

本公司产品实行保修年限之内的有限保修；
属于下列情况的设备故障或损坏，不再有限保修之列，本公司不承担免费的保修义务；
1.设备或部件已经超出了有效的保修期；
2.客户未按照说明书的要求，错误的安装、保管及使用而造成的设备故障或损坏；
3.非由本公司授权机构或人员拆卸而造成的设备故障或损坏
4.因意外因素或认为原因（包括但不限于操作失误、刮伤、碰撞、磕碰、输入不合适的电压电流等）导致的设备故障或损坏；
5.因自然灾害等不可抗力（如地震、火灾等）原因造成的设备故障或损坏；

制造商：深圳市致安逸科技有限公司
生产地址：深圳市龙岗区宝龙街道龙东社区打石岭路30号
产品型号：ZAY-L07



ZAY-L07

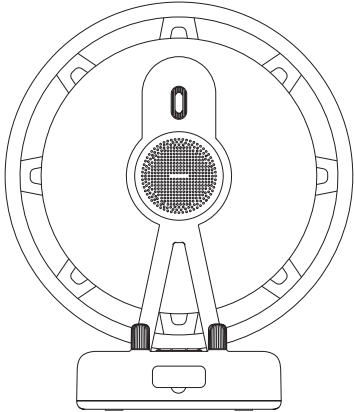

Sky Wheel Wave Lamp Speaker

Before using the product, please read this manual carefully and keep it properly. The contents of this manual and product specifications are subject to change without notice.

  Product Diagram：

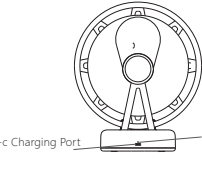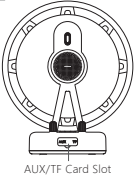

1.Audio and volume

Short press	Audio modes switching（Bluetooth - White noise - TF card - AUX）
Long press	Long press to turn off audio function at any audio mode
Rotate	Rotate to turn up/down the volume

2.Light and brightness

Short press	Light modes switching（Warm light - white light - gradient 7 colors light - set color light）
Long press	Long press to turn off light function at any light mode
Rotate	Rotate to turn up/down the lights

3.Play, pause and switch songs(answer,hang up and reject phone calls)

	Last song
	Play，pause music; answer, hang up phone calls; long press to reject phone calls
	Next song

Product Parameters：

Product Name: Sky Wheel Wave Lamp Speaker

Model Number: ZAY-L07

Product Size: 198*104*232mm

Package Size: 209*114*256mm

Net. Weight: 443g

Gross Weight: 630g

Output: 5W

Battery Capacity: 2000mAh

Charging Time: 3 Hours

Speaker: 40mm4Ω3W

Input: 5V=1A

Bluetooth Version: 5.1 version

Bluetooth Distance: ≤10m

executive standard: GB4943.1.2022

Working Time: 80% volume+light(brightest) 4.5 Hours; 20% volume+light(darkest) 12 Hours

Packaging List:

speaker*1 cable*1 manual *1

3.Operating Instructions:

1: First press the audio knob to turn on Bluetooth mode.
The voice prompt reads "Bluetooth", search and connect the Bluetooth device named "ZAY-L07"; the voice prompt reads "Connected" when successfully connected;
Rotate the audio knob to adjust volume; press corresponding buttons to play/pause music ; switch to last/next song; answer/ hang up phone calls; long press the phone button to reject phone calls.

*When Bluetooth is not connected or connected unsuccessfully, the voice prompt reminds once per minute, and automatically shutdown after ten minutes.

2: Second press the audio knob to switch to white noise mode.
Voice prompt reads "white noise"and start playing white noise musics; use the last song/ next song buttons to switch white noise musics between "flowing water", "chirp", "raining", "sea waves", "lullaby", "wind in the Forrest" . Rotate the audio knob to adjust volume.

3：Third press the audio knob to switch to TF card mode.
Voice prompt reads "T-flash card", Insert a TF card to start playing;

4：Fourth press the audio knob to switch to AUX mode.
Voice prompt reads "AUX"; connect the speaker to audio source by cable to start playing;

5：Fifth press the audio knob to turn off the speaker; or long press to turn off at any mode.

6：First press the light knob to turn on warm wave light; adjust the brightness by rotating.

7：Second press the light knob to switch to white wave light; adjust the brightness by rotating.

8：Third press the light knob to switch to gradient 7-color wave light; adjust the brightness by rotating.

9：Fourth press the light knob to set current light color; adjust brightness by rotating.

10：Fifth press the light knob to turn off the wave light; or long press to turn off at any mode.

Indicator Instructions:

Indicator: red light blinks when charging; red light stays on when fully charged.
Low power: while using the audio function alone, the voice prompt reads "low power" and the device will automatically shutdown.while using the wave light function alone, the wave light blinks 5 times and the device will automatically shutdown.while using both functions, the voice prompt reads "low power" and the wave light blinks 5 times and then the device will automatically shutdown.

Care and Maintenance:

Before using this product, please carefully read the user manual and comply with the operating guide.

● Do not allow this product to get wet to avoid the risk of fire and electric shock.

● Do not use this product near water or immerse this product in liquids or drip or splash liquids on this product.

● Do not use or install this product near any heat source such as electric heaters , stoves...

● Do not leave the product in the sun or in a place with high temperature. High temperatures can shorten the life of electronic parts, damage batteries, and deform plastic parts.

● Do not leave the product in a place that is too cold as this may damage the internal circuit boards.

● Do not disassemble the product. To avoid the product damage by unprofessional person.

● Do not drop, strongly vibrate, or hit the product with hard object, as this may damage the internal circuitry.

● Do not use strong chemicals, cleaning agents to clean the product.

● Do not scratch the surface of the product with a sharp body to avoid damage the shell and affect the appearance.

If the product is not working properly, please take it to qualified repair facility and the staff will be eager to help you solve the problem.

Battery Waste Instructions:

(1)Before discarding the apparatus, they must be power off and batteries must be removed from them.(Use a screwdriver to lever open the battery compartments).

(2)Batteries should be disposed of safely. Please follow local policy of recycling of rechargeable batteries to protect the environment.

The manufacturer's warranty is void under the following circumstances but not limited to :

1.The equipment or parts has exceeded the valid warranty period.

2.Improper or inadequate installation, use, maintenance, storage or modification.

3.Failure or damage caused by disassembly by unauthorized personnel or organizations.

4.Failure or damage caused by accidents or human error, including but not limited to: incorrect operation, scratch, impact, use of unspecified adapter and accessories, etc.

5.Failure or damage caused by natural disasters and other force majeure (such as earthquakes, fires, etc.)

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Manufacturer：Shenzhen Zhianyi Technology Co., Ltd.
Address: No.30, Dashing Road, Longdong, Longgang District, Shenzhen, Guangdong, China