


Instruction Manual




Please read carefully before use

Strap Removal Diagram

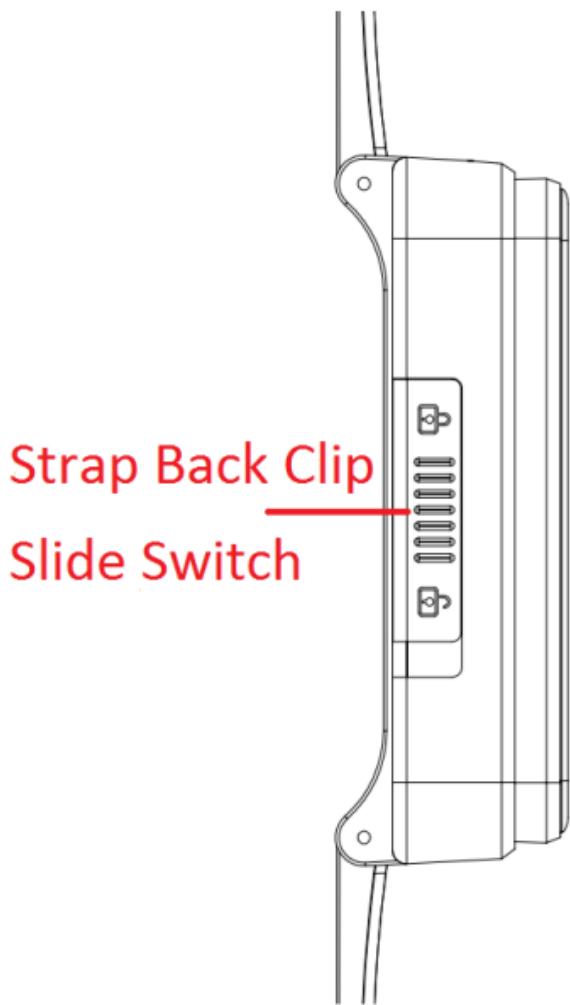

Slide down to unlock the strap back clip switch and remove the device.

Watch Charging

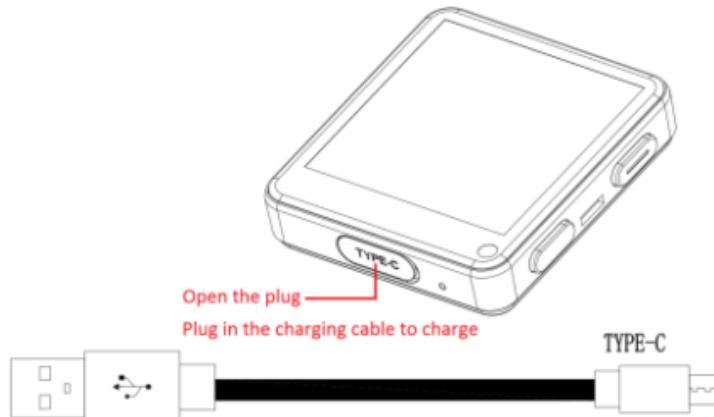

·For the first time use, please charge the watch; the watch adopts TYPE-C charging port, plug in the charging cable and then turn on the power. It is recommended to use a charger of 5V 1A or above to charge the watch. After charging, please switch off the power or unplug the charging cable.

Note: When charging is complete, put the rubber plug back in place to prevent water from entering the unit during daily use and causing damage to the unit.

First time you start a computer

·Press and hold the power on button for 3S and the watch will appear on the boot screen, the smart device needs to detect the applications for the first time, it will take a long time, please wait patiently.

·If you need to change the language after switching on the computer, you can go to Settings--System--Language--Tap the first item to add to change the default language of the system.

Key Function

boot key: ·Long press to switch on;

·Short press to realise the screen rest/light function; (Double-tap the screen to light up the screen even when the screen is off.)

·Press and hold for two seconds in the power-on state to enter the shutdown/restart selection interface;

·If improper operation causes the watch to die, long press the on button for 10 seconds to force restart the watch.

return key: ·Under the clock interface, short press to enter the main menu; long press to invoke the volume adjustment shortcut;

·In the non-clock interface, short press to return to the main menu.



: Virtual return key, short press to return to the previous level.



: Recent Tasks key, short press to call out recent tasks.

Slide operation

·Swipe down on the Clock screen to call out the Control Centre and Notification Centre.

·The Clock screen slides to the left to enter the main menu.

dial

1.The main screen of the watch displays gorgeous dials, and we've pre-set a number of them for you.

2. Users can enter the dial selection mode by long-pressing the screen for 2 seconds in the dial interface, and swipe left and right to select multiple dials on their own.

main menu

Basic applications included in the main menu: Settings, Browser, Calendar, Clock, Gallery, Music, Voice Recorder, File Management, Camera, Pedometer, etc. (Functions within the watch will be increased or decreased with the actual needs of the manufacturer, please refer to the watch in kind).

Function Introduction

Screen Brightness Adjustment: Go to Settings - Display - Brightness to adjust the screen brightness; or adjust the screen brightness in the Control Centre on the downward slide of the dial interface.

Camera: You can take photos and videos, please respect other people's rights and abide by local laws and regulations and customs when taking photos.

Gallery: Displays the photos in the current album and allows you to delete the photos.

Clock: Set alarm, timer, stopwatch.

Recorder: Click the recording icon to start recording, enter the recording file list, you can play the recordings in the list.

File Management: You can view all the files on your mobile phone, as well as create new folders, delete files and more.

Music: With this music player, you can play music from your phone's memory.

Warm Tip:

※ The battery of this product is not removable, due to the product's own wear and tear, after being idle for more than a month may cause the product to be unable to switch on due to a flat battery, please users charge regularly every week to ensure

that the device can work properly.

※ After the smart watch has been placed for a long time, if you use the computer USB charging, it will take more than ten minutes to display the charging icon, please wait patiently, it is recommended to use 5V 1A charger to charge.

※ Improper operation may cause the product to die, you can long press the on button for 10 seconds to force restart the watch.

※ This product is subject to continuous improvement and the contents of the manual are subject to change without prior notice, please refer to the actual product.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.