

Suitable for age 6 and above

## SMART DOG specification




**TIP: PLEASE DO NOT OPERATE ON THE CARPET, SO AS NOT TO COMPLETE THE ACTION.**

### ⚠️ Warning:

Please follow the instructions for packaging instructions. If you do not follow the instructions, some parts are assembled by adults.  
The product contains small parts that may pose a risk of ingestion or suffocation.  
Please do not leave the product unattended by children.  
Please do not leave the product unattended by children.  
The product contains sharp edges, sharp, rough and other parts that may be damaged if it is found to be damaged, it is not safe.  
The charger, battery case and other charging devices should be charged with the specified power supply as indicated on the product.  
Only the original charger can be used, the charger is not a toy.  
Non-rechargeable batteries are not rechargeable.  
Product information, please keep it.

### Smart dog introduction

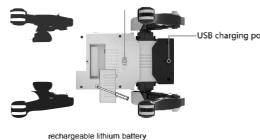

#### Switch

Press the power button at the bottom to the power position, then the pet will have a short prompt. If there is no remote control for a long time, the pet will power off by itself, and it needs to be turned back on when playing again.

#### Charging instructions

1. Insert the TYPE-C connector of the charger into the charging port on the body.
2. Insert the other end of the charging cable into the USB charging connector. The other end of the cable can be connected to any power source.
3. About 1.5 hours of charging, the charging light of the fuselage is off, indicating that the charging is complete, please disconnect all connections and put it in a safe position.

### USB port

- 1. The user should be disconnected from the charger before charging.
- 2. Do not mix old and new batteries or different types of batteries.
- 3. Do not short-circuit, disassemble, drop or put the battery in use or charging process once the smell or battery sudden heat or deformation, incineration and other abnormal phenomena appear.
- 4. If the battery is not used for a long time, please charge it immediately with plenty of cold water and seek medical attention immediately.
- 5. Only use the original charger to charge the product, and make sure that the voltage of the original charger is consistent with the voltage of the product.
- 6. To avoid personal injury, do not touch rotating parts with your hands.
- 7. Users have the responsibility to ensure that the product is used in a safe and appropriate manner. If there is any improper operation of their own or others' safety and property, the user should bear the responsibility and not assume any responsibility.
- 8. The product contains plastic, electronic components and batteries, do not treat such items as old garbage disposed, please follow the local garbage recycling requirements, separate and dispose.

### Remotemiro: introduction



#### BATTERY PRECAUTIONS


1. The smart dog uses a non-rechargeable 3.7V lithium battery and the remote control uses three 1.5V AAA non-rechargeable batteries.
2. When the battery is replaced, it should be replaced correctly according to the polarity and voltage signs on the battery room, and the battery should not be short-circuited.
3. Do not mix old and new batteries or different types of batteries.
4. If the battery is not used for a long time, please charge it immediately with plenty of cold water and seek medical attention immediately.
5. When the rechargeable battery is charging, the toy switch should be turned off.
6. Only batteries with the same or equivalent recommended battery can be used.
7. The exhausted battery should be removed from the toy. If it is not used for a long time, please charge it immediately with plenty of cold water.
8. Do not short-circuit the power terminal.
9. Do not connect to more than the recommended amount of power supply. USB cable in the process of use, should regularly check its wire, plug. If the shell and other part has damaged, the user should be stopped when the damage is found until the repair is complete.

### Smart dog function introduction



Press the button of the remote control and the pet will act accordingly.

1. Basic functions: forward, Turn Left, Turn Right.
2. Action: swimming, sit down, stunt, sleep, urinate, pick up, get down.
3. Environment: Greetings, Kung fu, dance, music.

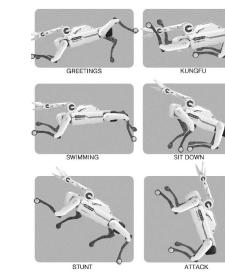

### Bluetooth Function

Press the pick up button on the remote control, and the robotic arm at the top opens up and places the robotic arm edge of you want to pick up. Press the remote control button again, you can clamp things. Press it again, and the clip open.



### Voice command function introduction

ACT ACCORDING TO VOICE COMMANDS.  
MERRY CHRISTMAS, HAPPY NEW YEAR, HAPPY FATHER'S DAY, HAPPY MOTHER'S DAY, HAPPY EASTER, THANKSGIVING, TRICK OR TREAT AND HAPPY CHILDREN'S DAY.



### Don't panic when you have a problem

COMMON PROBLEM	TREATMENT METHOD
It does not respond when turned on	Please check that the battery is properly connected, or that the charge is sufficient.
The remote control cannot be controlled	Make sure the remote is fully charged. The remote control should be aligned with the signal receiving port of the dog. In strong light or sunlight will affect the remote control operation.
The dog doesn't act on the control signals	Please check if your dog's battery is full. Gaited characters will appear when the battery is low.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

### Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.