 




Smart alarm clock

 
 
User manual

GMZ-532



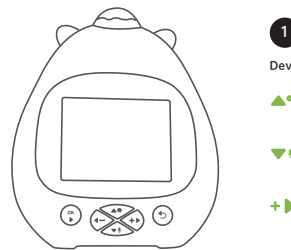


- 1**
Device keys - Function definition
- ▲ a.Short press. - up
b.Press and hold. - Chat
 - ▼ a.Short press - down
b.Long press - Voice assistant
 - +▶ a.Short press. - right
b.Long press - Volume +
 - ◀ a.Short press. - left
b.Long press - Volume -
 - OK a.Tap - Confirm/Play/Pause
b.Press and hold - Turn off
 - ↶ a.Back
b.Long press - return to the home page
- USB charging port
Toggle switch
TF card slot




2
Rouse
The wake-up call for the voice assistant is "Hello Timi"
Everybody's talking
"Hello Timi"
"Wake me up at 8:00 every morning"
"Count down five minutes for me"
"Turn on the alarm clock"
"Start timing"
"Check how many alarms I have"

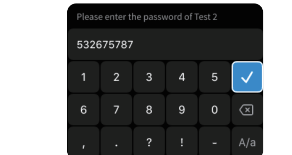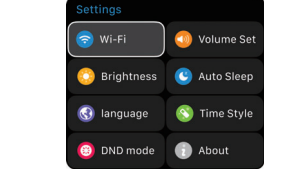




3
How do I network my devices
Start by opening [Settings] - [Wi-Fi] on your device.
Once in the network list, select a Wi-Fi and press the OK key to connect
The password must be entered using the arrow key and the OK key.
Attention:
(1) If you cannot find the WiFi name, check whether the router hides the WiFi.
(2) The product does not support 5G WiFi connection, and the 5G related network name will not be displayed on the WiFi list.
For iPhone 12 and later models, turn on the "Maximum Compatibility" option on the hotspot when connecting to the network.
Path: Mobile 【Settings】 - 【Personal hotspot】 - [Maximum compatibility].

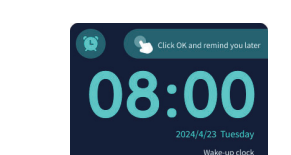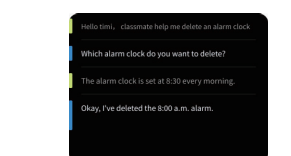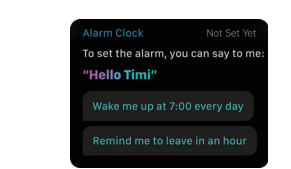   



4
My alarm clock
Setting an alarm
Method 1: On the device, you can only add an alarm by voice control. For example:
"Hello Timi, set an alarm clock for 8:00 tomorrow morning."
Method 2: Binding with the mobile phone, you can add an alarm clock in the small program on the mobile phone.
Deleting an alarm
Mode 1: One the device, you can delete the alarm clock by voice control. For example: "Hello Timi, delete the alarm clock at 8:00 tomorrow morning"
Mode 2: After entering the alarm list on the device, press the left button to delete the alarm.
Mode 3: Delete via the parent applet
Edit alarm clock
Method 1: Modify by voice.
Example: "Hello Timi, tomorrow morning the alarm clock at 8:00 will be changed to 9:00."
Method 2: Modify through the parent program
Alarm response
When the alarm time is reached, the device will automatically ring, now Press the OK button for snooze mode. It will ring again in five minutes; Hold down the OK key to disable the alarm.

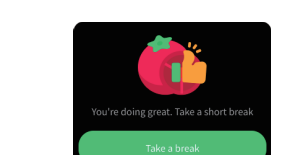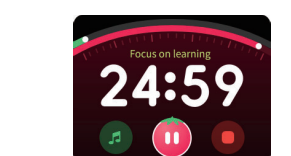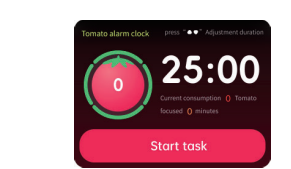   

5
Tomato alarm clock
Set tomato alarm
Mode 1: The default Tomato clock time is 25 minutes, Can pass the device in the direction, Down key, Select the usual tomato time;
Mode 2: Set a custom tomato time through the parent applet.
Tomato bell open
After setting the tomato time, Press OK Just start, During the operation of the Tomato-bell, the default background music can also be used Arrow keys Combine the OK key Turn off the background music on the left, press the OK button to pause the Tomato-clock, and press the button on the right to stop the Tomato-clock. Before stopping the Tomato-clock, there will be a confirmation pop-up window requiring the user to confirm;
End Tomato clock
At the end of the Tomato-clock, there will be a short 5-minute break(Default short rest duration, can be set in the applet) After 4 rounds, or get a long rest.

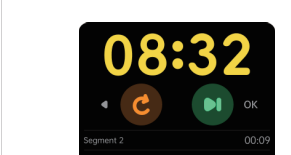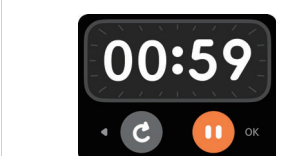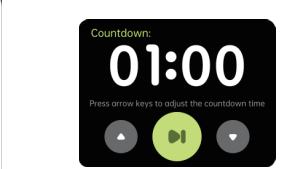   

6
Countdown:
Set countdown time
Mode1: The default value is 1 minute. You can adjust the countdown time by pressing the up and down keys. The unit of each adjustment is 1 minute Press the OK key to start;
Mode2: voice-controlled, Give an example: "Hello Timi, count down three minutes."
End countdown
Double click back Countdown can exit.
7
Second watch
After entering the application, press the "OK" key to start timing;
Pause: After starting the timing, press OK again to pause the timing;
reset: After suspending the timing, press the left button to reset the timing directly;
section: When the time is being timed, press the left key to record the current time, which is convenient for segmented recording.

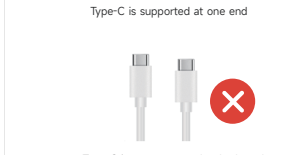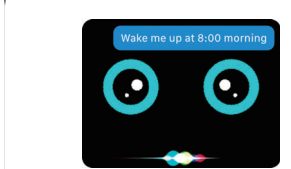  

8
Voice assistant
Wake mode
Mode1: Press and hold the voice button on your device
Mode2: wakeword "Hello Timi" Wake up immediately
Mode3: Press OK from the voice assistant icon on the home screen
After waking up, you can speak the command to the device
Give an example:
"Set my alarm for 9:00 tomorrow morning."
"Full volume"
"Brightness set to minimum"
"Turn on XX function"
"Time me."
"..."
Charging precautions
1. Avoid charging the battery for a long time, which may damage the battery
2. Do not use the wrong charger, as shown in the following figure, avoid using the charger with Type-C at both ends.

Warranty description
Thank you for your support and use of this product, in accordance with the national quality supervision and inspection of the "three guarantees" service relevant responsibility provisions to provide you with a one-year quality guarantee service commitment.
These Terms and conditions apply to consumers who purchase the product from the Company or its approved distributors.
Return, replacement and free maintenance services shall be handled with a valid product invoice and a valid three-package certificate.
Product Statement and precautions
1. Please read the contents of this manual carefully to ensure that you can use this product correctly and safely;
2. Some functions of this product can only be used normally when the network is in good condition;
3. Please do not disassemble this product and accessories without permission. The company will not be responsible for any loss caused by this
4. This product does not deliver the power adapter, if you need to buy, please buy the CCC certification and meet the requirements of the 5V/1A power adapter;
5. Do not expose the device to high temperature or around heating equipment, such as sunshine, heaters, microwave ovens, ovens, water heaters, etc.
The company reserves the right to improve the product, product specifications and design are subject to change without prior notice!

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.