

## User Manual for Car Smart Key Remote Control

### Controls

#### Key Types and Functions

This vehicle comes with the following keys:

Use the keys to turn on and off the power system, and to lock and unlock the doors and to open the trunk.

The built-in key can be used to lock/unlock the doors when the smart entry remote battery becomes weak and the power door lock/unlock operation is disabled.

To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the smart entry remote until it clicks.<sup>1</sup>Key Types and Functions

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

Follow the advice below to prevent damage to the keys:

1. Press the unlock button to remotely unlock the vehicle.
2. Press the lock button to remotely lock the vehicle.
3. Press the button to remotely activate the horn.
4. Insert the key into the ignition switch to power on the vehicle's electrical devices and start the engine.
5. Position key near the left front door handle, within one meter, and press the lock button. This will automatically raise all the windows and close the sunroof. If it's a convertible, it will also close the top.
6. Position the key near the left front door handle, within one meter, and press the unlock button. This will lower all the windows, open the sunroof, and if it's a convertible, it will open the top.
7. Press and hold both the lock and unlock buttons for about five seconds. The key light will flash once. At this point, the unlock function will only work for the left front door and the cap. To restore full unlocking capability, press and hold both the lock and unlock buttons for another five seconds.

**FCC Requirement**

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.