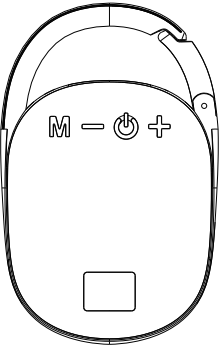
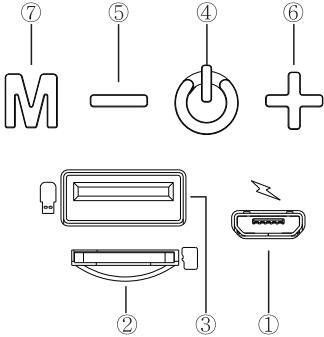


尺寸：50*100mm,5折页正反印刷，材料：70g双胶

<div>Bluetooth Speaker</div> <div>USER MANUAL</div> <div></div> <div>Model: TG-321</div>	<div>PRODUCT SPECIFICATIONS:</div> <div><ul style="list-style-type: none">●Wireless: V5.3Support: L2CAP/A2DP/AVCTP, can receive AUDIO signal and control the AUDIO device.Support HSP/HFP(Handsfree profile), with HANDS-FREE functions.●Working distance:10M●SNR:≥90db●Battery: 3.7V about 500mAh●Normal volume playing time: About 6-8 hours (Depending on the volume you use)●Speaker driver: C45mm*1●Power: 4Ω/5W *1●Frequency response: 120Hz-20KHz●Unit size: 85*49*133.4mm●Unit weight: about 244g (not includ accessories)●Charging:5V/500mA●Charging time: about 2h</div> <div>PRODUCT FEATURE:</div> <div><p>1.International advanced wireless chip and circuit design techniques, support wireless devices.</p><p>2.With FM function, can search radio station broadcast auto-</p></div>	<div><p>3.With Hi-Fi speaker, to make sure the clear and bright sound.</p><p>4.Support Micro SD card and USB card, play MP3 format audio.</p><p>5.The wireless working distance is 10 meters.</p><p>6.It will close automatically if disconnect Wireless for 30 mins.</p><p>7.Support TWS.</p><p>8.A variety of flashing LED lights with different colors, color lights flash follow the melody.</p></div> <div></div>	<div>KEY AND SLOT FUNCTION:</div> <div><p>1.DC 5V Slot:Please use the supplied cable for charging.</p><p>2.TF slot: It can decode and play MP3 format audio when put TF card into the slot.</p><p>3.USB slot: It can decode and play MP3 format audio when put the USB card into the slot.</p><p>4.Power switch :power on /power off.</p><p>When play music,(USB card/TF card/Wireless), short press for “play/pause”. In FM mode, press short to search station auto-</p><p>matically, press again to stop searching. Under wireless mode with mobile paired, when call coming, press short to answer a call hands-free,press again to hand up, press twice to ring up a call.</p><p>5.When play music, Press short for last song, long press to turn down the volume.</p><p>6.When play music, press short for next song, long press to turn up the volume.</p><p>7.When play music,(USB card/TF</p></div>	<div><p>card/Wireless/line in/FM), short press to switch model.</p><p>Press twice “M”key for option of the LED flashing light, press thrice to close/open the LED light .</p></div> <div>TWS:</div> <div><p>Keep the TWS speaker under Wireless mode without pairing, press the “M” key for 2-3 seconds either of the speaker until hear a hint and meantime the button light stop flashing , now is TWS mode, then can paire the mobile.</p></div> <div>NOTE:</div> <div><p>In the FM mode, put in micro charging cable to get better FM radio station.</p><p>If this speaker crash during use, you can press and hold the power button for 8 seconds to reset and shut down.</p><p>U disk and TF card use FAT32 to format</p></div>
--	--	---	--	---

FCC Caution:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.