

SPECIFICATIONS

Product name	A1
Product function	Remote control
Material	ABS plastics and metals+TPE
Rated power	17W
Maximum power	60W
Twisting force	19kg.cm
Input voltage	110V-240V
Output voltage	24V
Measure	33.5x14x15cm
Propulsion speed	1-7 times per second
Thrust length	0-6±cm

MAINTAIN

- ♦ Remove and clean the accessories after each use. Use a mild detergent and a damp cloth, or follow the separate instructions in the attachment. Do not use irritating chemicals or abrasive cleaning pads unless otherwise specified.
- ♦ Remove any dust or other substances that may accumulate on the machine with a soft cloth dipped in a mild detergent solution. Do not use harsh chemicals or abrasive cleaning pads.
- ♦ Check the moving and fixed parts regularly for signs of wear. Before continuing to use, repair, adjust or replace any parts that may be loose.

③

PRODUCT DESCRIPTION

GUNLOCK



- Connect the accessory you selected to the connector on the main body safely.
- Connect the power cord. Check the power indicator to show that the machine is ready.
- Hold the accessory gently with one hand, and at all speeds, check the operation of the machine from the lowest to the highest rotation speed by remote control.
- The required angle can be adjusted at will through the screw adjustment screw.
- The base sucker can only be used on smooth surfaces.

④

FCC WARNING STATEMENT

⚠ FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SAFETY PRECAUTIONS

⚠ Danger!

This product is not waterproof, please do not wade.

⚠ Warning!

- This product is suitable for China or countries with compatible electrical codes. Do not use it with incompatible voltages. Please make sure that the machine is well connected to a stable power supply before use.
- If you suffer from high blood pressure, other heart problems, or any other situation that makes you unable to withstand intense stimulation, please do not use this product.

⚠ Attention!

- Use only on a flat and stable surface to prevent damage to your machine.
- Cause injury or damage. Check the normal operation of the machine before each use.
- If your machine can't run as expected, please stop using parallel connection immediately.
- Department of store customer service help.
- In order to achieve the best effect, according to the need to use lubricant with accessories.
- In order to achieve the best results, please clean after each use. Don't rinse.
- Unplug the machine after each use to ensure a long service life.

②



PRODUCT SPECIFICATION

PLEASE READ THE PRODUCT CAREFULLY BEFORE USING IT

①

REMOTE CONTROL



- On/Off
- Mode key
- Accelerator key
- Deceleration key

- Connect the power supply and press the on/off button on the remote control, and the machine will start running.
- If you need to adjust the propulsion speed, please use "+" and "-" on the remote control.
- Press "O" to cycle 21 different operation modes.
- Press the power button again to stop the operation of the machine.

Tips: The effective distance of this remote control is within 10 meters.

Note: This product is not waterproof, please do not wade.

⑤

REMOTE BATTERY SAFETY INSTRUCTIONS

- The remote control of this product, you need a CR2032 battery. If the battery fails, please replace it yourself. Batteries should be properly placed in the battery compartment. If the product has not been used for a long time, please take out the battery in time.
- The battery used in this product is a non-rechargeable battery, which cannot be charged. Different types of batteries or new and old batteries are not recommended to be mixed. 3. The battery shall not be exposed to sunlight, fire or similar overheated environment and humid environment.

MATTERS NEED ATTENTION

- This product is only suitable for adults, and it is forbidden for minors.
- If you feel uncomfortable during use, please stop using it.
- Avoid direct sunlight, high temperature, heavy pressure, humidity and pollution.
- Check whether the product is damaged regularly. If it is damaged, do not use it.
- Please keep it out of the reach of children.

⑥

How does Apple download APP



How to link the machine after downloading the app (The operation of Apple/Android is the same)

How to download app for Android



How to link the machine after downloading the app (The operation of Apple/Android is the same)