



Selfie Stick

User Manual

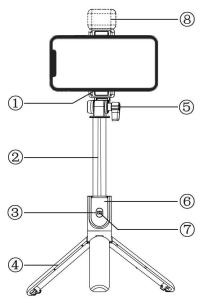

① Phone Clip ⑤ Locking Knob
② Telescopic Shaft ⑥ Remote Control
③ Indicator Light ⑦ Shutter Button
④ Built-in Tripod ⑧ Fill Light (options)

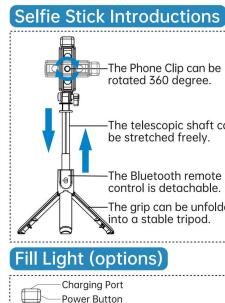


Fill Light (options)

 


1.Power Button: Turn on/off the light;
2.Changing the lighting mode.
3.2.Charging with Micro-USB Cable.

Reminder: The fill light is assembled for some models. Please refer to the model of the purchased product.

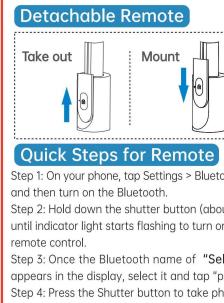

Detachable Remote



Quick Steps for Remote

Step 1: On your phone, tap Settings > Bluetooth, and then turn on the Bluetooth.
Step 2: Hold down the shutter button (about 2s) until indicator light starts flashing to turn on the remote control.

Step 3: Once the Bluetooth name of "Selfie" appears in the display, select it and tap "pair".
Step 4: Press the Shutter button to take photos.

Step 5: Hold down the shutter button (about 3s) until indicator light goes out to turn off the remote control.

Reminder: The remote control is compatible with Android 4.3, iOS 5.0 and later.

 


Replace the Battery

Reminder: The Bluetooth remote control has two types. Please follow the corresponding steps to replace the battery according to the type of your purchased product.

1. Covering Type

Force apart the upper shell at the groove on the side of the remote with fingernail, then replace the battery, and finally fasten the shell back.



2. Sliding Type

Slide the back cover in the direction of the arrow as shown, then replace a new battery, and finally insert the cover back.



Troubleshooting:

1. If the remote cannot be turned on.
 - Replace a new battery.
 - 2. If your phone is unable to connect to the remote.

• Delete the Bluetooth pairing on your phone, reboot the remote and start a new device search.

3. If your Android phone can't take photos when you press the shutter button, however the volume of the phone increases.

Attention:

1. Don't store the product in icy or damp environment.
2. Don't place the product in the heat.
3. When replacing the battery, place the positive pole "+" of the battery outwards.
4. This product contains a battery, please place it out of the touch of infants to prevent children from swallowing it by mistake.
5. Don't use the product in restricted district to avoid violating public order.

Thanks for your support !

CE CE ROHS



FCC WARNING

This device complies with part 15 of the [FCCRules](#). Operation is subject to the following two conditions: (1) this device may not cause harmful [interference](#), and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the [FCCRules](#). These [limits](#) are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TVtechnician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction