


INSTRUCTIONS

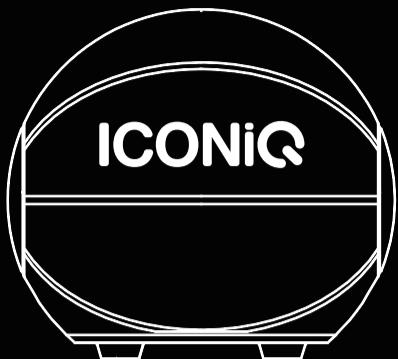

Model: Q10

Please read the instructions of this product carefully before using it

⚠ Unit must be fully charged before use

INSTRUCTIONS

POWER SWITCH

- Press and hold the power button for 3 to 4 seconds to finish the startup after hearing the startup prompt tone.
- Press and hold the power button for 3 to 4 seconds to turn it off.

VOLUME DOWN/LAST SONG

- In the process of playing music, long press to reduce the volume.
- In the process of playing music, short press to jump to the last song.
- At the same time, you can also control the volume on smart devices or playback devices.

PLAY/PAUSE/BLUETOOTH CONNECTION

- Play: Short press to play or pause music.

BLUETOOTH PAIRING

- Press and hold TWS for 1S to enter the Bluetooth pairing state.
- The blue LED blinks, waiting for the direct Bluetooth connection to succeed.
- The blue light stays on after the Bluetooth connection is successful. If the product is not connected to the phone, it will automatically shut down after 10 minutes without any operation.
- Please follow your Bluetooth device instructions to connect Bluetooth to this product.
- Use your devices to search and select the Bluetooth name: ICONIQ to pair and connect.
- After a successful Bluetooth connection, the blue light is on and a successful connection tone can be heard.

AUDIO INPUT

- This product has audio input function and can be connected to most playback devices through a 3.5mm audio cable. It is suitable for audio playback devices without Bluetooth function.

TWS INSTRUCTIONS


OPERATION	CONDITION
Long press to power button.	<ul style="list-style-type: none"> Power On Blue Light Flashes Quickly Prompt Tone
Double-click TWS button.	<ul style="list-style-type: none"> Entering TWS mode Blue Light Flashes Slowly Prompt Tone
No Operation (it will automatically search for an auxiliary machine)	<ul style="list-style-type: none"> TWS is connected successfully Blue Light Flashes Slowly Prompt Tone
Connected to a Bluetooth device	<ul style="list-style-type: none"> Main Device is active Blue Light stays on Prompt Tone

PARTS LIST

ICONIQ Bluetooth Speaker	x 1
Adapter (19V 6.3A)	x 1
Audio Line	x 1
Instructions	x 1

SAFETY MANUAL

- Please strictly refer to all warning tips and usage guidelines.
- This product is strictly prohibited from being used near flowing, splashing and dripping liquids. Please keep all liquids away from this product.
- Do not use this product in wet environment or near water. Please use dry or slightly wet cloth to clean this product.
- Do not put this product in a wet environment.
- Do not allow product to be used by children.
- Do not cover this product with tablecloths or curtains. Please use this product in a well-ventilated environment.
- Do not put the product near fire, such as candles or other extreme sources of light.
- Please press buttons gently to prevent damage.
- Do not use this product in an excessively dry environment to prevent electrostatic damage to the product.
- Do not use this product in an environment above 35°C/95°F degrees, and please avoid direct sunlight.
- Please do not disassemble or repair it by yourself. If there are any quality issues, please contact after-sales service.
- Please prevent this product from falling from high altitude or being impacted by a huge force.
- Do not install this product on the wall or high places.
- Please keep away from strong magnetic environment or objects, such as TV sets, wireless phones and other speaker products.
- The battery of this product is irreplaceable. Please do not replace it by yourself.

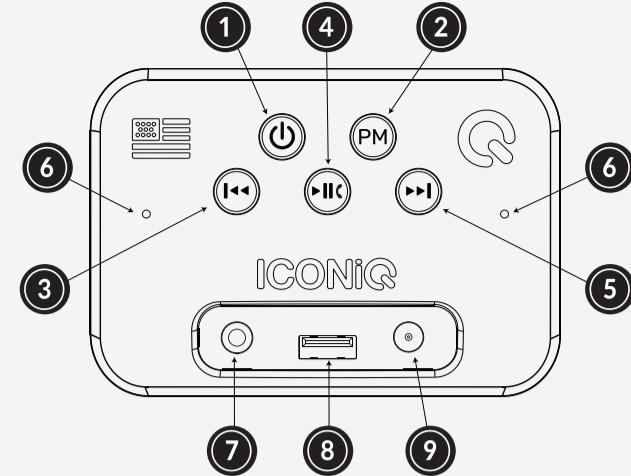

①	Power switch/light effect switch
②	TWS/Bluetooth pairing
③	Volume down/last song
④	Play/pause/phone answer/hang up
⑤	Volume up/next song
⑥	Status display light
⑦	Audio input interface
⑧	USB 5V1A output interface
⑨	DC IN charging port

INSTRUCTIONS

ANSWER THE PHONE

- When Bluetooth is connected, if there is a call, press the play button briefly to answer the call.
- Press the play button briefly again to hang up the phone during the call.
- Press and hold the play button to reject the call.
- Please keep within 30 meters of the microphone to ensure the quality of the call.

VOLUME UP/NEXT SONG

- In the process of playing music, press and hold to increase the volume.
- In the process of playing music, short press to jump to the next song. At the same time, you can also control the volume on smart devices or playback devices.

EXTERNAL CHARGING

- Plug the charging line into the USB interface, and the other end of the charging line is connected to the mobile backup to be recharged.
- In order to ensure the best sound quality, please try not to play music while charging.

CHARGING

- Plug the Type-C charging line into the Type-C charging interface on the back of the product, and connect the other end to a 5V1A charger or other 5V1A external charging devices.
- It takes 3 to 5 hours to complete a full charge. (It depends on the charger)
- During the charging process, the red light of the charging indicator is on, and when it is full, the red light goes out.
- In order to ensure the best sound quality, please make sure that the product has sufficient power.

TROUBLESHOOTING

PROBLEM	SOLUTION
Bluetooth cannot pair or connect.	<ul style="list-style-type: none"> Check to see if power is on Check to see if unit is paired to other devices Initiate a reboot and repeat the pairing operation
There is noise when playing music.	<ul style="list-style-type: none"> Check to see if this product and playback device are compatible. Check distance between product and playback device Check for shielding object or magnetic field Check to see if product has sufficient power. If battery is low, charge before use.

INSTRUCTIONS

LIGHTING EFFECTS SWITCHING

- Click the power button to cycle through the 8 lighting effects including the light off effect.

TWS FUNCTION

- Prepare two or more products of the same series, and turn them on separately.
- Double-click TWS key of one product to enter TWS mode as the main machine. Double-click TWS key of other products again to exit TWS mode.
- Double-click TWS key of other products to enter TWS mode as the auxiliary machine, and wait for the main/auxiliary machine to connect automatically. The connection is successful after hearing the tone.

SPECIAL REMINDER

- After entering TWS mode, the APP will be temporarily unavailable.
- After entering TWS mode, only the main machine can answer the phone calls, and the auxiliary machine is silent.
- After entering TWS mode, close one of the products, while the other will be automatically turned off.
- After entering TWS mode, only the main machine can control the volume, play, pause and control the light effect, and the auxiliary machine can only control the power off.
- To exit TWS mode, please double-click TWS button again.
- To disconnect the main and auxiliary machines, please double-click the TWS button of the main machine or the TWS button of auxiliary machine again.
- After the main and auxiliary machines are successfully connected to TWS, they will be automatically connected the next time they enter TWS, only for the two products that have been successfully connected.

SPECIFICATIONS

Horn Unit	4 inch full range x2 + 5.25 inch bass
Output Power	40W x 2 + 50W
Impedance	4Ω
Signal-to-noise-ratio	≥70dB
Frequency Response Range	80HZ-20KHZ
Bluetooth Version	Bluetooth 5.3
Charging Interface	DC-IN 19V 6.3A
Internal Battery	12x2000mAh lithium electronic battery
Play Time	The product can play for 3-5 hours at 80% volume when it is fully charged.

WARNING



- Do not disassemble, impact, squeeze or throw into the fire;
- Do not continue to use if there is severe swelling;
- Do not place it in a high temperature environment, and it is forbidden to use after the battery is soaked in water.
- Replacing the battery with the wrong model may cause explosion. Be sure to dispose of the used battery according to the instructions.
- It is not suitable for children under 14 years old.
- Only suitable for safe use in non-tropical climate conditions.



Discover/learn:
 ©2024 iconiq technologies
 All rights reserved
www.iamiconiq.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure