

DOG TRAINING COLLAR

Package content

Product Overview

Key Definition

Charging prior to use

Product switching on/off

Product switching on/off

 
 
Pairing the Remote control and the Receiver

Pairing the Remote control and the Receiver

Test training mode

USER GUIDE

Read The Manual Before Using

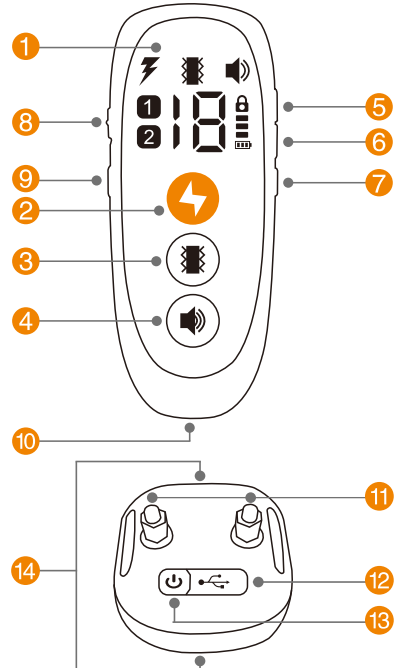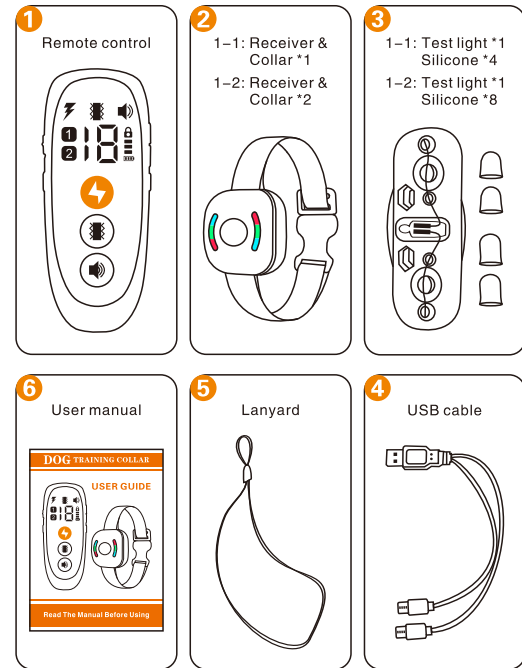


- Screen** : Show the modes, levels and channels.
- Shock button** : Press to choose Shock mode, the screen show 0, press + or - button to adjust the levels from 0 --- 18, press Shock button again to make the Receiver shock.
- Vibration button** : Press to choose Vibration mode, the screen show 0, press + or - button to adjust the levels from 0 --- 18, press Shock button again to make the Receiver vibrate.
- Sound button** : Press to choose Sound mode, the screen show 0, don't need to adjust the levels, just press to make the receiver sound Bee---.
- + button** : press + to increase the training levels.
- button** : press - to reduce the training levels.
- Light Button** : Press to light on the LED indicator of the Receiver.
- Channel Switch** : choose your training channel between CH1/CH2 by Switch this button.
- Lock button** : Press to lock the Remote, all button of the Remote is unavailable; Press again to unlock it.
- Charging hole of the Remote**.
- Shock static electrode** : Conduct the safe static; To install the rubber cap, reach to pet's skin.
- Charging hole of the Receiver**.
- Power button of the Receiver** : press to turn on the Receiver, press again to turn it off.
- LED light of the Receiver**.

Notes :

- The battery icon on the display will flash while the Remote control is charging. The battery icon will stop flashing and reflect a full status when completely charged. The battery icon on the display will indicate a space status if the Remote control runs out of power.
- The Receiver's LED status light will light up and flash while charging. After completely charged, the LED status light will cease flashing and remain on. When the Receiver is charging, it goes in to sleep mode, which means it can't receive signals and can't be controlled by the Remote control. The LED status light will blink every second when the Receiver is low.
- Make sure the charging port is dry before charging the Receiver.


 
You can skip this step as the product is already matched up in the factory. (The paired channel is CH1)

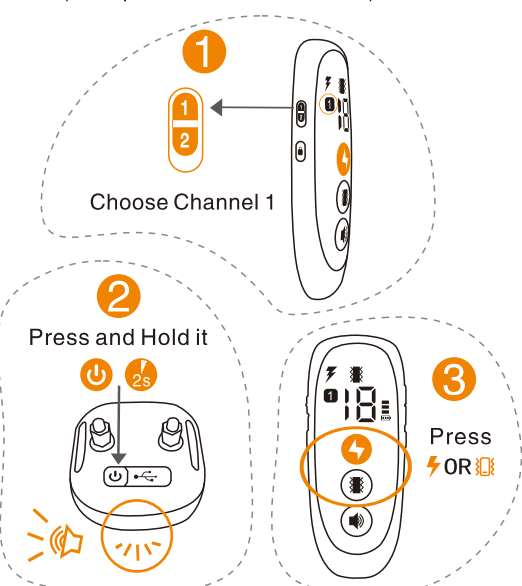

- Turn on the Remote control and choose a channel by switch the channel button to position 1 or position 2.
- Press and hold the receiver power button till you hear a beep sound with the light flashing quickly.
- Press the vibrate button/shock button/beep button of the Remote control within 10 seconds after the beep sound, hearing a beep sound again that means the pairing successful.

Pairing additional Receivers

  You can pick a separate pairing channel for pairing an additional Receiver, which is done in the same steps as above.

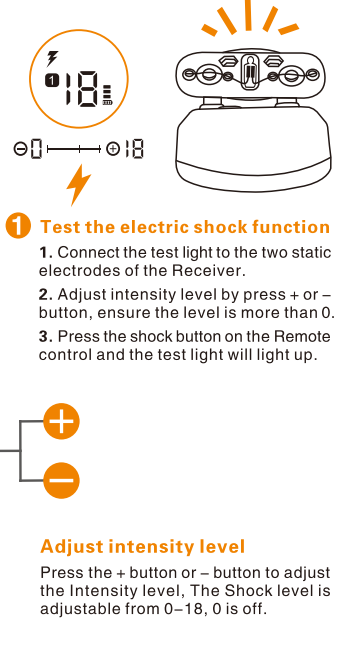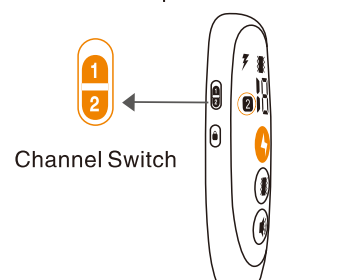

Test training mode

Test LED light mode

Wearing the Receiver collar

Frequently Asked Questions (FAQs)

 
 
 
Frequently Asked Questions (FAQs)

Finding the most appropriate training level for your dog

Important Security Information

Important Security Information

Product Specification

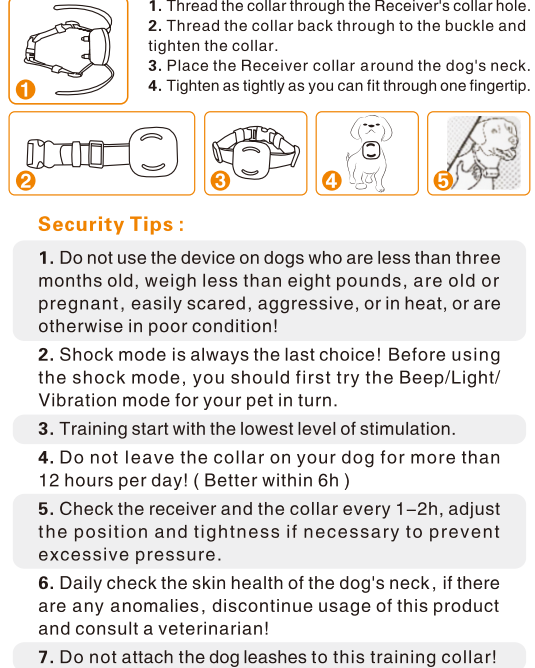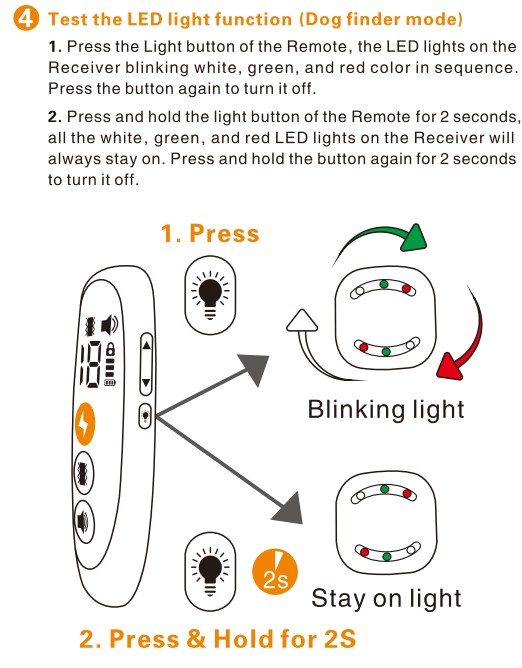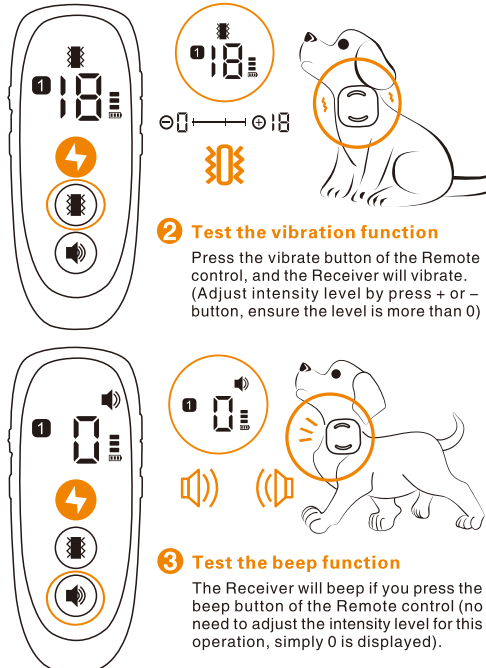

Q: When I press the Remote control button, my pet does not react.

- A:**
- Ensure the Receiver is turned on.
 - It's possible that a low battery in the Remote control and Receiver is causing the Remote control distance to be lowered when you first use it.
 - The Remote control distance can be affected by a variety of factors such as topography, weather, vegetation, and the transmission of other radio equipment.
 - Increase the electric shock or vibration's intensity level.
 - Ensure that the Receiver's static electrodes are close to the dog's skin.

Q: What should the duration of each dog training session be?

A: 10-15 minutes.

Q: What should I do if the dog training collar doesn't work?

- A:**
- Check the power level of the Remote control and Receiver, then recharge it if it is low.
 - In vibrate or shock mode. Check the intensity level and ensure that the level is over 0.
 - Check if the Receiver is enabled, please press the power switch button to activate it.
 - Check the channel, press the CH button to turn it back on if you have picked another channel.
 - Re-pairing the Remote control and Receiver.

Q: The receiver will not respond to the operational signals from the Remote control.

- A:**
- Check to see if the Receiver and Remote control are properly paired.
 - Check the Remote control's display for the channel icon to determine whether it is chosen on the receiver's paired channel.
 - Make sure that the Remote control and Receiver are both switched on. If this is not feasible, finish the pairing by going to the "Pairing the Remote control and Receiver" page.

Q: If your dog isn't responding to the electric shock, consider these solutions.

- A:**
- If the dog's hair is too long, it can be ruffled to the sides so that the Receiver's static electrodes can reach the dog's skin.
 - Extended silicone caps can also be fitted if the dog's hair is too long.
 - Finally, directly shaving the dog's neck just before putting on the Receiver will allow the static electrodes to reach the dog's skin.

1. Follow these steps to smoothly start training your dog with the tone button :

- Spend 10-15 minutes per day for 2-3 days helping your dog understand the tone.
- Associate the tone with reward and praise (some also use the tone as a warning).
- Push the tone button for 2 seconds.
- Reward your dog with verbal praise when you release.
- Allow 2-5 seconds before you repeat the process.

Quick Tip : Vary the rewards while training for the tone function. As soon as your dog starts to anticipate a reward with the tone, you've succeeded in this phase.

2. How to find the best Shock Level :

- Very important :** Always begin with the lowest intensity level of electric shock, gradually raise the intensity level, follow these steps to find the optimum level :
- Adjust the intensity level starting with level 1 on the LCD display on the Remote control, then press the shock button to observe how your dog reacts.
 - Gradually increase the intensity level of the electric shock until your dog responds to the shock. If you do not notice any response from your dog, you can increase the shock intensity level again.
 - Observe and record your dog's reactions at all times, as well as the shock's intensity level; Interact with your dog to determine the optimal training level.

- Quick Tip :**
- Press the Locked button of the Remote to lock it, all buttons of the Remote is unavailable, that's supposed to lock the Remote to prevent misoperation.
 - If the electric shock function is not expected to be used, you could twist out the shock static electrode of the Receiver.

This is a security warning symbol that generally serves to alert you to the possibility of injury. Please read the following security information carefully to prevent any potential dangers.



Do not use this product if your dog is aggressive or exhibits aggressive behaviour frequently. Aggressive dogs can cause serious injury or even death to their owners and others.

Please follow the manufacturer's directions while using the product. We are not liable for any damages or injuries resulting from incorrect use.

It is forbidden to use the product in the presence of open flames or fragile objects.

It is forbidden to use the product in extremely hot (above 40 degrees Celsius) or extremely cold (below 0 degrees Celsius) environments.

Do not charge this product with a charger of more than 5 volts.

This product is not a toy and should be kept out of the reach of children.

Please unplug the product from the power supply if it will not be used for an extended period of time.

When the product stops working effectively due to a drop, damage, outside usage, or water infiltration, do not use it. The product should be fixed by the manufacturer or its after-sales service to avoid injury.

During dog training, safety is of utmost importance. Please keep yourself and your dog in a safe range during dog training to avoid injuring others. Make sure that the leash is strong enough and of the right length to keep the dog within a safe range at all times and that you can pull the dog if it runs off unexpectedly.

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Dimension	Remote : 120*50*18 MM Receiver : 50*50*25 MM
Receiver's Casing	IP67 waterproof
Remote's Casing	Non-waterproof
Remote/Receiver's battery	3.7V/300mAh LIP
Charging Voltage	DC 5V
Remote/Receiver Charging Time	2 hours
Charging Port	Type-C
Wireless Power	10 mW
Operating Environment	0-40℃
Remote/Receiver Standby Time	Remote: 120 days Receiver: 45 days
Frequency	433.92 MHz

