

3 in 1 Portable Speaker

Bluetooth Speaker

BT-S1




Please read this user manual carefully before using the product BT-S1 and keep it for future reference. The appliance must be installed and used in accordance with these instructions. Improper use of safety and hazard instructions can lead to serious burns or fire hazards. This document is part of the appliance.

TECHNICAL DATA

Model	BT-S1
Drive Units	Full Range: 1.75" 4Ω 7W x 2 Radiator: 3.00" x 1
Speaker Power	Max: 14W RMS: 7W x 2
Bluetooth Version	5.0
Frequency Range	2.402 - 2.480GHz 90Hz - 15KHz
Transmit Distance	10m / 33ft
Operation Voltage	5V/2A
Charging Port	Type-C
Battery Capacity	3.7V, 4,400mAh, 16.28Wh
Playing Time	3~12 Hours
Product Dimensions	166x140x42 mm / 6.5x5.5x1.65 inch
Material	Glass + ABS plastic+Fabric
9 Noises Presets	
Sounds of Water x 3	Relax Rain, Babbling Brook, Bird Stream
Sounds of Natural x 3	Primeval Forest, Campfire, Summer Night
Colored Noise x 3	White, Pink, Brown
Scented Candle	
Unit Dimensions	52xx52x32 mm / 2x2x1.26 inch
Material	Natural Soy Wax, 12% Essential Oils
Cotton Core	100% Cotton Wick
Burning Time	6~8 Hours
Flavor Selection	Multiple Options
Warranty	18 Months

PARTS

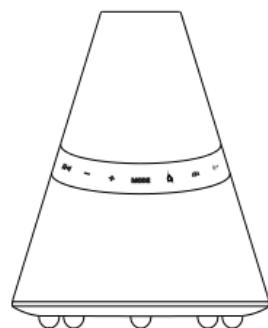


BT-S1



Glass Cover x 1



Scented Candle x 2

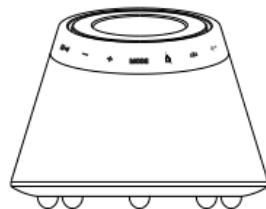

Speaker Unit x 1





Type-C Cable x 1

NOTE: Pictures are for reference only.

NOTE: Please do not touch the candle in the cans, in case causing itching or allergic reactions.

Description of Product (Front Side)

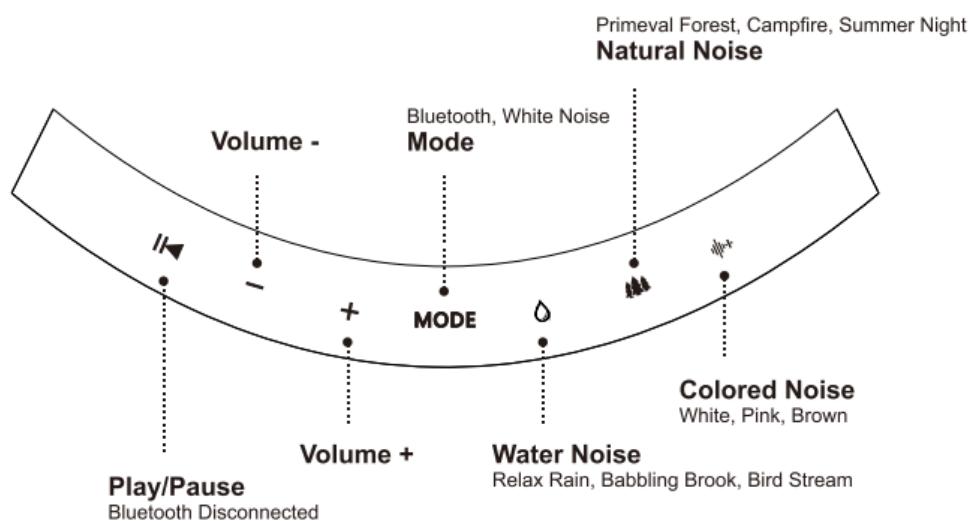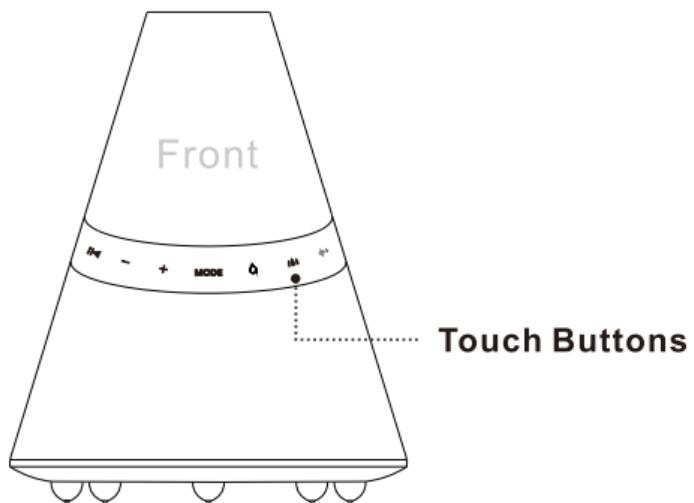


Features:

1. Play/Pause/Bluetooth Disconnected
2. Volume down -
3. Volume up +
4. Mode: White Noise, Bluetooth to switch
5. Water Noise: Relax Rain, Babbling Brook, Bird Stream to switch
6. Natural Noise: Primeval Forest, Campfire, Summer Night to switch
7. Colored Noise: White, Pink, Brown to switch

NOTE: Pictures are for reference only.

Description of product (Back Side)

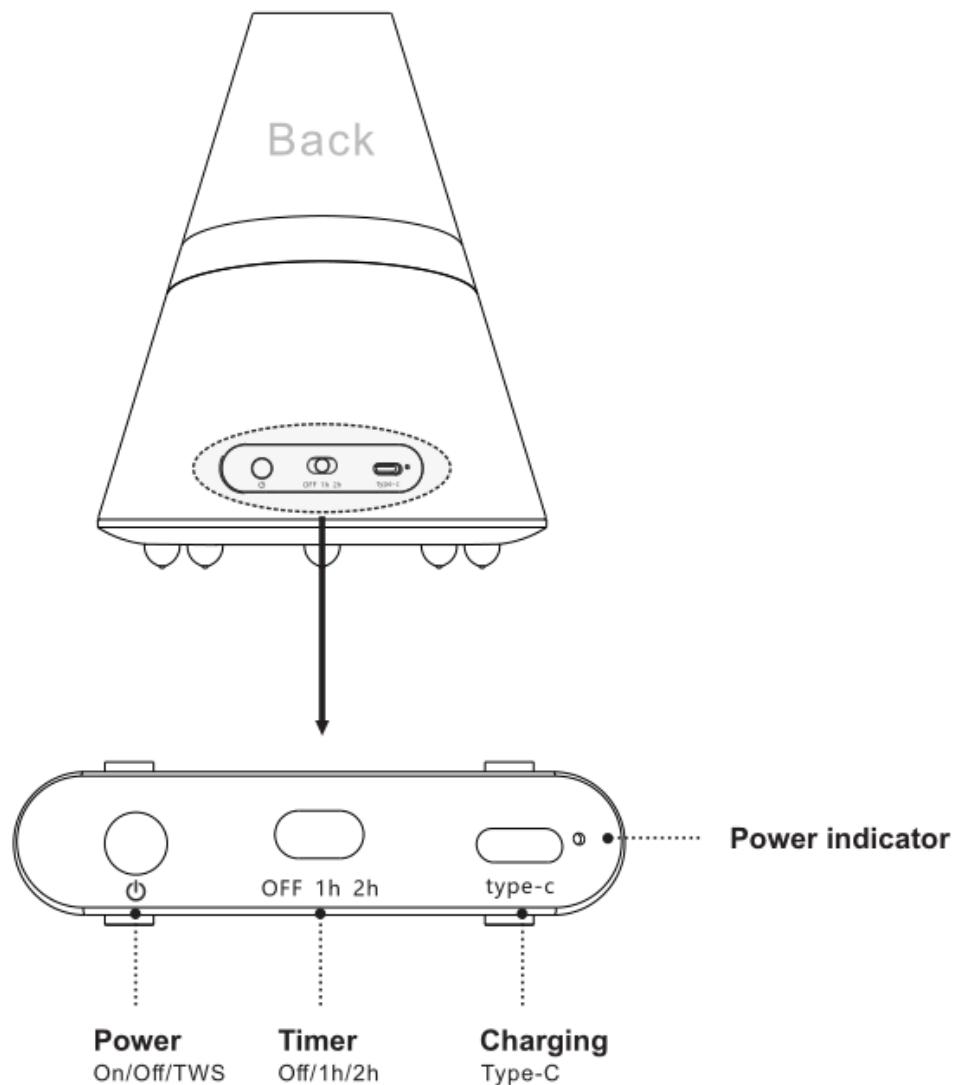


Features:

8. Power: On/Off/TWS
9. Timer: Off/1h/2h
10. Charging: Type-C
11. Power Indicator

NOTE: Pictures are for reference only.


Product Explosion Diagram

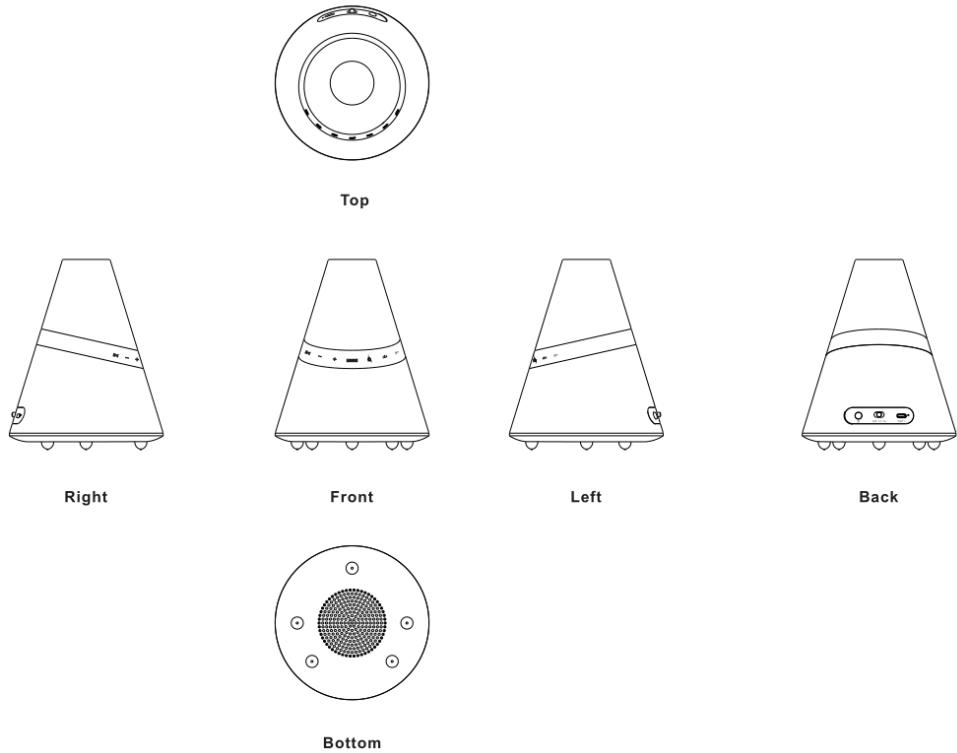

NOTE: Pictures are for reference only.


OPERATIONS

Power On/Off/TWS

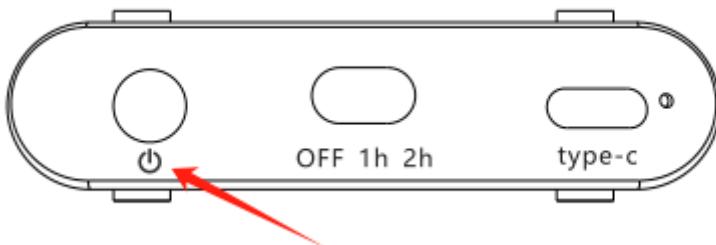

1. Power On: Long press the button [\oplus], you will hear “Power On”, the device will powered-on and enter White Noise Mode, and then plays preset noise on a loop.
2. Power Off : Long press the button [\oplus]], you will hear “Power Off”, the device will powered-off.
3. TWS: Double tap the button [\oplus], the device will enter Pairing Mode. The LED will flash green rapidly. After the paring is completed, the LED of the master speaker will remain solid and the linked speaker will flash slowly.

Timer Settings

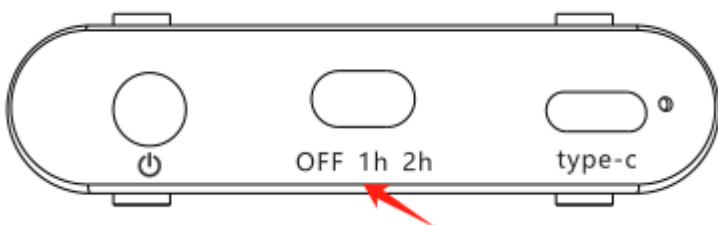


1. Timer Off : Switch to “OFF”, the white noise timing function is disabled, the device will play preset white noise on a loop as default.
2. 1 H: Switch to “1h”, one hour setting, the white noise will be automatically turned off after 1 hour.
3. 2 H: Switch to “2h”, two hours setting, the white noise will be automatically turned off after 2 hour.

NOTE: Valid for White Noise Mode only.

OPERATIONS


Charging Port

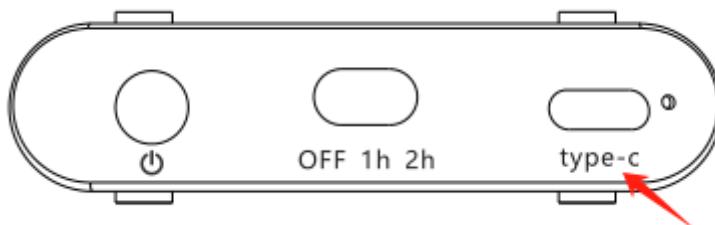

Insert the Type-C cable to charge for the speaker

NOTE: Please be careful to use a charger that is compatible with the voltage 5V/2A or above, in case causing charge slowly or unable to charge. If the charger is used improperly may cause the device to not function properly and in extreme cases can cause the charger to burn out or cause other damage and/ or injury.


Power Indicator (Red, Green, Blue)

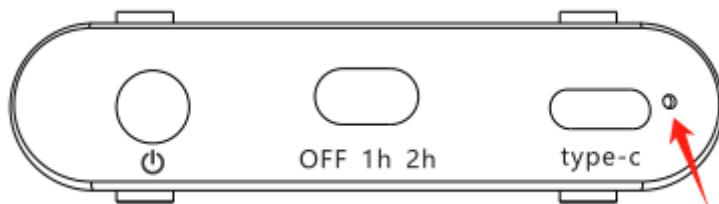

1. LED “RED” remain solid: the device is charging.
2. LED “GREEN” remain solid: the device is full charged.
3. LED “BLUE” flash rapidly: the device is waiting for connection under Bluetooth Mode.
4. LED “BLUE” remain solid: the device is pairing completed.


OPERATIONS

Bluetooth Connection

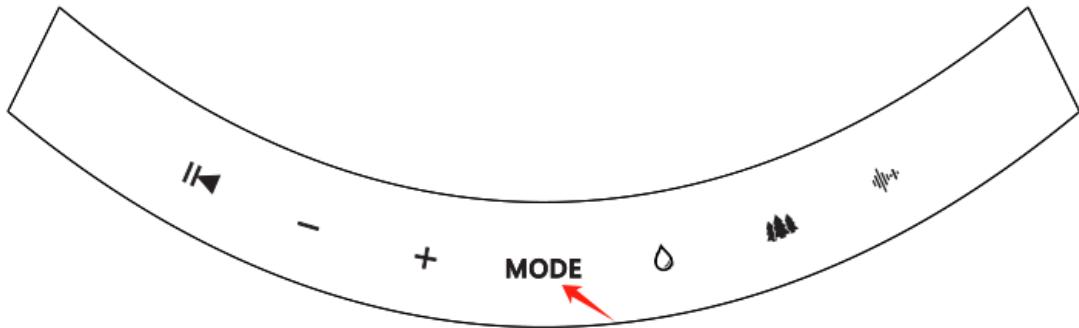

1. Turn on the device, will enter white noise mode as default. Tap the button [MODE] to switch to the Bluetooth Mode. The LED will flash blue rapidly, and you will hear the voice prompt “Bluetooth, waiting for connection”. NOTE: Bluetooth pairing name will appear as “BT-SLEEP”.
2. After the pairing is completed, you will hear the voice prompt “Bluetooth is connected”, and the blue LED will remain solid.
3. Tap once the button [MODE], switch to White Noise Mode.


Bluetooth Play/Pause

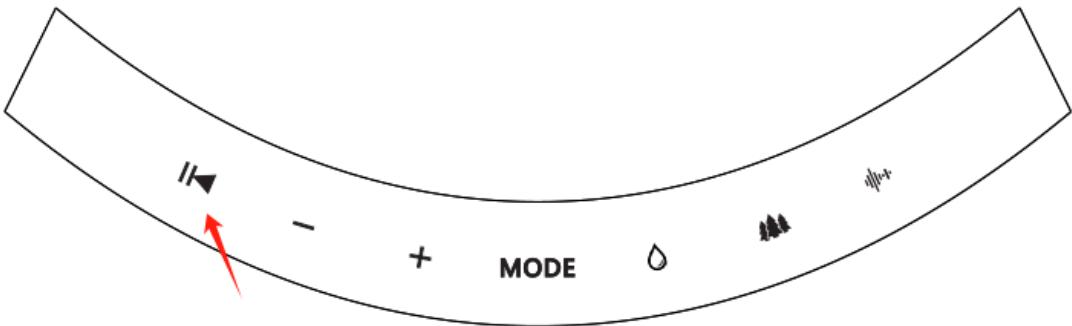

1. Short press the button [\swarrow] to stop playing music.
2. Short press once the button [\swarrow] to replay music.
3. Long press the button [\swarrow] to disconnected with a voice prompt “Bluetooth is disconnected, waiting for connection”. The other smart devices can be paired.
4. The Bluetooth distance is up to 10 meters between two devices.


OPERATIONS

Volume Control

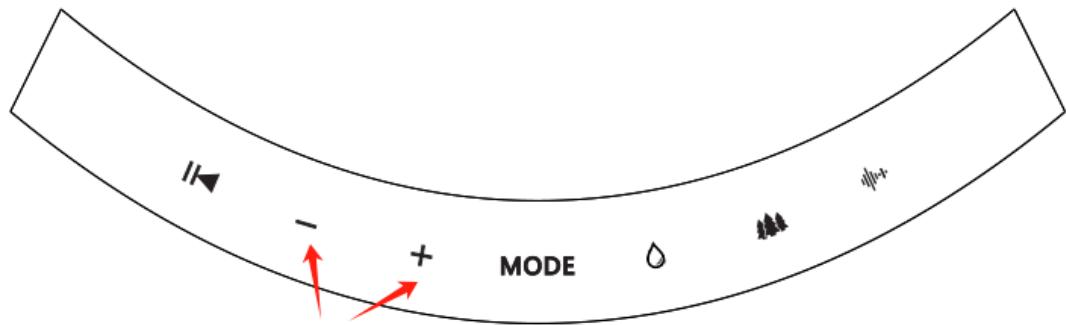

1. Press the button [-] to decrease the volume.
2. Press the button [+] to increase the volume.
3. When the volume is increased to the Maximum, the speaker prompts “Maximum Volume”, total volume level 16, level 13 as default.
4. Short press or long press the volume button can be adjust the volume level.

Preset White Noises (9 Sounds)

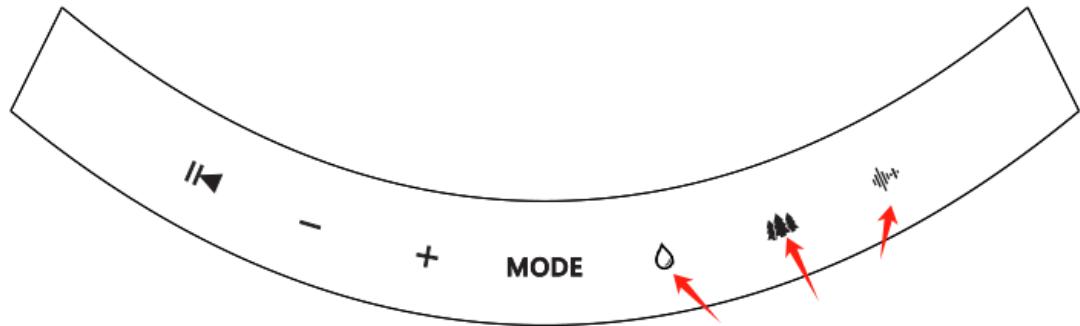


1. The Sounds of Water: Relax Rain, Babbling Brook, Bird Stream sounds.
2. The Sounds of Natural: Primeval Forest, Campfire, Summer Night sounds.
3. Colored Noise: White, Pink, Brown sounds.

AUTO Power Off

After powered on the device without Bluetooth connection, or disconnected the Bluetooth after 10 minutes, the device will power off automatically with the voice prompt “Power Off”.

OPERATIONS


TWS Connection

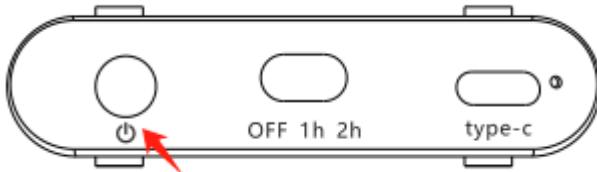

TWS feature allows you to link two speaker devices together. The first speaker will be the master connected to the Bluetooth device and operate all of the controls, including power on/off. The second speaker is a linked speaker to the master.

1. Turn on both speaker devices.
2. Double tap the button [⊕]. The speakers will enter Pairing Mode. The LED will flash green rapidly. After the pairing is completed, the LED of the master speaker will remain solid and the linked speaker will flash slowly.
3. To disconnect the pairing, short press the button [⊕] once to switch off the TWS pairing.
4. Both speakers can be turned off via TWS Pairing Mode.


Low Battery and Charging

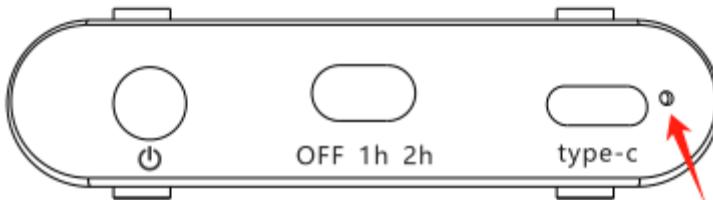

1. When the battery capacity is low, you will hear the voice prompt “Battery Low” to remind the user that the speaker needs to be charged. If the user does not charge, the speaker will be automatically powered off.
2. Insert the cable Type-C (Voltage: 5V/2A) with your charger to charge for the speaker. The Red LED light will be illuminated while charging. The Green LED light will be illuminated while the speaker is fully charged.


NOTE: Please be careful to use a charger that is compatible with the voltage 5V/2A or above, in case causing charge slowly or unable to charge. If the charger is used improperly may cause the device to not function properly and in extreme cases can cause the charger to burn out or cause other damage and/ or injury.

INSTALLATION AND OPERATION

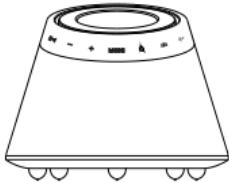

1. Place the speaker unit on a stable, flat non-flammable surface.

NOTE: Please be sure the wall/table/floor you are placing this appliance can bear its weight.

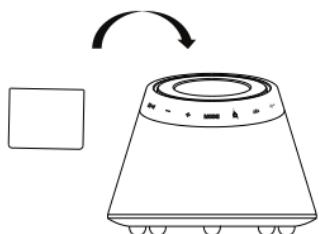

2. Place the scented candle into the holder.



3. Any overspill shall be removed before lighting the appliance.

4. Ignite the burner with a rod lighter. Do not leave the candle while igniting. Keep a sufficient safety distance.



5. Put the glass cover on the holder and match the slot position.

NOTE:

-Beware of hot surfaces.

-If operating in a room, must be follow the instructions carefully.

-The appliance should never be moved while it's in use.

Description of Scented Candle

1. Unit Dimensions: 52x52x32mm / 2x2x1.26 inch
2. Main Ingredients: Natural Soy Wax, 12% Essential Oils, 100% Cotton Wick
3. Burning Time: 6~8 Hours
4. Flavor Selection: Multiple Options
5. Warranty: 18 Months

Instruction of Scented Candle

1. Preparation: Place the scented candle on a stable, heat-resistant surface. Ensure there are no flammable materials around the candle, and use it in a well-ventilated room.
2. Light the candle: Use a lighter or matchstick to light the cotton wick. For the first use, allow the candle to burn for 1~2 hours until the wax pool reaches the edges of the container. This is an even burn and prolongs the candle's life.
3. Extinguishing the candle: Use a candle snuffer or gently blow out the flame to avoid splattering hot wax. Do not use water to extinguish the candle. Allow the candle to cool down before moving.
4. Trimming the Wick: Before each use, trim the wick to about 1/4 inch (approximately 0.6cm) to prevent excessive flame and smoke.

Precautions of Scented Candle

- 1. Keep Away from Flammable Objects:** Do not place the candle near curtains, paper, or other flammable items. Ensure there is enough safety distance when using the candle.
- 2. Do Not Burn for Too Long:** It is recommended not to burn the candle for more than 12 hours at a time to prevent overheating or the container cracking.
- 3. Keep Away from Children and Pets:** Place the scented candle out of reach of children and pets to avoid accidents.
- 4. Extinguish Properly:** Ensure the candle is completely extinguished and the wax has fully solidified before storing or moving it.
- 5. Be Cautious of Container Heat:** The container may become hot during burning. Avoid touching it.

6. Storage Instructions: Store the scented candle in a cool, dry place away from direct sunlight to prevent deformation or melting due to heat.

EMERGENCY EXTINGUISH

- In case of malfunction or accidental overturning of the device, extinguish the fire immediately with an extinguisher or try to cut off the air supply with a special treated fire blanket.
- Do not try to blow out the fire.
- Never extinguish the fire with water.
- If you are unable to extinguish the fire, call the firefighters immediately.

SAFETY INSTRUCTIONS

- not suitable for continuous operation;
- only use the intended fuel;
- only to be operated in rooms according to the manual;
- the operating instructions shall be read carefully before installation and use;
- beware of hot surfaces;
- do not put anything on top of the appliance.

HAZARD WARNINGS



Don't touch it when there's flame Don't add fuel when there is flame Never put out a fire with water Don't blow with your mouth Do not smoke near fuel or flames Keep away from children or pets Don't cook food by fire Do not use gas, oil, wine and other fuels

- Make sure that suitable extinguisher are near fireplace before using the product.
- Suitable extinguishing are foam extinguisher, CO2 extinguisher or specially treated fire blankets.
- Caution, risk of burns! The appliance and especially the outer surface like the glass will become hot during operation. Do not touch the surfaces of the glass.
- DO NOT ignite the appliance if it is in a hot state.
- The appliance may only be operated on a stable surface made of non-flammable material.
- The appliance should never be moved while it's in use.
- Keep pets and children at a safe distance.
- Do not put any flammable items on top of the appliance;
- Be careful with flammable clothing or hair.
- If the appliance is positioned to close to inflammable materials, they might be catch

fire. Keep flammable products and materials at a safe distance of at least 1.5 meter.

- The use of the appliance in enclosed areas is prohibited.
- The burning process lowers the oxygen level in the room. Make sure to leave doors or windows open to ensure the necessary air exchange in the room.
- The operation of multiple devices is allowed only if additional ventilation of the room is provided.
- The product should only be used in a draft-free and wind-protected environment.
- Persons who are under the influence of alcohol, drugs or medicines or persons who are not in good physical or mental condition are not recommended to use the appliance.
- In case of burn injuries, call your doctor immediately or drive to a hospital for treatment.
- Do not change the construction of the device.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**THANK YOU
FOR YOUR PURCHASE!**

**There are so many choices out
there, but you chose us.
That means a lot and we want to
let you know that we truly
appreciate your support.**