

ROLLING NAIL WORKSTATION USER MANUAL



WARNING

Always unplug the appliance after use.

Head office: No. 12-13, SAC Park of China, Nanling Village, Bujii, Shenzhen, China
Factory 1: No. 8, High-tech Industrial Zone, Piken Village, Qingyuan City, Guangdong, China
Factory 2: Fuyu Building, Jianse-Bei Road, Yongfa Computer Town, Huadu District, Guangzhou, China
Tel: +86 755 8936 8631 Website: www.koncai.com

⚠ Safety Instructions

- 1 Before using the product, open it up and place it in a dry and well-ventilated place to let the odour disperse thoroughly.
- 2 We recommend you to keep one of the keys in a safe place as backup use.
- 3 Never store the product in a humid place and keep it away from fire or heating source.
- 4 For daily maintenance, use a piece of wet cloth to clear the surface of the product.
- 5 The power applied on this product must match with the rated voltage.
- 6 Never store items over the weight capacity in the makeup case.

Package Contents



Specifications

Nail Case Overall Dimensions (L x W x H)	15 1/16" x 12 3/16" x 27 3/16" (38.2 x 31 x 69 cm)
Rated Voltage	110 to 250 V
Rated Power	2,200 W
Net Weight	35.2 Lbs (16 kg)



Operation Instructions


Step 1: Assemble the wheels

Install the front & rear wheels by screw it in clockwise to assemble on the nail trolley case.



Step 2: Unlock the buckle

Unlock the buckle and unfold the side table.

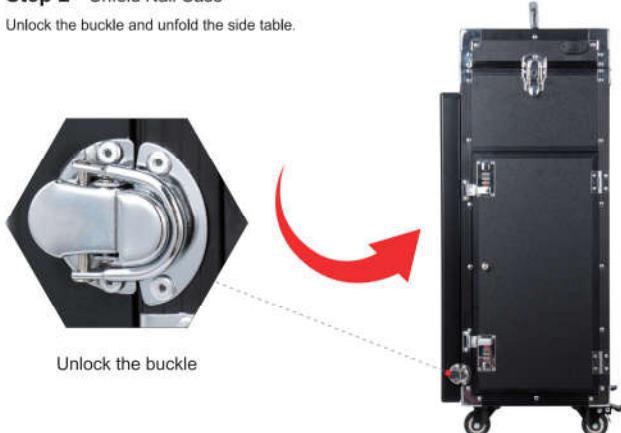

Step 3: Lock Up Supporting Legs

● The supporting leg is under the side panel. Hold the supporting leg and stretch it in Fig. 1 first. Then unfold it until it is perpendicular to the side panel.



● Meanwhile, screw up the wheels at this position to fix the table. Use the knob to secure the metal plate that is under the side panel on the leg.

● Please note that you are required to stretch the supporting leg as shown in Fig. 3 before you fold it back to the side panel.


Step 4: Open the Cover and connect with power



- ① As shown in Fig. 1 first.
Insert key to the corresponding slot. Rotate it to the right for a circle to lock. And rotate it backwards to the left side to unlock.
- ② As shown in Fig. 2 first.
Connect the power cord to socket on the right side of cover. Connect the other side of the power cord to a power supply.
- ③ As shown in Fig. 3 first.
Take off the foam on the mirror.

- ④ As shown in Fig. 4 first.
2 speaks for playing music

- ⑤ As shown in Fig. 5 first.
Operation Panel of the Speaker

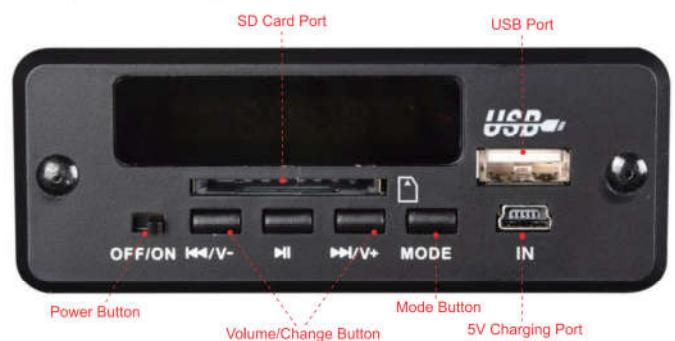

1. Change files and adjust volume:

Short press the **Volume/Change Button** to change files.
Long press the **Volume/Change Button** to turn up or down the music.

2. Play Music Wirelessly:

(1) Press the **Mode Button** to switch to wireless connection mode.
(2) Search for the speaker name of "KC" on your phone and connect the speaker to your phone wirelessly. And then you can play music via your mobile phone.

3. Play Music via USB Connection:

(1) Press the **Mode Button** to switch to the USB mode.
(2) Connect your USB device to the USB port. And you can play music in your USB device.

4. Play Music via SD Card Connection:

Insert your SD card through corresponding port and the speaker will play music automatically.

5. Charge Speaker:

Use 5V charging port to connect power bank (not included) to charge the speaker in which case you don't need to connect to power socket for power supply.

Please note that when the speaker is turned on loudly, it is normal for the speaker to produce noise.

Step 5:

How to open the combination lock on the cabinet



1. Unlock the door with initial passwords "000" and then take off the red pin.
2. Push the button up and hold it the whole time during resetting passwords.
3. Rotate the number gears to set your desired passwords. It is advisable that you take down the passwords in case you forget.
4. Release the button and check if you succeed resetting passwords.
6. Repeat the former steps to reset your passwords when needed with the corresponding passwords.

NOTE:

It is highly recommended that you take down the passwords every time you reset passwords in case of forgetting.

Step 6:

Lock up the casters at the bottom of the makeup case to prevent it from sliding.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.