

# Instructions

product model : Smart 10


Use precautions: The manual contains important security measures and information on the correct use of the product and, to avoid accidents, read the instructions carefully before using this product.

- Please do not put the product in a hot, wet or dusty environment.
- Especially in the summer use, please do not put the equipment in the window closed car.
- Please avoid falling or violent product collisions, please avoid severe tremor of the display, which may cause abnormal or damage to the display.
- Please choose the appropriate volume, and the volume should not be too high when using the headphones. If you feel tinnitus, please reduce the volume or stop using it.
- Charge the device in the following conditions: A. The battery power icon shows no power. B. The system automatically turns off or soon after turning on. C. The operation button did not respond. D. The icon in the upper right corner of the machine shows red.
- Do not suddenly disconnect when the device is uploaded or downloaded, which can cause an application error.
- The Company will not pay any responsibility for the data loss of the product caused by incorrect use. Please follow the user's instructions to use the equipment correctly.
- Please do not remove this product, do not use alcohol, thinner or benzene washing products.
- Do not use the product where electronic devices are disabled (such as aircraft).
- Please do not use the tablet while driving or walking.
- USB is used only used for data transfer.

The Company reserves the right to improve the product, product specifications and design information subject to change without notice.(This tablet is not waterproof)

[Note] All pictures in this manual are for reference only, and product specifications and design information are subject to change without notice.

## 1. desktop:

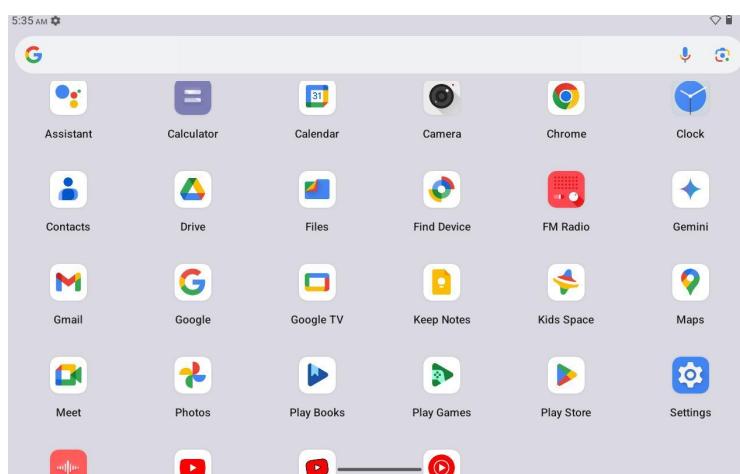

1.1 touch screen Capacitive touch screen: Click or drag on the touch screen.

1.2 Power Start: Long press the power button, and the system will enter the main interface. Shutdown: In the main menu interface, press and hold the power button for about 5 seconds to shut it down. The system will prompt the "power off" option, and click "OK" to turn it off safely. Lock the

screen: Short press the power button to lock the screen or unlock the screen.

Note:

1. When the power supply is absent, the system will automatically shut it off.
2. Scan and restore disks and may take a long time to enter the system.

1.3 return key A short return key returns to the previous interface.

1.4 volume +. -key Press the key button to change the volume.

1.5Memory card, Mirco SD SD card slot, external T-FLASH card

1.6 Type-C USB T y p e - C USB interface: You can use it to connect to your computer for data transfer, charge, and externally connect to the U disk.

1.7 DC Connect to the DC5.0V/2000MA DC charger.

2、First use guidance

2.1 Battery management and charging Before the first use, please fully charge the device battery, just connect to the DC charger. Keep the first two charges for about 6 hours, and then only need 4 hours of charging time. [Note] This tablet uses a built-in polymer battery, charging must select the standard DC charger (input AC110~240V50 / 60HZ 0 . 3 A. output DC5.0/2000MA) This deviceprovides a DC charger, please charge with the included DC charger. During charging, the battery icon rolls over. When charging is complete, the battery icon turns green and stops scrolling. To extend the service life of the device, it is recommended to recharge the battery. [remarks]


1. If the battery plate is not used for a long time to avoid the damage caused by power consumption, please charge / use the battery once a month.

2. After the low power is turned off, connect the DC charger, the equipment will remind the low power state, need to wait for a period of time, until the battery has enough power is to enter the main menu,

3. Charging the equipment, and the normal charging time is reached in the standby state. The equipment is operated during charging. It may lead to the long charging time due to the power consumption of the screen and the equipment.

2.2 Connect to the PC Connect to a PC with a USB cable, the USB Connections window will pop up and click Open USB Storage Device to connect to the PC (PC))



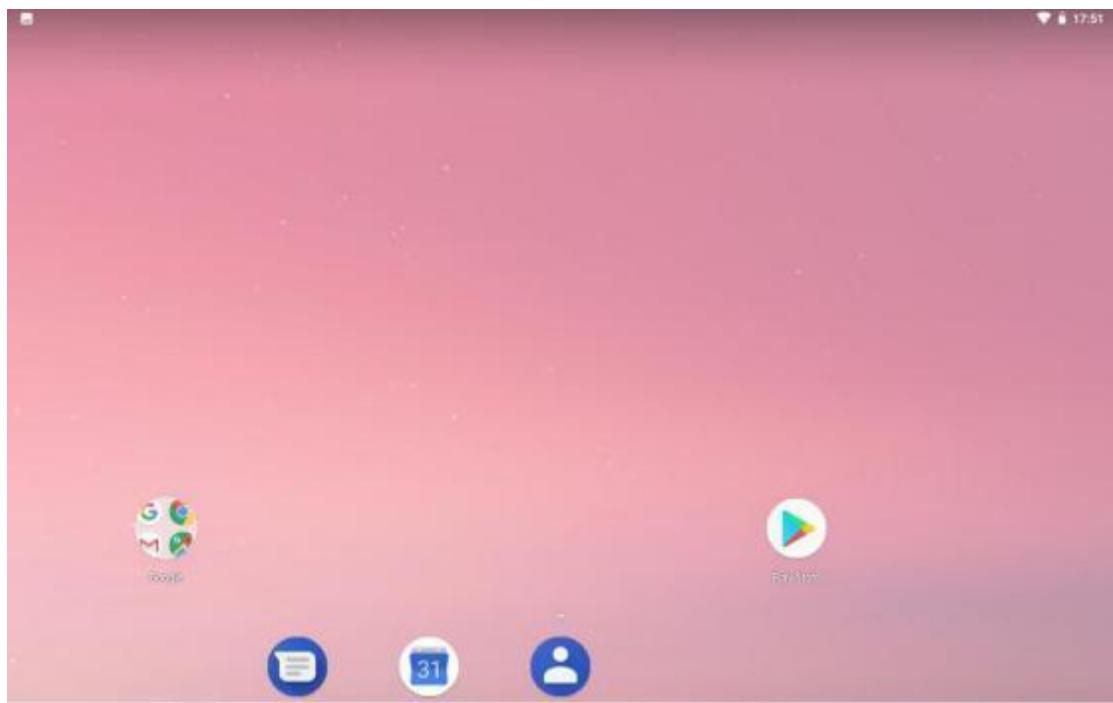


Go into the load mode. You can copy, delete files in your device and store files in your card.

2. Equipment operation interface

After startup, the main interface

In the main interface. You can:


Manage the software icon for the main interface: press the icon for 3 seconds, the icon becomes larger, and you can drag it anywhere in the interface.

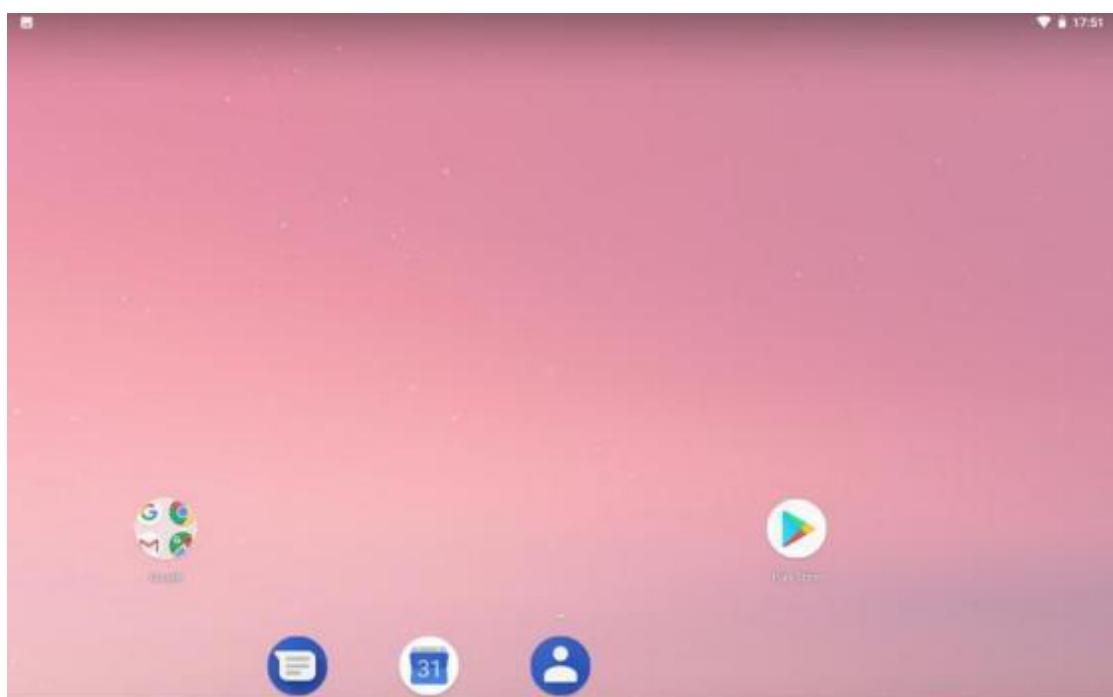

Delete the icon: press the icon for 3 seconds, drag the icon to the recycling bin to delete the

icon, once it turns red, release your hand, you can remove the icon.

You touch the screen for a while, following the dialog box, "Add Your Home Screen," as follows:

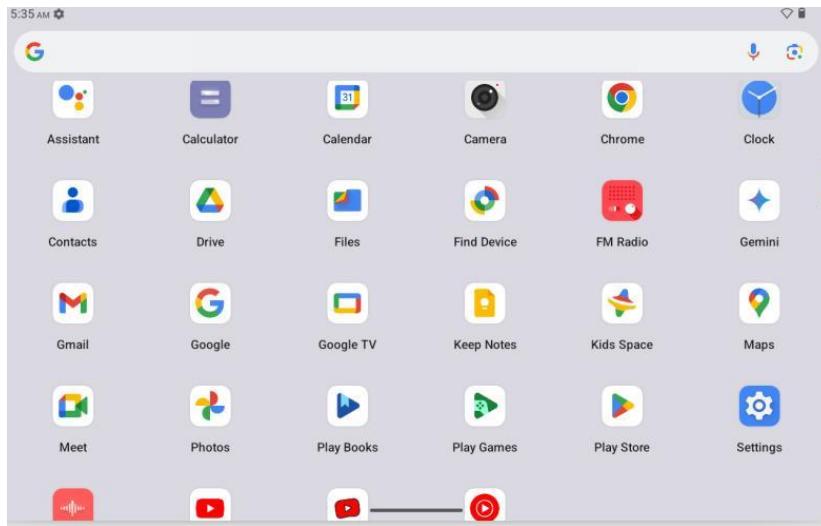


### 3.2 Description of the status bar



The above is the status bar of the screen



The top left shows the main interface T-Flash card, USB connection status, etc. The top right corner shows the battery, battery charging icon, current time, WIFI / Bluetooth icon, menu settings.

3.3 Use the touch screen Touch screen, describe the main touch interface below, and give some tips on how to use the touch screen. Whether you're on the touch screen interface, going back to the main interface has to press back keys In different applications, by clicking on the icon in the top right corner , The following operation setting interface appears back on the screen. [Note]: Set up key in the home screen With the device menu The same function.

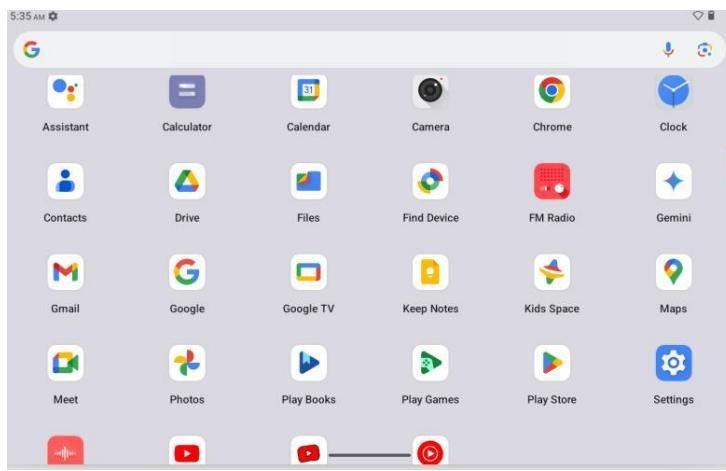


In the main interface, you can touch the different browsers and open the app.In different browsers (pictures, videos, music, files), transfer and drag the scroll bar to make the list of files scroll up or down.

4. Basic setting of the equipment Settings: Click on the Settings icon , Enter the Setup Interface.

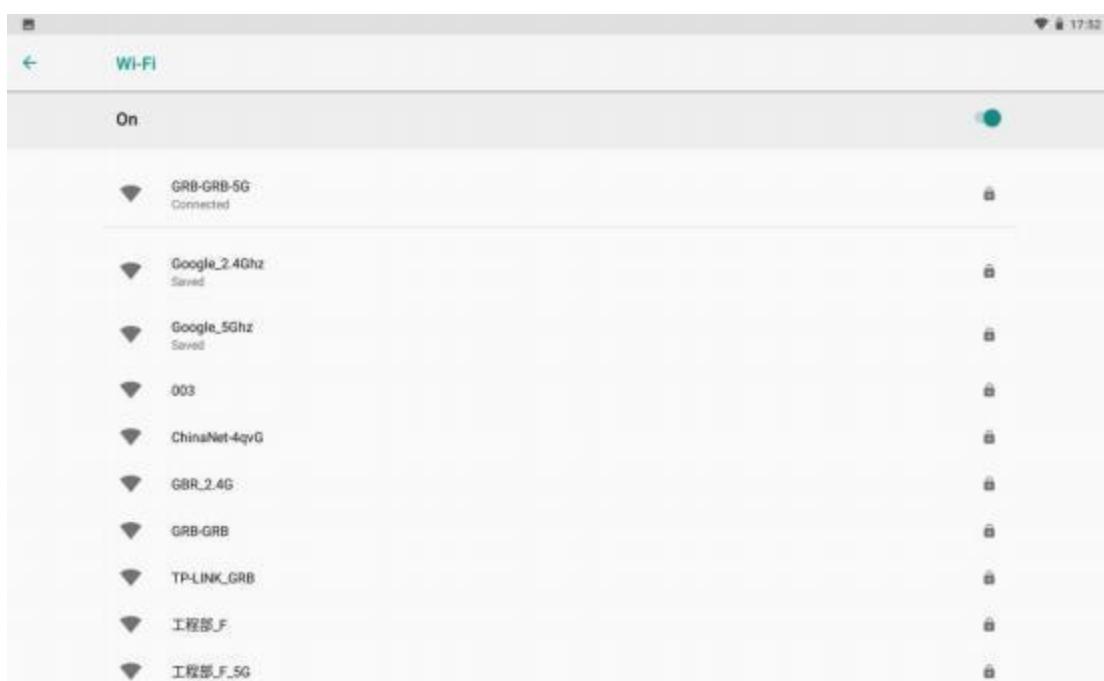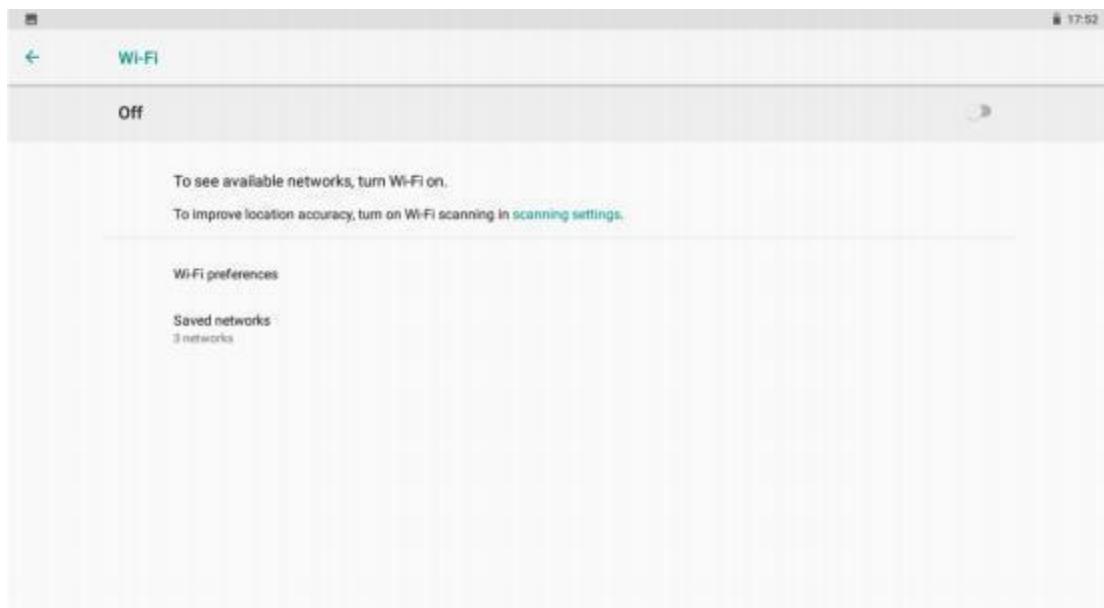


4.1 Sound, volume, ringtones and notifications, touch prompts, lock screen prompts.

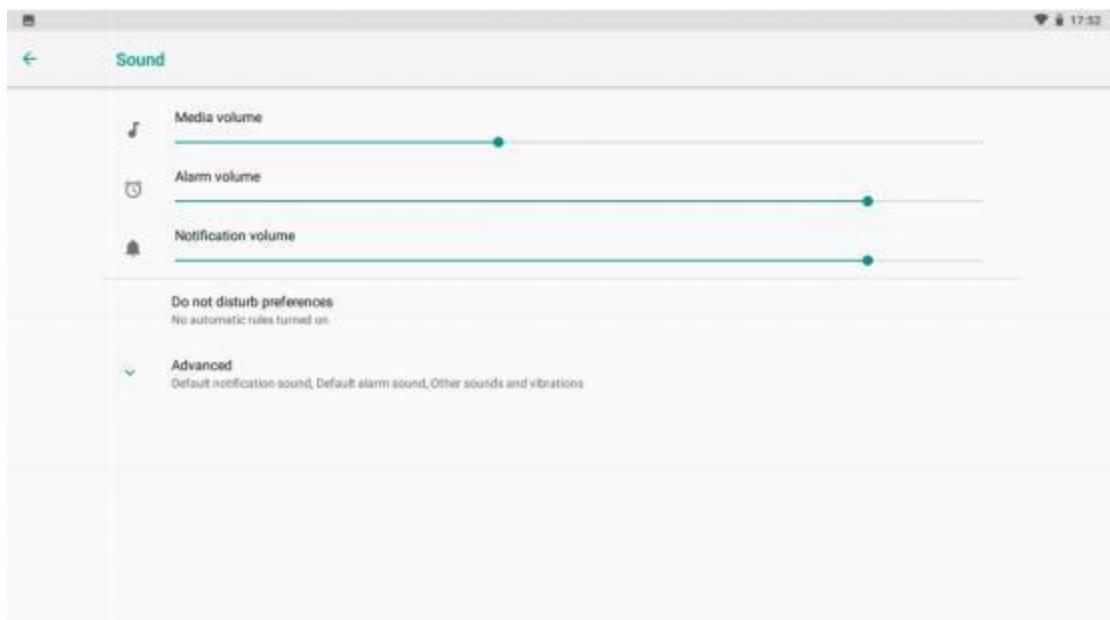

## 4.2 App Manage applications


### 4.3

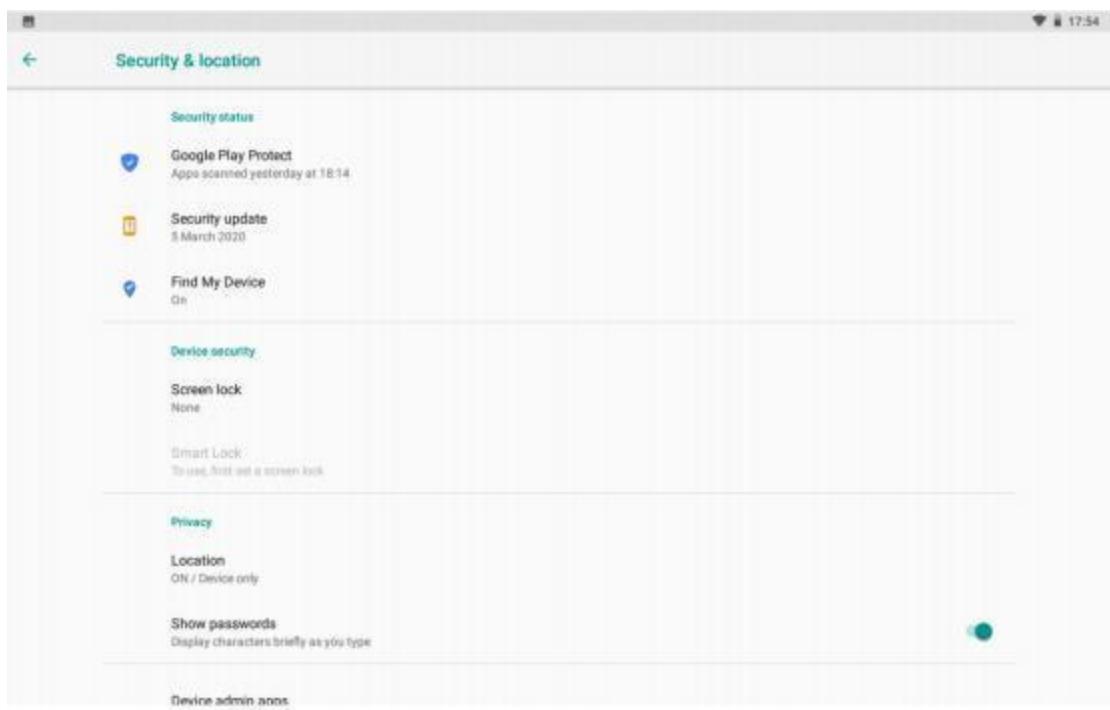

Location source: Click "Unknown Source", and then click "OK" Manage applications and uninstall applications.[Note] When you upgrade the firmware, please close the USB connection.


### 4.3 How to uninstall the program

1. Go to Settings> Applications> Manage Application, and then the program list is loaded
2. Click on the software icon that you want to uninstall and will enter the following interface
3. Click Uninstall, and then you can delete the application

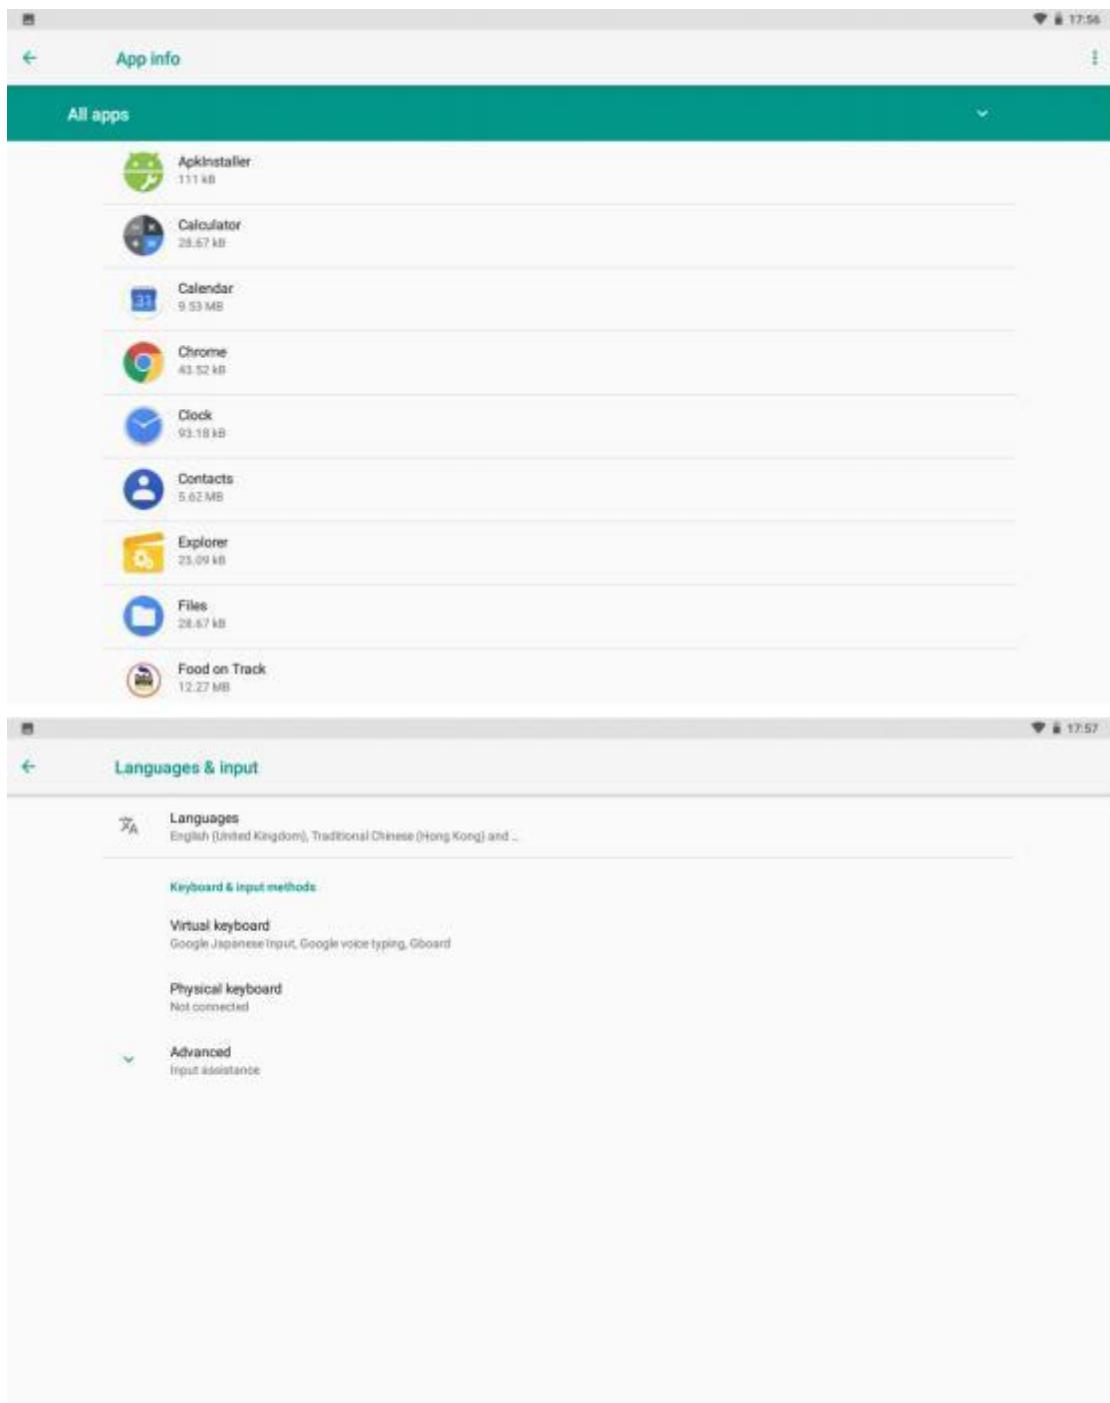

**Language Selection:** There are multiple languages available. **Note:** The Android system can support multiple languages, now with only multiple available in the menu. **Android keyboard:** Android keyboard setting, key sound, automatic capitalization. **Show suggestions:** Show the recommended word when typing. **Autocomplete:** Space and punctuation automatically insert accent words.

4.6 Time and date setting Set the date, set the time, select what is to go, and select the date format

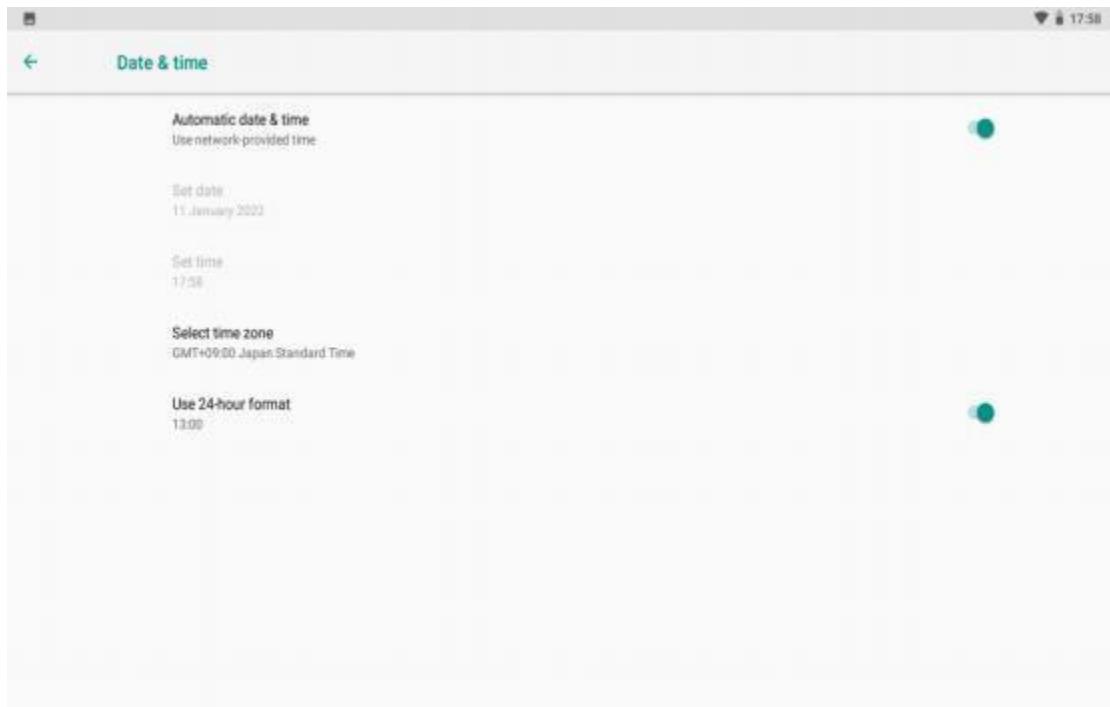

## 5. Installation and management of the applications

5.1 APP installer This tablet can support third-party Android applications in the market, and most applications can be installed over the network and can be copied to a NAND Flash or SD card.

Click on the APP installer icon for the installation, management, and exit options. Installation: Click Install to enter the APK installation interface for the internal memory disk and SD disk respectively. Select the APK you are going to install, click it to install, back to the main menu, will show the application you have just chosen to install. Click on the APP installer icon for the installation, management, and exit options. Installation: Click Install to enter the APK installation interface for the internal memory disk and SD disk respectively. Select the APK you are going to install, click it to install, back to the main menu, will show the application you have just chosen to install. Note: Some third-party applications must be installed correctly on memory cards, and downloaded third-party applications may not be installed on the device. Management: Click "Management" to enter the third-party interface, click the installation icon, and enter the action interface.

## 6.FAQ and solutions

### 6.1 The device cannot be turned on

1. Check the battery charge
2. Connect the charger first, and then check again.
3. Can not be opened after charging, please contact the supplier

6.2 Equipment shutdown has occurred on the screen or boot picture after startup

1. Please charge for insufficient electricity
2. The headset can not hear the sound. Please check if the volume is set to 0
3. Check that the music files are damaged and try to play other music. If the music is damaged, it may cause serious noise and jumping.

6.3 You can copy files or play music, etc

1. Check that the connection between the computer and the device is correct.

2. Check that the memory storage space is full

3. Check the USB line for any problems

4. Disconnect the USB connectio

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.