


DRIFT USER MANUAL

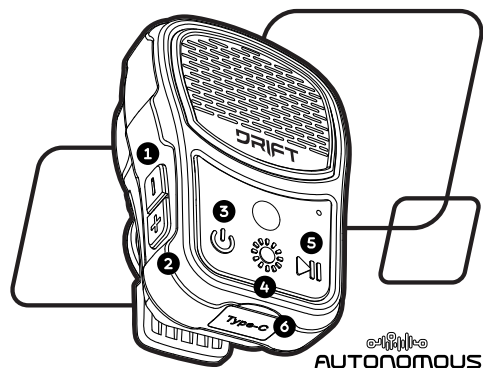

- 1 Volume Down / Previous Track
- 2 Volume Up / Skip Track
- 3 Power
- 4 Flashlight On/Off
- 5 Play / Pause
- 6 USB-C Charging Port

POWER

ON - To turn on the speaker, PRESS and HOLD the "POWER" button until the "on" audio cues and the light illuminates indicating the speaker is on.

OFF - To turn off the speaker, PRESS and HOLD the "POWER" button until the "off" audio cues and the light dims indicating the speaker is off.

Note: When connected with a Rift speaker, PRESS the "POWER" button to control Rift's speaker light.

WIRELESS

PAIRING - Connect one speaker unit as the Master Speaker. After powering on the speaker, enable the wireless function on your phone and search for "Autonomous Drift" in your phone's wireless list. The speaker will announce with a "Dong" once the pairing is successful. To disconnect or reconnect the wireless function, press and hold the "Play/Pause" button on the unit (this operation is only available when the wireless connection is successful).

WHEN PAIRING MULTIPLE UNITS

Double click the "POWER" button on the Master speaker and Sub speaker (up to 100 speakers). The Master Speaker's LED will be static, while the Sub speaker(s) LED will flash.

TO DISCONNECT

After all speakers are connected, double click the "POWER" button on the Master speaker. This will disconnect all speakers. If you double-click the "POWER" button on a Sub speaker, only that Sub speaker will disconnect. The other speakers will continue to work normally. If all speakers are disconnected, you need to pair a new Master speaker. Any speaker can be designated as the Master speaker. If the speaker was previously connected to your phone, it will automatically reconnect unless you delete its name from your phone's wireless list.

BATTERY AND CHARGING

Charge the speaker with the included USB-C cord. While charging, the status LED will be red, and will turn off when charging is complete. When the battery is low, the speaker will beep every 30 seconds and the status LED will show SOLID blue.

To charge the speaker, plug in the USB-C cord into the speakers USB-C port. When the speaker is fully charged, the LED indicator light will turn off.

FUNCTIONS

PLAY/PAUSE - Press the "Play/Pause" button on the device while connected to Wireless to play or pause audio.

SKIP TRACK - Press the "+" button once.

PREVIOUS TRACK - Press the "-" button once.

Note: Not all streaming apps will allow playing the previous track.

RAISE VOLUME - Press and hold the "+" button on the speaker until your desired volume level.

LOWER VOLUME - Press and hold the "-" button on the speaker until your desired volume level.

FLASHLIGHT - Press the "Flashlight" button once to turn on/off the light. When the flashlight is illuminated, LONG press the "Flashlight" button to activate rapid flashing mode. Double-click the

"Flashlight" button to enter into SOS mode. If the speaker battery is running low, the flashlight will not illuminate.

PHONE CALLS - The speaker has a built-in microphone for receiving phone calls. To answer a phone call, press "Play/Pause" button on the speaker while call is ringing and press it again to end the call. If you don't want to answer the call, double click the "Play/Pause" button to hang up. If you want to call back the last call, double click the "Play/Pause" button to dial out.

TROUBLESHOOTING PAIRING

If for any reason the Drift speaker becomes unpaired with connect Rift speakers, follow these steps:

STEP 1: On your device's Wireless settings, select the Rift speakers and click "forget this device".

STEP 2: Power off the Rift speakers, wait 10 seconds, then turn the speakers back on.

STEP 3: Pair your device to one of the Rift speakers and play audio to test the connection.

STEP 4: As the first Rift speaker is playing music, press the power button 2 times on the second RIFT speaker, and the speakers will automatically pair with each other.

Note: If paired successfully, sound will play confirming the connection. Audio should be playing from both speakers after this indicator.

SPECIFICATIONS

Part#: AD-BU
Audio: 5W Speaker
& Built-in Mic
Flashlight: 100 Lumens
Battery: 1000mAh
Playing Time: 8 hours
Charging Time: 2 hours

Charging Port: USB-C
Input: Wireless
Waterproof: IPX6
Included: DRIFT Unit,
USB-C Cable,
User Manual

For more info about the DRIFT, use the QR code to go right to our website or email sales@frameworxproducts.com.

FRAMEWORX
Powered by Plugbox



FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.