

Connection and function instructions:



Push the switch to the corresponding position of "on", then the speaker turns on and enters the Bluetooth mode.

Bluetooth

1. Open the speaker and enter Bluetooth mode to perform Bluetooth pairing.
2. Open the need to connect the speaker to play music mobile phone or computer, TV, all-in-one and other sound source equipment. Set the menu, turn on the Bluetooth switch and search for Bluetooth devices.
3. In the search device list, click the corresponding model and connect. After the connection is successful, the connection prompt will ring Tone pairing is successful.
4. Use audio source devices to play music (turn the volume to the minimum before playing).
5. the speaker will have a memory function, and after the successful connection with the sound source device, there is no need to pair again .when the next use. If the rollback fails, the system automatically switches to the pairing state.
6. If you want to replace the sound source device, you need to follow the above steps to reconnect the pair

FM

After the speaker is turned on, press the "M", press the prompt tone to enter the FM mode, long press the pause key to search channels of FM, up and down song to switch channel of FM.

USB/TF Card USB TF

Insert the USB device or TF card containing music into the corresponding card slot of the speaker, and then automatically play the music of the corresponding interface device.

Line in-AUX AUX

Connect one end of the 3.5mm audio input cable to the "AUX" and the other end to the audio output interface of the audio source player device, enter the "AUX" audio input.

Coaxial COAX





Insert one end of the coaxial cable to the "COAX" of the speaker and the other end to the coaxial output interface of the audio source playback device, enter the coaxial mode.

Charge DC-5V

1. Use the TYPE C USB cable to a standard USB charger for charging.
2. Recommended that this product be charged every three months if not in use.












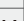 
Press Keys instruction



	Press Mode To Switch With BT And FM / USB / TF / Line In / COAX Mode
	Press once to pause Hold press to search channels of FM
	Press once to last song Hold press to turn down volume
	Press once to next song Hold press to turn up volume

Instructions for Use of remote control



	on or off		Scene switch (adjustable sound quality)
	Function		Turn down volume
	Sound off		Turn up volume
	Pause		Single loop play/Sequential play /Random play
	Prev		Usb or TF card choice
	Next		Select song number

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.