


User Manual for 10.4 Inch Tablet

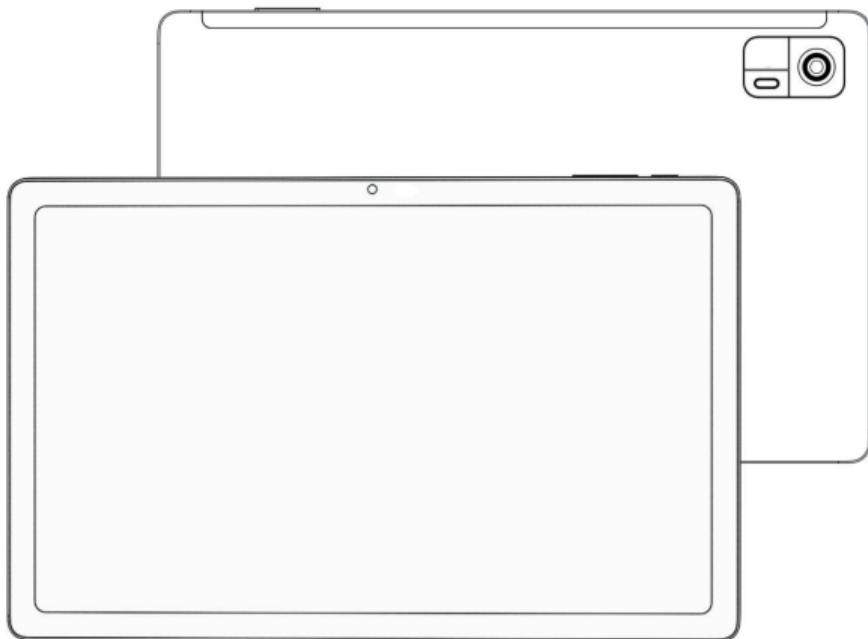

Contents

Contents		
1	Introduction	2-3
1.1	Acknowledgements	2
1.2	Precautions	2
1.3	Safety Instructions	2-3
1.4	Abbreviations/Terms	3
2	Tablet Introduction	4
2.1	accessories introduction	4
2.2	usage and preparation	4
2.3	Status and Notifications	4
3	Quick Start	5-8
3.1	Key function and product display	5
3.2	Power on and off	5-6
3.3	Screen on and off	6-7
3.4	Use of Touch Screen	7-8
4	Basic Settings	8-14
4.1	Wireless and Networking	8-9
4.2	Bluetooth	9-10
4.3	Display	11-12
4.4	Date and time	12-13
4.5	Set language	13
4.6	Security Settings	13-14
5	Multimedia	14
5.1	Camera	14
6	Internet	14-15
6.1	Browser	14
6.2	Email	15
7	Other Applications	15-16
7.1	Recorder	15-16
8	Program installation	16-17
8.1	Installation	16
8.2	Uninstallation	17
9	Troubleshooting	17-18
10	How to reset your tablet	18

1 Introduction

1.1 Acknowledgements

Thank you very much for choosing our 10.4inch Tablet PC,
this manual systematically introduces the various features,tips
and precautions of the tablet, please read it before using .

1.2 Precautions

Care and maintenance

Do not expose tablet to water and vapor.

Wet hand was forbidden to use tablet for short circuit
malfunction.

Do not disassemble tablet without permission, otherwise
the 1 year warranty will be not covered

1.3 Safety Instructions

Before using the Tablet, please read the information in this
section and tell your kids about this your child know about it.
For more detailed information, see Safety Instructions and
Precautions.

Do not use the Tablet while driving a car as this may interfere
with safe driving.

In medical settings, please follow the rules or regulations.
Turn off the Tablet in areas near medical equipment.

When boarding an aircraft, please turn off Tablet or turn on
airplane mode so that wireless signals do not interfere with
aircraft control signals.

Please turn off the Tablet in the vicinity of electronic equipment
using high precision, otherwise it may cause the electronic
equipment to malfunction.

Do not disassemble the Tablet and accessories without permission. Only authorized agencies may repair this Tablet. Keep the Tablet away from magnetic devices, the radiation of the Tablet will erase the information stored on the magnetic devices.

Do not use the Tablet in hot places or places where flammable gases are present (e.g. near gas stations).

Keep the Tablet and accessories out of the reach of children, and do not allow children to use the Tablet unsupervised.

When using this Tablet, please comply with relevant laws and regulations and respect the privacy and legal rights of others.

When using the USB cable, please strictly follow the instructions in this manual, otherwise your Tablet or personal computer may be damaged.

Do not use this Tablet in a humid environment such as a bathroom, and avoid getting this Tablet wet with liquids.

1.4 Abbreviations/Terms

Abbreviations/ terms	Full Name	Description
WIFI	Wireless Fidelity	Wireless LAN based on IEEE 802.11 a/b/g/n+AC standard
TF	TransFlash	Also known as Micro SD, an ultra-compact memory card

2 Tablet Introduction

2.1 accessories introduction

Tablet complete unit

Device charger

Type-C cable

User manual

2.2 Use and Preparation

Get the tablet fully charged before usage

Charge the battery before using the Tablet for the first time.

2.3 Tablet status and notification

When an alert message appears in your notification panel, tap the column box and swipe the screen to open the notification list. Click on the option you need to see the detailed message. After that, you can tap the message box and swipe close the message.

	Email		Airplane Mode
	USB is connected		Reading Mode
	Returned button		Download
	Task Manager		Home Button
	Battery level		WIFI is connected

3.Quick Start


3.1 Key function and product display



3.2 Power on and off

Long press to switch on/off tablet

Short press to unlock/lock tablet standby

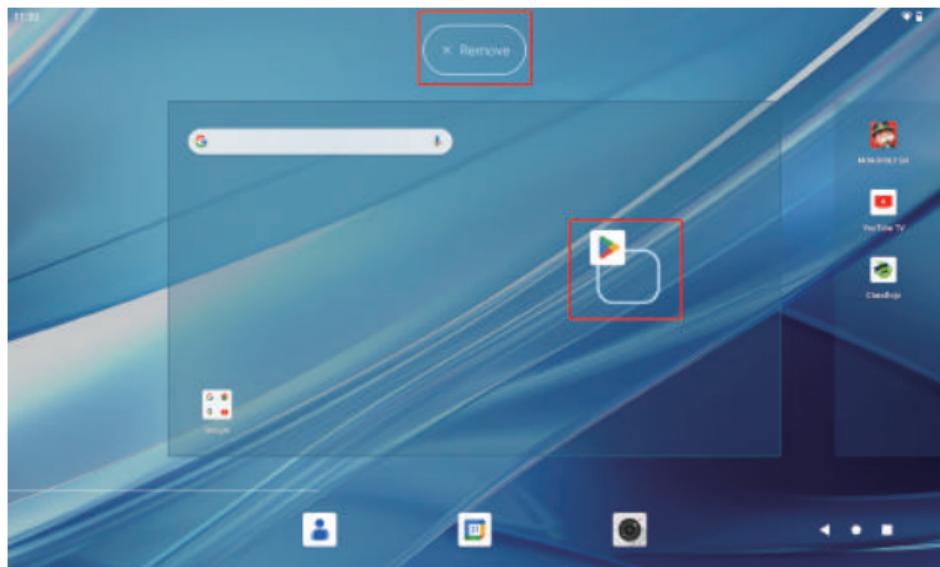


Change desktop wallpaper

1. On the home screen, long press a blank space on the home screen to bring up a pop-up window where you can set the wallpaper.
2. Tap Gallery or Wallpaper Gallery to select the picture.

3.3 Screen on and off

Swipe your finger from the bottom to the top to bring up the applications in the figure below, and you can select the program you want to access.

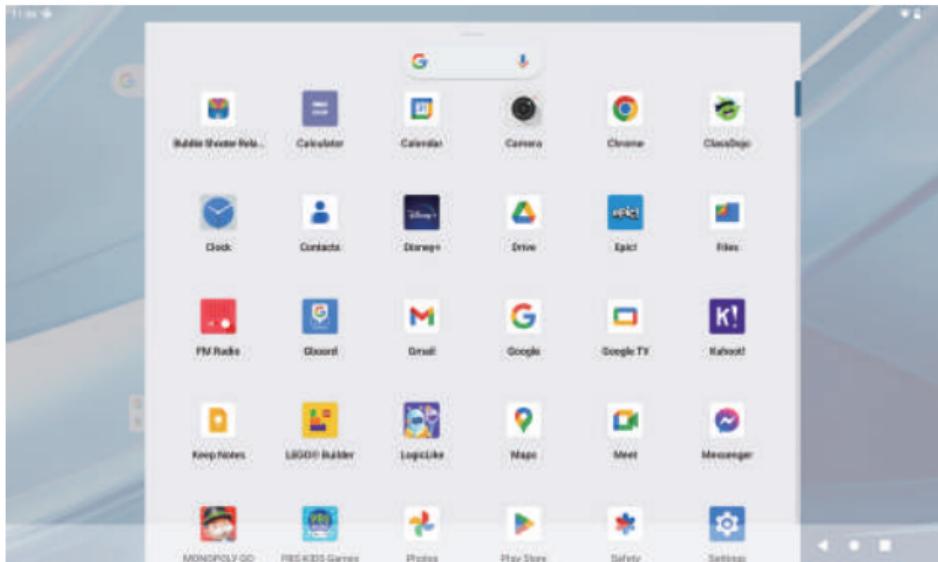

3.4 Use of Touch Screen


Storage settings for Tablets

Before transferring the file, you must first set up the storage mode for your Tablet.

1. Connect the Table to your computer using the USB transfer cable. A notification prompt will appear in the notification bar.
2. Open the notification panel and select USB tethering, then the USB connection is successful.

Note: 1. When your is connected to the USB cable, if you open the USB storage device, you will not be able to access the memory card through the Tablet, if you want to access the memory card in the Tablet, just disconnect the USB connection.

2. Please make sure there is SD card in Tablet before copying, and it can be detected normally.

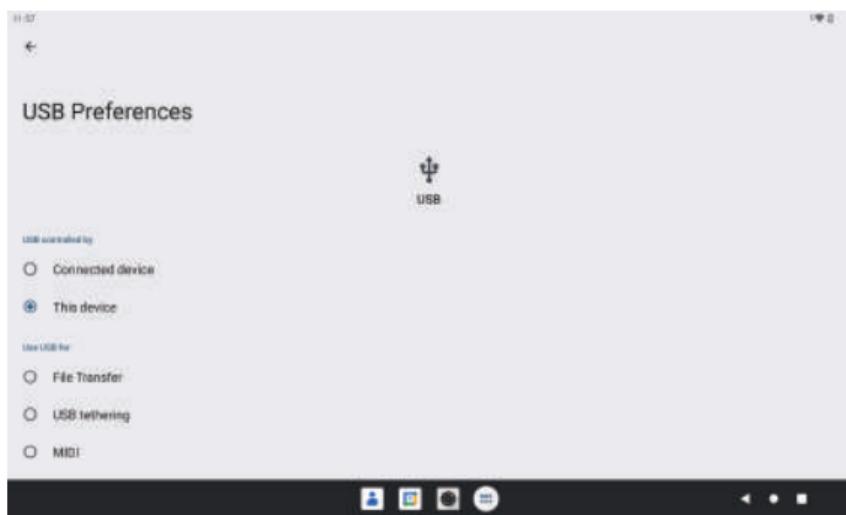


4 Basic Settings

4.1 Wireless and network

Establish wifi connection

1. Select Settings application in the main menu interface
2. First click "Settings", then click "Network&Internet", Third click "Wifi", select the Wi-Fi network you want to connect, if

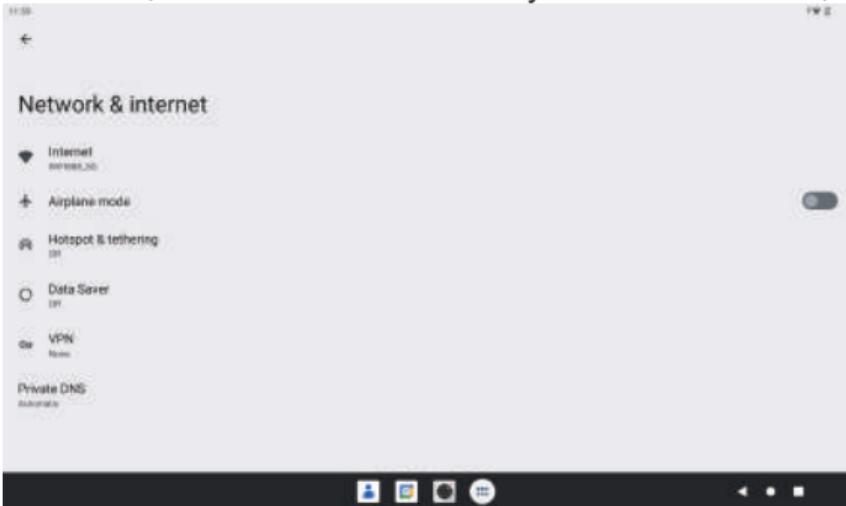




there is encryption, a pop-up window will appear to enter the password, enter the corresponding password and click connect.

4.2 Bluetooth

Application of Bluetooth function

1. Select Settings application in the main menu screen
2. Tap Bluetooth to turn on Bluetooth.
3. If there is someone nearby with Bluetooth on, tap the top right corner to search for devices, Tablet will automatically search for nearby Bluetooth devices. As in picture.
4. Click on the searched Bluetooth device, a pairing request window will pop up automatically, enter the corresponding password and the other party to match the corresponding, then the pairing will be successful.

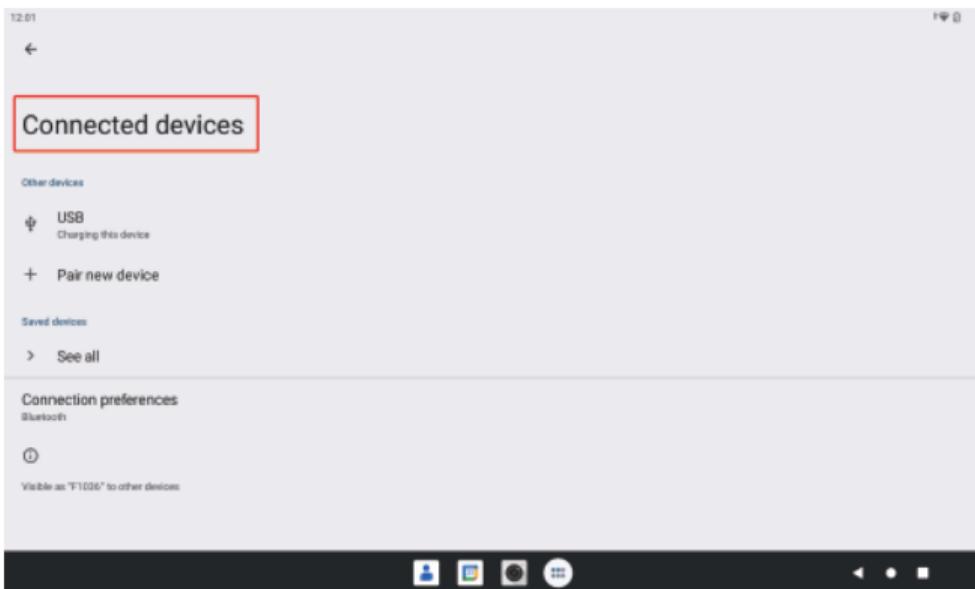


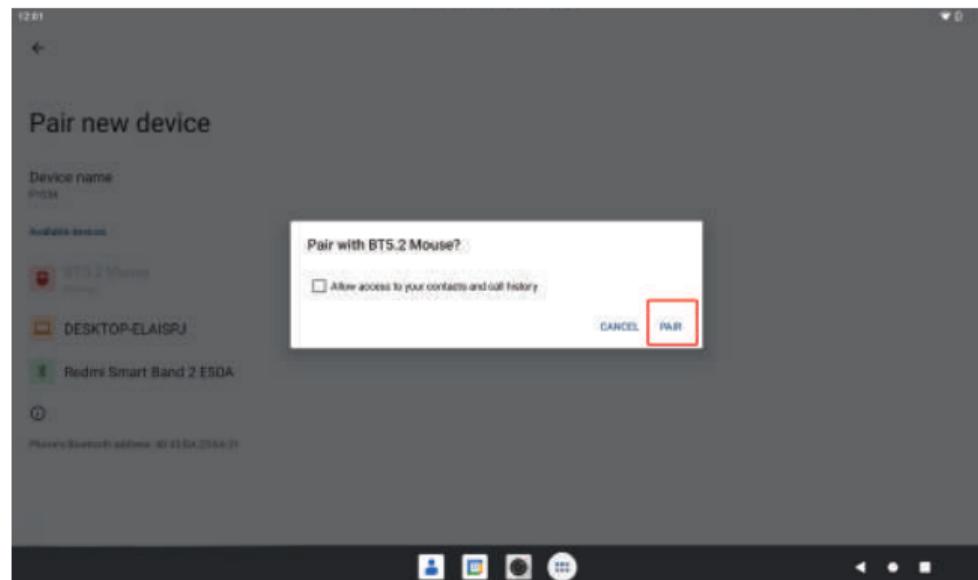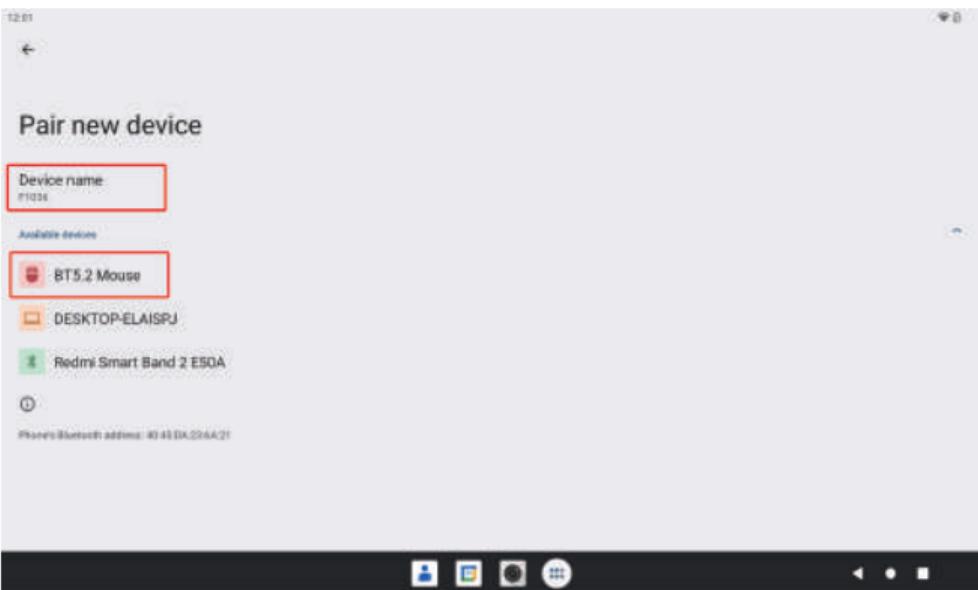

4.3 Display

To adjust the screen brightness

1. Tap Settings application
2. Tap Display and tap Brightness level, drag the brightness slider left and right to adjust the brightness level. Then release it, finally it is OK.

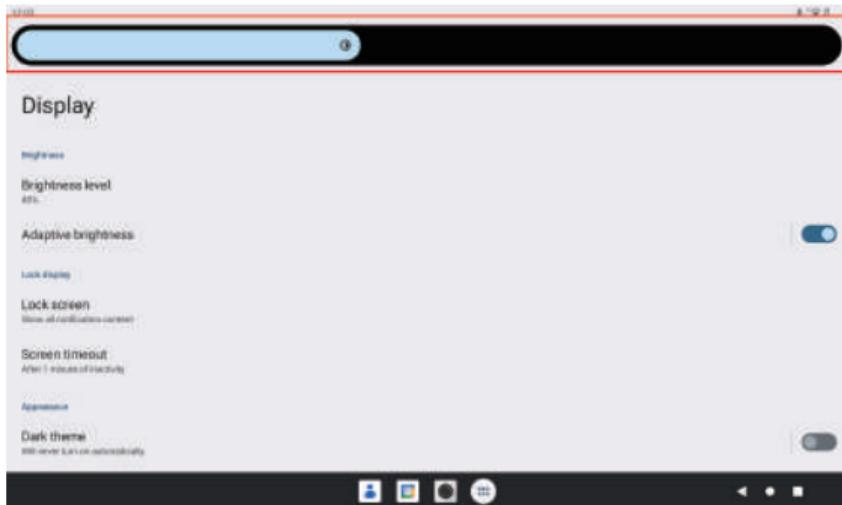

To adjust the screen standby time


1. Tap Settings Application.
2. Tap Display.
3. Tap "Screen timeout".
4. Bring up the screen standby time setting and select the standby time you want. As shown in picture.



4.4 Date and Time

According to the preset, the system automatically uses the date, time zone and time provided by the network.

To adjust the date, time and time zone manually

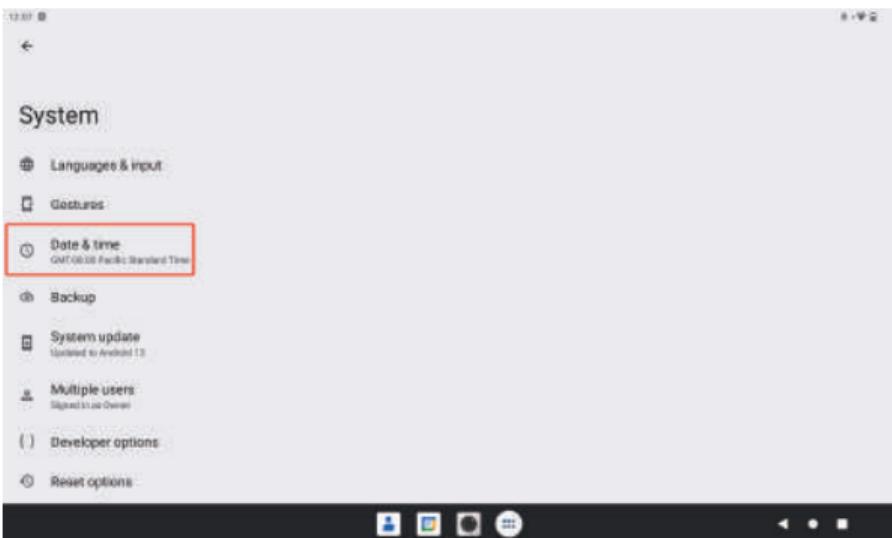

1. Go to the desktop, swipe the screen from the bottom up, tap Settings -System -Date&time to set the date and time.

Note: If you automatically use the time provided by the network, you cannot set the date, time and time zone yourself.

4.5 Set language

1. Tap Set Application
2. Tap "System", then tap Languages& input, Click "Add a language" to find more languages.

4.6 Security settings

Set screen lock

You can use unlock pattern or password to lock the touch screen to protect your Tablet privacy

Note: After setting the screen lock, you will be asked to enter the unlock code every time you turn on or unlock the touch screen.

Set the unlocking method:

1. In the home screen, tap Settings application.
2. Tap Security.
3. Tap Screen Lock.
4. You can choose several modes on the screenshot: Swipe, Pattern, Pin, Password to set up.

Choose a screen lock

-  None
-  Swipe
Current screen lock
-  Pattern
-  PIN
-  Password

5 Multimedia


5.1 Camera

Under the main menu or desktop, tap the application icon

 to enter the camera mode

6 Internet

6.1 Browser:

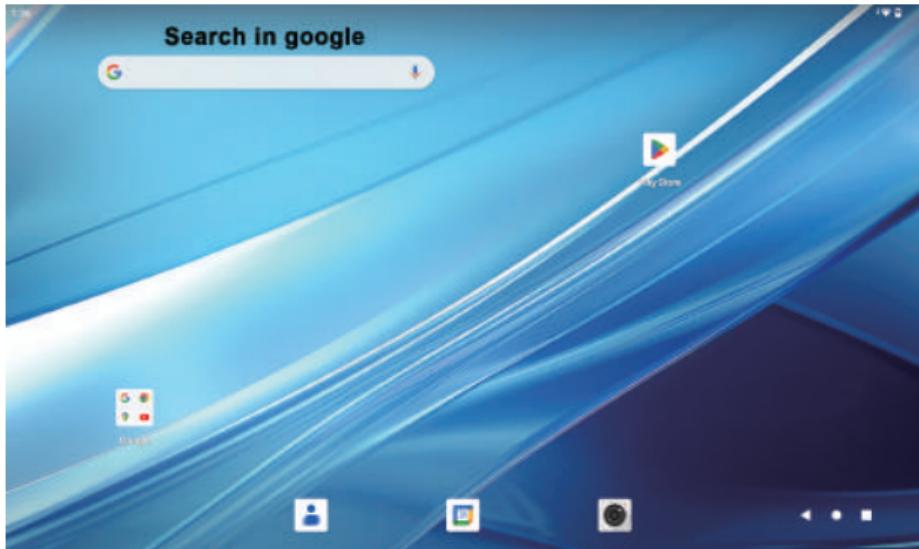


6.2 Email


The email application comes with an email setup wizard that allows you to add external POP3 or IMAP email accounts from common web email service providers (such as Yahoo, hotmail, Gmail, outlook etc.). As shown in the picture, you just click the icon and input your correct email address and password, then it can be used.

7 Other applications

7.1 Recorder

Under the main menu or desktop, click the recording icon  to enter the recording interface, click the record button  to start recording. Click the Stop button  to stop recording. Click the Play button  to play the recording you just made. The system will automatically prompt you to use this recording or abandon it, please choose manually.

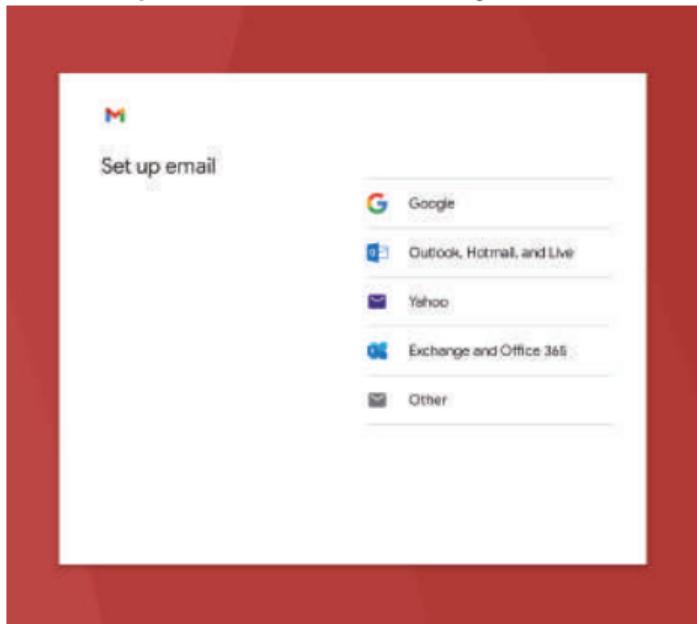

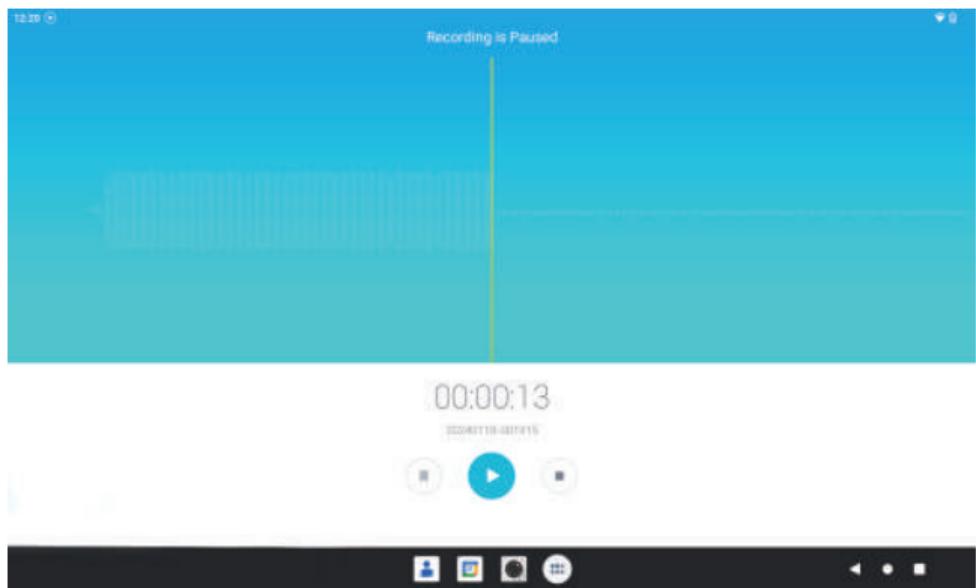

8 Program installation

8.1 Installation

Installing third-party applications You can get third-party applications suitable for Android system on the Internet, and you can press and install them on the Tablet by yourself to use them. Copy the application to the SD card and insert it into the Tablet.

1. Tap the "File Manager" application and select the application you want to install.
2. Press and hold the application you want to install.
 1. When the installation option pops up, tap Install apk.
 2. Follow the installation wizard to finish and run.

Note: Search the Internet for third-party programs for this system are files with .apk suffix.

8.2 Uninstallation

Uninstall the application

1. On the home screen, tap Settings bitmap.
2. Tap Applications to list all the applications installed on the system.
3. Tap the APK you want to uninstall and tap Uninstall.
4. Tap OK to complete the installation.

9 Troubleshooting

1. Tablet first boot slow

After the Tablet system upgrade, the first time you need to install the pre-install applications, the time is about 2-3 minutes, after the boot will be faster.

2. Tablet can not connect to WIFI

Ensure that the wireless router providing network services is working properly. Make sure the distance between the Tablet and the wireless router is kept at a certain, and there is no wall or other obstacle separating them. Make sure the user name and password are entered correctly.

3. The Tablet is hot to the touch

The Tablet may get warm when using multiple applications at once, or when the screen is turned on to its brightest and is charging. This is a normal situation.

4. Unable to set up email or register applications

Make sure your internet connection is working properly and you can connect to the internet.

Make sure the email setup method is correct.

Make sure your system time is consistent with the local time.

5. System anomaly does not work properly

When you are installing some third-party applications, it may cause the system not to function properly. You can reset the system by pressing the reset button (next to the power connector).

6. Web page cannot be opened



Please keep the distance between the route and Tablet within the effective distance

Please restart WIFI and try again

7. Tablet sometimes runs slowly

This is a normal phenomenon. Please end some temporarily unused applications in the advanced task management and uninstall some third-party applications to free up more system resources.

10 How to reset your tablet

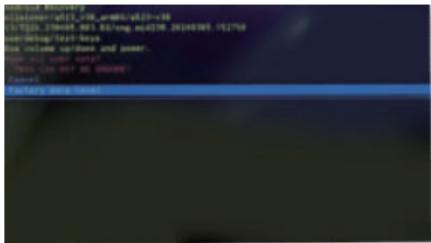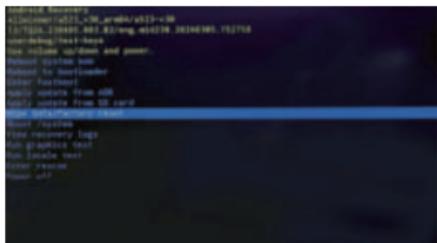

With the tablet turned off, long press the power button and volume up button to enter into the BIOS system.

Volume down key to move the cursor to "Wipe data/factory reset", click the power button to confirm the entry.

Select "Factory data reset", press the power button to confirm the selection of the tablet's factory data reset.

Dear Customer,

Thank you so much for purchase our Tablet, if you have any questions you can contact our Customer Service.

After sales team : f_support@163.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.