


# User Manual for 10 Inch Tablet

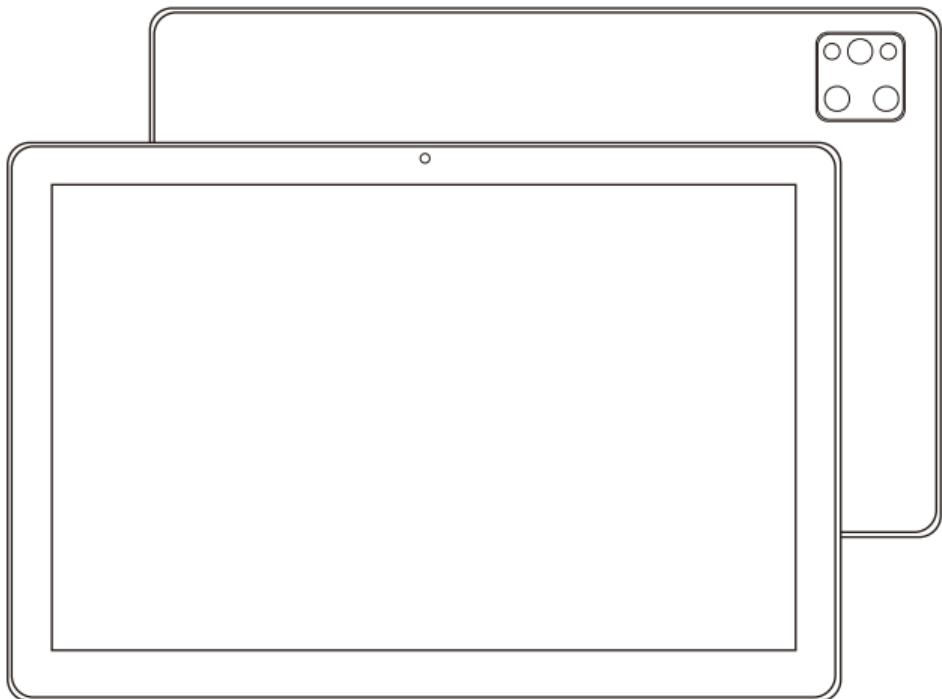

# Contents

## Contents

<b>1</b>	<b>Introduction</b>	1-2
1.1	Acknowledgements	3
1.2	Precautions	3
1.3	Safety Instructions	3-4
1.4	Abbreviations/Terms	5
<b>2</b>	<b>MID Introduction</b>	5
2.1	MID accessories introduction	5
2.2	MID usage and preparation	6
2.3	MID Status and Notifications	6
<b>3</b>	<b>Quick Start</b>	7
3.1	Key function and Power on and off	7
3.2	Product display	8
3.3	Screen on and off	9
3.4	Use of Touch Screen	9-10
3.5	Access to applications	11-12
3.6	USB connection	12-13
<b>4</b>	<b>Basic Settings</b>	14
4.1	Wireless and Networking	14
4.2	Bluetooth	15-16
4.3	Display	17-18
4.4	Date and time	19
4.5	Set language	19
4.6	Security Settings	20
<b>5</b>	<b>Multimedia</b>	21
5.1	Camera	21
<b>6</b>	<b>Internet</b>	21
6.1	Browser	21
6.2	Email	22

<b>7 Other Applications</b>	23
7.1 Recorder	23
<b>8 Program installation</b>	24
8.1 Installation	24
8.2 Uninstallation	24
<b>9 Troubleshooting</b>	25-26
<b>10 How to reset your tablet</b>	26

# 1 Introduction

## 1.1 Acknowledgement

Thank you very much for choosing our 10.1" HD Tablet PC, this manual systematically introduces the various features, tips and precautions of the tablet, please read it before using it.

## 1.2 Precautions

### Care and Maintenance

Please keep the equipment dry. Do not expose the equipment, battery and charger to water and vapor, or operate the equipment or charger with wet hands to avoid short circuit, malfunction caused by corrosion, or electric shock to personnel. Do not subject the device, battery and charger to strong shocks or vibrations that may cause the device, battery and charger to malfunction.

Do not place the device, battery and charger in areas where the temperature is too high or too low, as this may cause the device, battery and charger to malfunction.

Do not hit, throw or pin this MID, and avoid dropping, crushing or bending the MID.

Do not disassemble the device and accessories without permission, otherwise the device and accessories will not be covered by our warranty.

### Dear Customer

Thank you so much for purchase our Tablet, if you have any questions you can contact our Customer Service on our Amazon Shop.

**After sales team :sales7@szyztech.com**

### 1.3 Safety Instructions

Before using the MID, please read the information in this section and let your child know about it. For more detailed information, see Safety Instructions and Precautions.

Do not use the MID while driving a car as this may interfere with safe driving.

In medical settings, please follow the rules or regulations.

Turn off the MID in areas near medical equipment.

When boarding an aircraft, please turn off MID or turn on airplane mode so that wireless signals do not interfere with aircraft control signals.

Please turn off the MID in the vicinity of electronic equipment using high precision, otherwise it may cause the electronic equipment to malfunction.

Do not disassemble the MID and accessories without permission. Only authorized agencies may repair this MID.

Keep the MID away from magnetic devices, the radiation of the MID will erase the information stored on the magnetic devices.

Do not use the MID in hot places or places where flammable gases are present (e.g. near gas stations).

Keep the MID and accessories out of the reach of children, and do not allow children to use the MID unsupervised.

When using this MID, please comply with relevant laws and regulations and respect the privacy and legal rights of others.

When using the USB cable, please strictly follow the instructions in this manual, otherwise your MID or personal computer may be damaged.

Do not use this MID in a humid environment such as a bathroom, and avoid getting this MID wet with liquids or rinsing it.

## 1.4 Abbreviations/Terms

Abbreviations/ terms	Full Name	Description
MID	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Wireless LAN based on IEEE 802.11b standard
TF	TransFlash	Also known as Micro SD, an ultra-compact memory card

## 2 MID Introduction

### 2.1 MID Accessories Introduction.

MID complete unit

Device charger

Type-C cable

Tablet case

User manual

## 2.2 MID Use and Preparation

MID use and preparation

Battery Charging

Charge the battery before using the MID for the first time.

## 2.3 MID status and notification

Notification Icon

When an alert message appears in your notification panel, tap the column box and swipe your hand across the screen to open the notification list. Click on the option you need to view to see the detailed message. After that, you can tap the message box and swipe right to close the message window. The following is an illustration of the status bar icon.

	Email		Airplane Mode
	USB is connected		Reading Mode
	Returned button		Download
	Short press to view usage history		Home Button
	Battery level		WIFI is connected

### 3.Quick Start

#### 3.1 Key functions.

<b>Power Button</b>	Short press to sleep/wake up function, long press to switch on/off function
<b>Volume+ (up)</b>	Increase volume
<b>Volume- (down)</b>	Decrease volume
<b>Home Button</b> 	Click on any interface to return to the main interface
<b>Return Button (back)</b> 	Click this button on any interface to return to the previous level directory
<b>Setting Keys</b> 	Click, short press to display the user's browsing history

#### 3.2 Power on and power off

##### Power on


Press and hold POWER button for 5 seconds to see the power on screen. The system turns on and enters the screen lock state, please unlock it.

##### Shutdown

- 1.After long press POWER key, the shutdown option will pop up.
2. Shutdown options include flight mode, reboot and shutdown.
3. Tap Shutdown to turn off the system.

# Product Display:

Product (1)

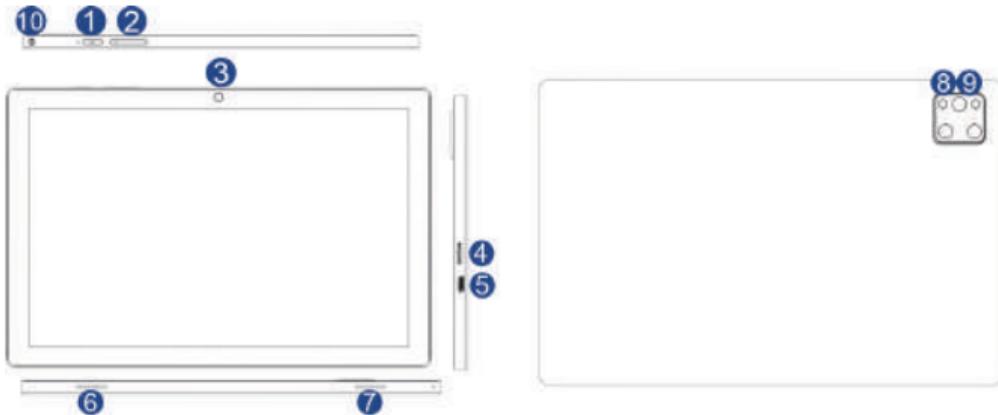

1. Power ON/OFF Front camera	2. Volume +/-
5. Type-C Charge Port	4. Micro SD Card Slot
7. Speaker	6. Speaker
9. Rear HD Camera	8. flash
	10. Headphone Jack

### **3.3 Screen on and off**

The screen will turn off automatically when it is idle

1. After the screen is idle for a period of time, it will automatically turn off the screen to save battery power.
2. In the screen on state, press POWER button, the screen can be turned off immediately.

#### **Screen off state open**

If the screen is in the off state, you can short press the POWER key to turn on the screen. After opening, it will enter the locked state, and can be unlocked from the bottom to the top.

### **3.4 Use of Touch Screens**

#### **MID's Operation method**

There are multiple ways to navigate the home screen, menus, applications, etc. on your MID.

##### **Tap**

When you want to use the on-screen keyboard to type, or to select items on the home screen such as applications, just touch your finger to tap.

##### **Press and hold**

To open the available options for an item (such as a text box or a link on a Web page), or to move a shortcut on the home screen to the main application menu, just press and hold the item.on the home screen or to move between the main program menu and the home screen, simply press and hold the item.

## **Quick Swipe or Swipe**

A quick swipe or swipe is a quick vertical or horizontal dragging motion with your finger on the screen.

## **Drag and Drop**

Before you start dragging, you must press and apply pressure with your finger and not release it until you reach the desired position.

You cannot release your finger until it is in the desired position.


## **Rotate**

For most screens, simply rotating the MID sideways automatically changes the screen orientation from landscape to straight. For example In text input, music screens, etc.

## **Delete icons on desktop**

1. Long press the icon you want to delete and the top of the screen will show  remove.

2. Drag the icon to the delete icon "remove" that, you can release the hand to delete.

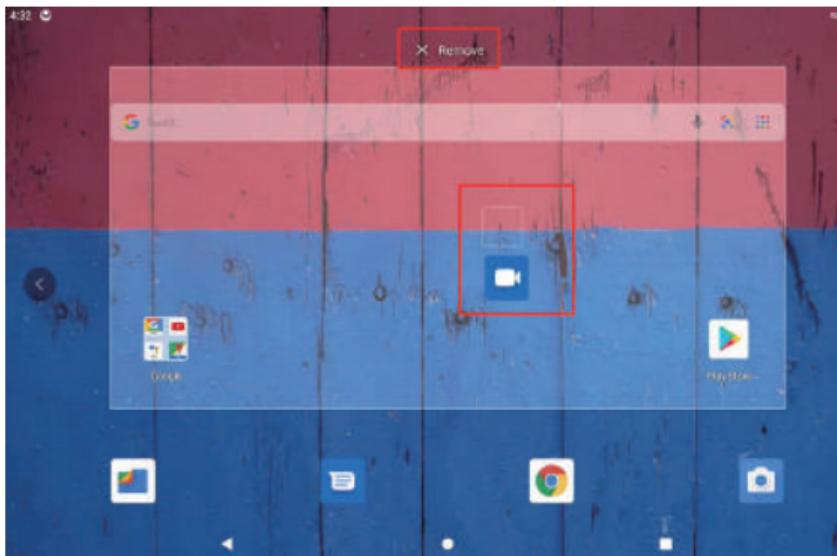


## Change desktop wallpaper

1. On the home screen, long press a blank space on the home screen to bring up a pop-up window where you can set the wallpaper.
2. Tap Gallery or Wallpaper Gallery to select the picture.

## 3.5 Accessing Applications

Swipe your finger from the bottom to the top to bring up the applications in the figure below, and you can select the program you want to access.

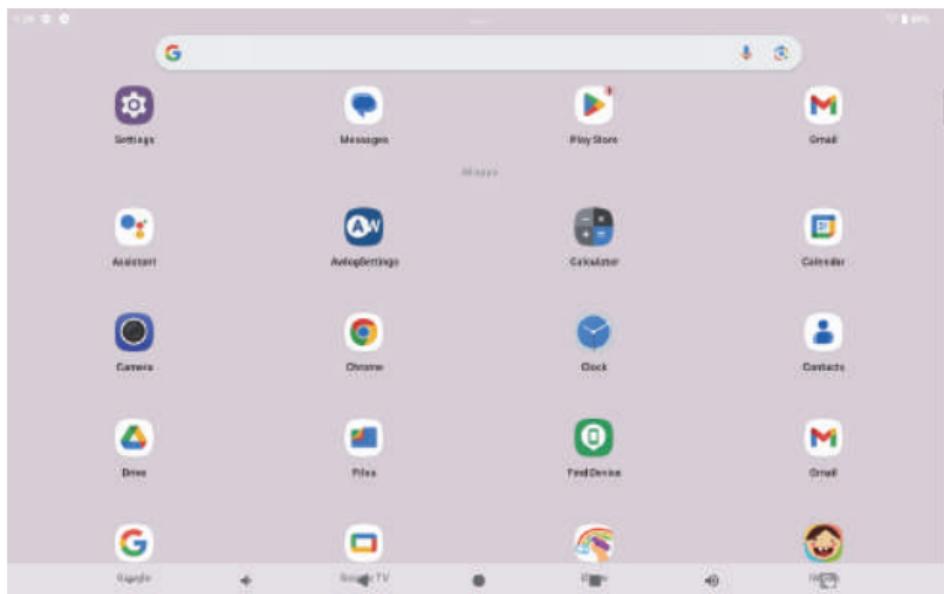

### 3.6 USB connection

Storage settings for MIDs

Before transferring the file, you must first set up the storage mode for your MID.

1. Connect the MID to your computer using the USB transfer cable. A notification prompt will appear in the notification bar.
2. Open the notification panel and select USB tethering, then the USB connection is successful.



USB

USB CONTROLLED BY

- Connected device
- This device

USE USB FOR

- File Transfer
- USB tethering
- MIDI
- PTP
- No data transfer


**Note:** 1. When your MID is connected to the USB cable, if you open the USB storage device, you will not be able to access the memory card through the MID, if you want to access the memory card in the MID, just disconnect the USB connection.  
2. Please make sure there is SD card in MID before copying, and it can be detected normally.

# 4 Basic Settings

## 4.1 Wireless and network

Establish wifi connection


1. Select Settings application in the main menu interface
2. First click "Settings", then click "Network&Internet",  
Third click "Wifi", select the Wi-Fi network you want to  
connect, if there is encryption, a pop-up window will  
appear to enter the password, enter the corresponding  
password and click connect.

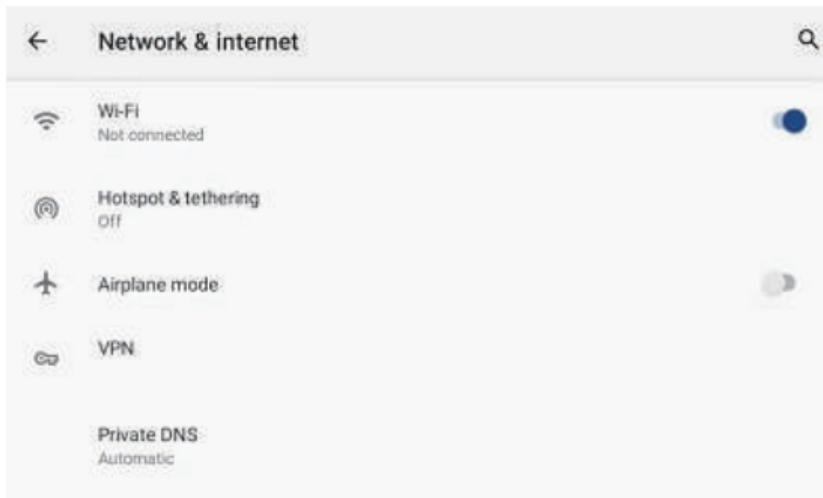

## 4.2 Bluetooth

### Application of Bluetooth function

1. Select Settings application in the main menu screen
2. Tap Bluetooth to turn on Bluetooth.
3. If there is someone nearby with Bluetooth on, tap the top right corner to search for devices, MID will automatically search for nearby Bluetooth devices. As in picture.

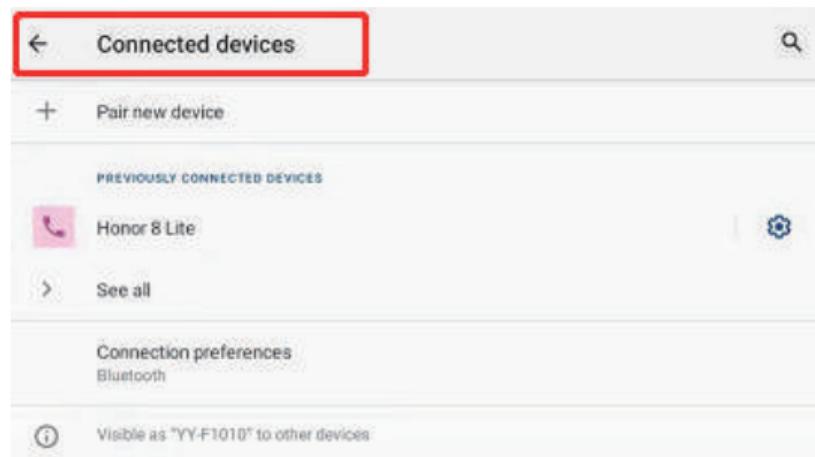

4. Click on the searched Bluetooth device, a pairing request window will pop up automatically, enter the corresponding password and the other party to match the corresponding, then the pairing will be successful.



## Pair new device



Device name

YY-F1010

Available devices



Honor 8 Lite



Tablet's Bluetooth address: 5F-02-C5:D4:90:04



## Pair new device



Device name

YY-F1010

Available devices



Honor 8 Lite  
Pairing



Tablet's Bluetooth address: 5F-02-C5:D4:90:04

Pair with Honor 8 Lite?

Bluetooth pairing code

460809



Allow access to your contacts and call history


CANCEL

PAIR

## 4.3 Display


### To adjust the screen brightness

1. Tap Settings application
2. Tap Display and tap Brightness level, drag the brightness slider left and right to adjust the brightness level. Then release it, finally it is OK.

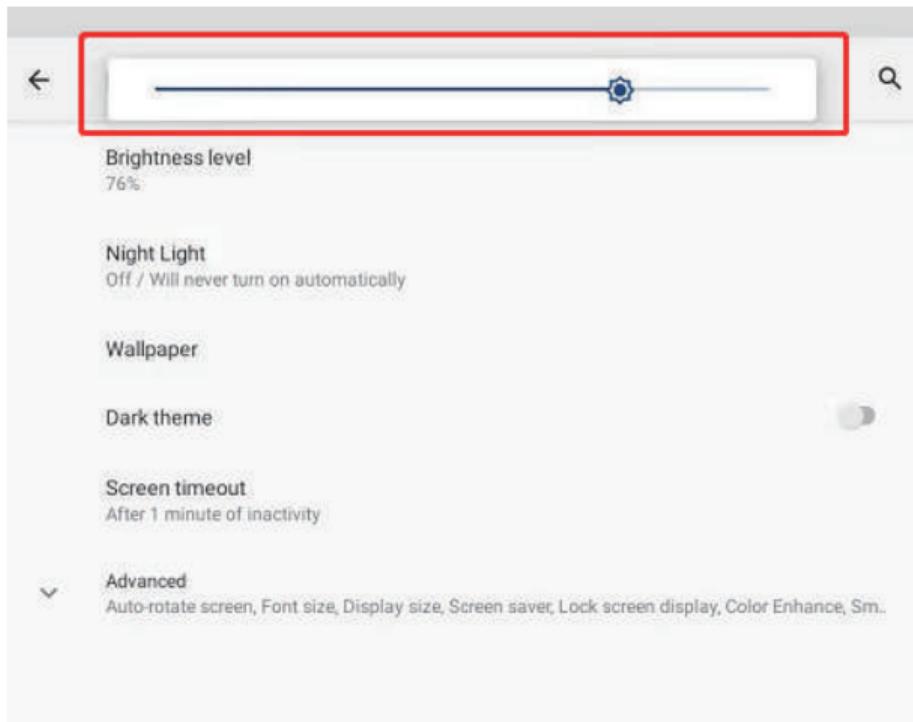

## To adjust the screen standby time

1. Tap Settings Application.
2. Tap Display.
3. Tap "Screen timeout".
4. Bring up the screen standby time setting and select the standby time you want. As shown in picture.

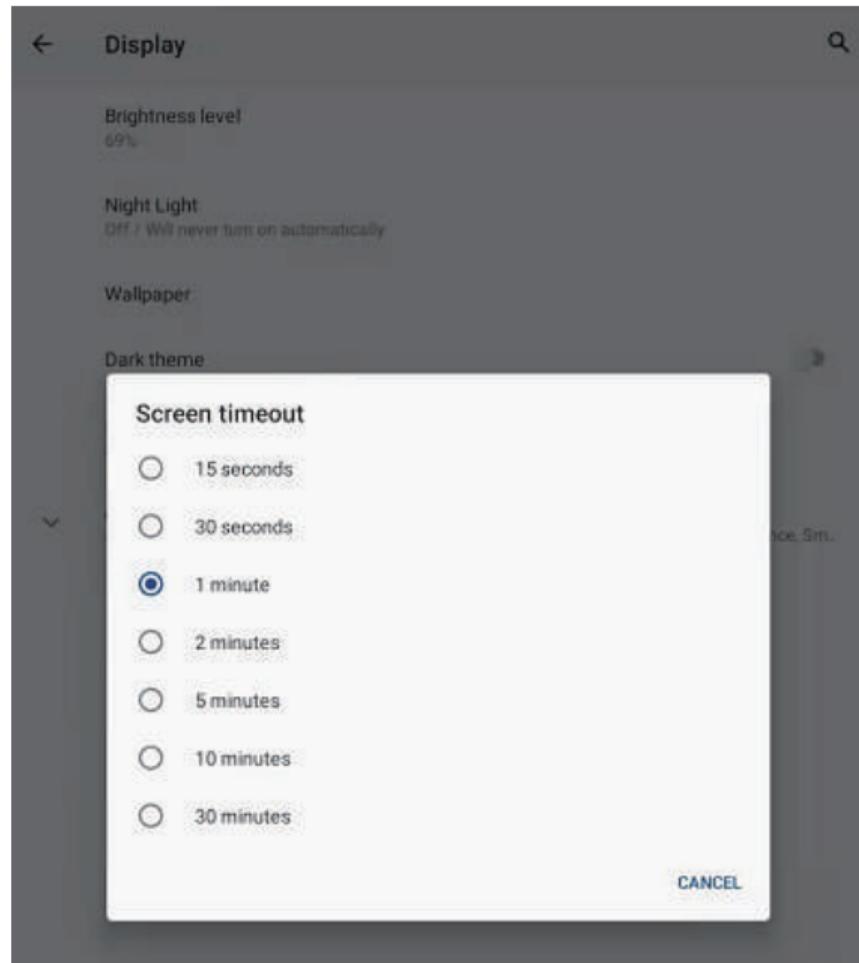


## 4.4 Date and Time

According to the preset, the system automatically uses the date, time zone and time provided by the network.

To adjust the date, time and time zone manually

1. Go to the desktop, swipe the screen from the bottom up, tap Settings -System -Date&time to set the date and time.

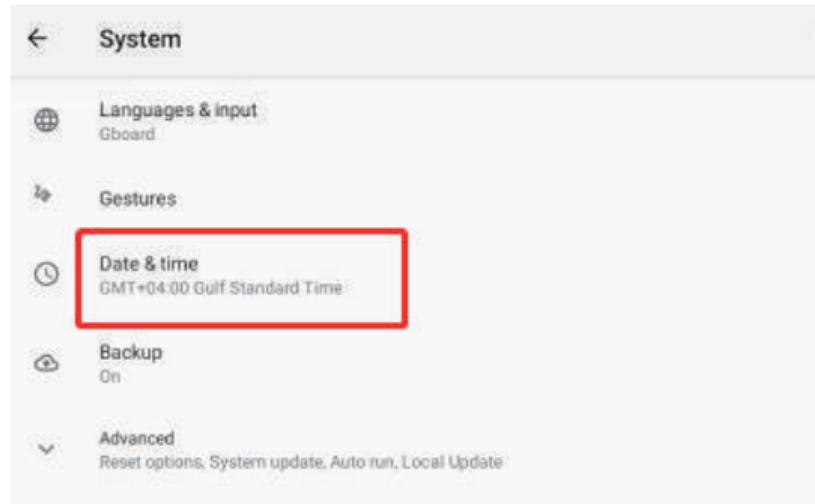

*Note: If you automatically use the time provided by the network, you cannot set the date, time and time zone yourself.*

## 4.5 Setting the Language

1. Tap Set Application
2. Tap "System", then tap Languages& input, Click "Add a language" to find more languages.

## 4.6 Security settings


### Set screen lock

You can use unlock pattern or password to lock the touch screen to protect your MID privacy

*Note: After setting the screen lock, you will be asked to enter the unlock code every time you turn on or unlock the touch screen.*

### Set the unlocking method:

1. In the home screen, tap Settings application.
2. Tap Security.
3. Tap Screen Lock.
4. You can choose several modes on the screenshot: Swipe, Pattern, Pin, Password to set up.

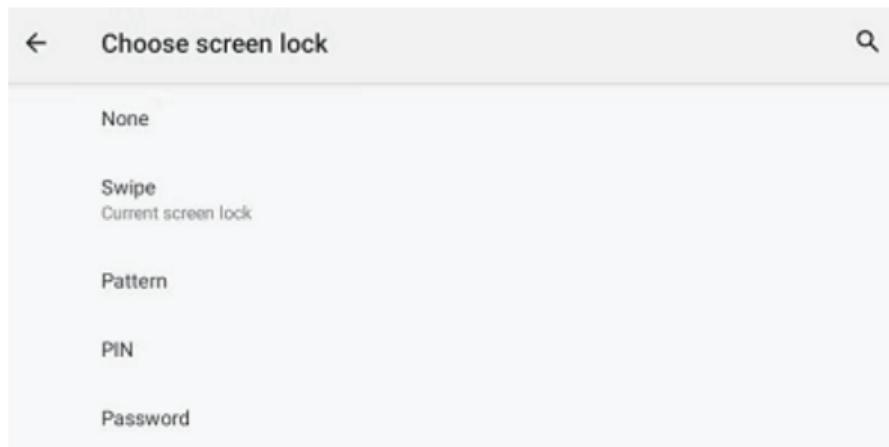


# 5 Multimedia

## 5.1 Camera

Under the main menu or desktop, tap the application icon  to enter the camera mode

# 6 Internet


## 6.1 Browser:

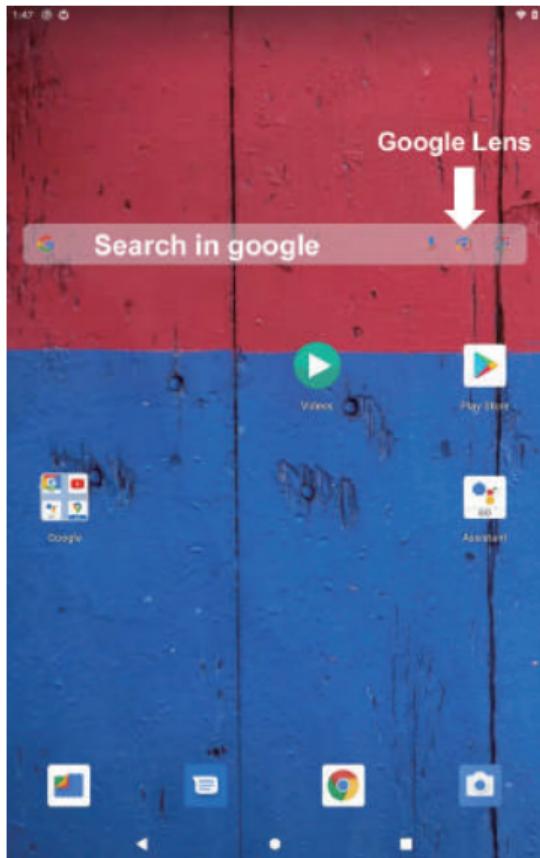

## 6.2 Email

The email application comes with an email setup wizard that allows you to add external POP3 or IMAP email accounts from common web email service providers (such as Yahoo, hotmail, Gmail, outlook etc.).


As shown in the picture, you just click the icon and input your correct email address and password, then it can be used.

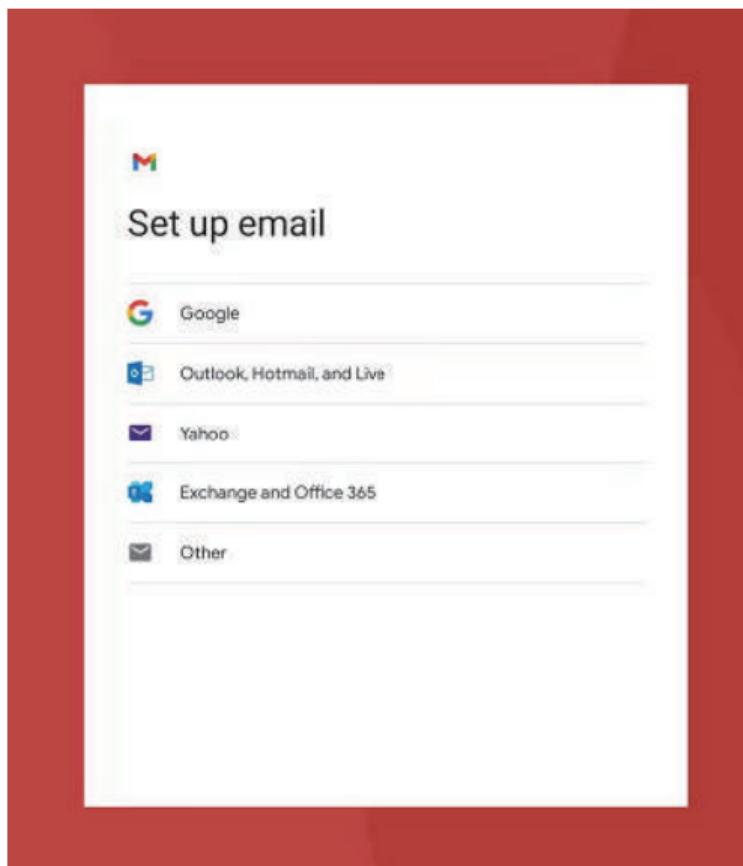

# 7 Other applications

## 7.1 Recorder

Under the main menu or desktop, click the recording icon  to enter the recording interface, click the record button  to start recording. Click the Stop button  to stop recording. Click the Play button  to play the recording you just made. The system will automatically prompt you to use this recording or abandon it, please choose manually.

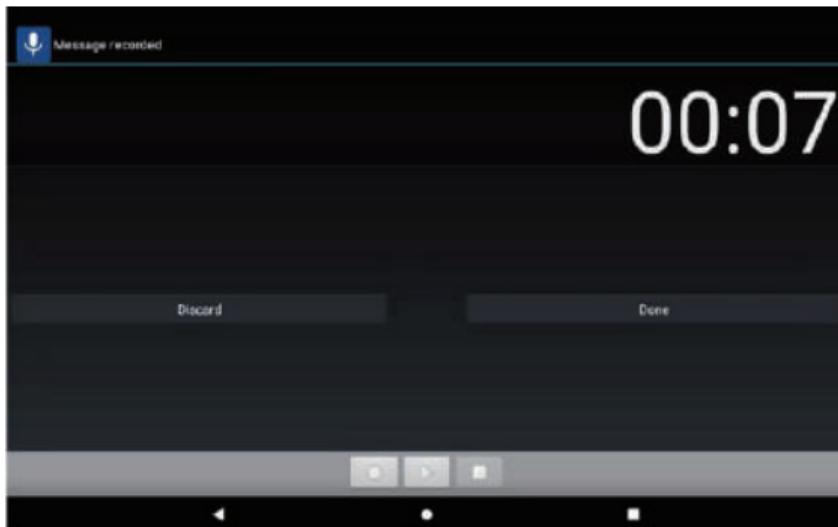

# 8 Installation of the program

## 8.1 Installation

Installing third-party applications You can get third-party applications suitable for Android system on the Internet, and you can press and install them on the MID by yourself to use them. Copy the application to the SD card and insert it into the MID.

- 1.Tap the "File Manager" application and select the application you want to install.
- 2.Press and hold the application you want to install.
  1. When the installation option pops up, tap Install apk.
  2. Follow the installation wizard to finish and run.

*Note: Search the Internet for third-party programs for this system are files with .apk suffix.*

## 8.2 Uninstallation

Uninstall the application

1. On the home screen, tap Settings bitmap.
2. Tap Applications to list all the applications installed on the system.
3. Tap the APK you want to uninstall and tap Uninstall.
4. Tap OK to complete the installation.

# 9 Troubleshooting

## 1. MID first boot slow

After the MID system upgrade, the first time you need to install the pre-install applications, the time is about 2-3 minutes, after the boot will be faster.

## 2. MID can not connect to WIFI

Ensure that the wireless router providing network services is working properly. Make sure the distance between the MID and the wireless router is kept at a certain, and there is no wall or other obstacle separating them. Make sure the user name and password are entered correctly.

## 3. The MID is hot to the touch

The MID may get warm when using multiple applications at once, or when the screen is turned on to its brightest and is charging. This is a normal situation.

## 4. Unable to set up email or register applications

Make sure your internet connection is working properly and you can connect to the internet.

Make sure the email setup method is correct.

Make sure your system time is consistent with the local time.

## 5. System anomaly does not work properly

When you are installing some third-party applications, it may cause the system not to function properly. You can reset the system by pressing the reset button (next to the power connector).

## 6. Web page cannot be opened



Please keep the distance between the route and MID within the effective distance

Please restart WIFI and try again

## 7. MID sometimes runs slowly

This is a normal phenomenon. Please end some temporarily unused applications in the advanced task management and uninstall some third-party applications to free up more system resources.

# 10 How to reset your tablet

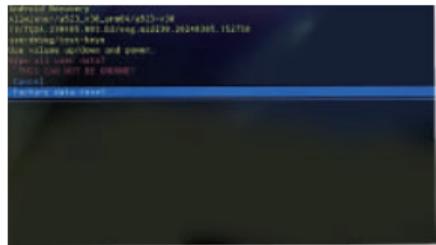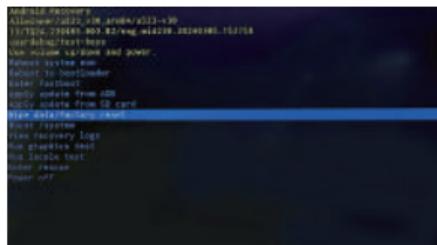

With the tablet turned off, long press the power button and volume up button to enter into the BIOS system.

Volume down key to move the cursor to "Wipe data/factory reset", click the power button to confirm the entry.

Select "Factory data reset", press the power button to confirm the selection of the tablet's factory data reset.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.