

尺寸：120x80mm 157g双面四色印

LODI

Cannon Machine



产品说明书

 
INSTRUCTION MANUAL

使用产品前请仔细阅读本使用说明书，并请妥善保管。
please read carefully our instruction paper before using product, and keep instruction paper for future use

产品图示



可更换头套款式



产品参数

产品名称	洛迪炮机(遥控款)		
供电方式	USB充电	主体尺寸	65*65*366mm
充电时间	2 小时	续航时间	45 分钟
执行标准	Q/AY1-2021	额定电压	5 V
产品材质	TPE+ABS	最大噪音	≤65分贝
配件内容	炮机1个, 阳具棒头2个, 底座1个, 遥控器1个, 充电线1根, 说明书1份		

充电说明

用附送的USB线连接产品的磁吸式充电接口充电。



- 用USB线直接连接电脑充电或者搭配手机USB接口充电头在插座上充电；
- 充电电压5V，电流不超过500mA；
- 充电时指示灯为呼吸闪烁状态；
- 充满后指示灯常亮，切勿长时间过充；
- 充电期间无法使用，请在充电结束后拔出电源再使用。

按键说明

 
主体

电源开关键

- 长按开关键2秒开/关机；
- 点按开启伸缩模式，可循环切换6种不同伸缩模式；
- 双击关闭伸缩模式；

功能按键

- 点按此按键开启振动模式，有10种不同可循环振动模式；
- 长按此按键2秒，关闭振动模式；
- 双击此按键，开启加温模式，再次双击关闭加温模式；

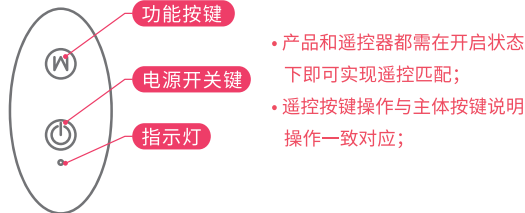

注：

- 显示屏有显示剩余电量/功能/模式/加温/伸缩次数；
- 功能开启时，功能显示屏中会点亮对应功能图标；
- 关闭功能后，功能显示屏中对应功能图标会熄灭；

伸缩计数操作：

伸缩一次，计数一次，双击电源键可暂停伸缩，计数器会保留数据；只有开关机才会数据清零重新计数。

安装及替换说明

• 底座安装：

将炮机底部孔位和吸盘顶部孔位对准，然后旋拧螺丝安装固定；

 
• 替换安装：

大凸点



• 对准卡口，注意不要装错；

小卡槽

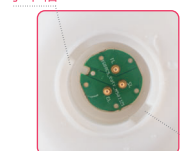

• 卡上去之后顺时针拧至牢固，逆时针旋拧即可拆卸；

清洗说明



- 主体机身不可湿水；
- 阳具/振动棒棒身可水洗，但底部卡口位置不可水洗；
- 禁止冲洗棒棒身底部卡口位置；
- 禁止把卡口位置浸泡在水中；
- 吸盘底座全身可水洗；



故障说明

- 开不了机时,检测是否没电,重新充电后再使用；
- 充电过后不能开机,检测充电指示灯是否正常,充电线是否损坏；
- 震感较弱时,请对产品进行充电后再使用；
- 程序出错时,请关机重启有可能恢复正常。

 
保养维护

- 每次使用产品前后，请使用清水，配合沐浴露或香皂清洗产品；
- 远离极端高温或低温环境；
- 避免阳光直晒，将产品储藏于阴凉干燥处；
- 建议使用5V/1A电源适配器，尽量避免过充；
- 长时间不使用，请保持至少三个月充电一次，防止电池老化。


注意事项

- 产品为成人玩具,未成年人禁止使用；
- 使用时若产生不适,请立即停止使用；
- 为了保护您娇嫩的肌肤,建议与润滑剂同时使用；
- 须定期检查是否受损,发现受损请停止使用；
- 请勿尝试更换主机内电池,产品内电池应由授权服务商更换；
- 请勿用含酒精、汽油或者丙酮的清洁剂清洗产品；
- 请使用符合国家标准的手机类电源适配器对产品进行充电；
- 产品废弃前需拆出电池,拆电池之前需断电,并需要安全处置电池,电池必须与家庭垃圾分开回收处理,请勿焚烧电池。

GRAPHIC

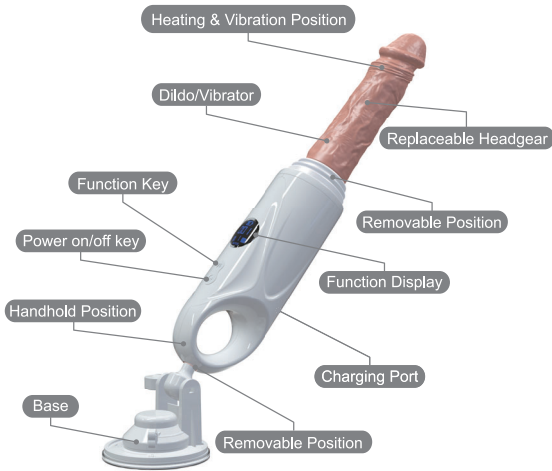

Replaceable Headgear Styles

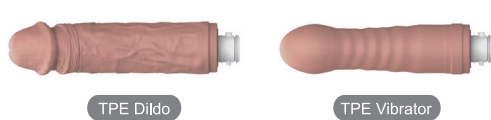 

PARAMETERS

Product Name	Lodi Cannon Machine (Remote Control)		
Power Supply	USB charge	Main Size	65*65*366mm
Charging Time	2 Hours	Usage Time	45 Mins.
Executive Standard	Q/AY1-2021	Rated Voltage	5 V
Material	TPE+ABS	Max Noise	≤65dB
Accessories	1 cannon, 2 heads, 1 base, 1 remote control, 1 charging cable, 1 manual		

CHARGING INSTRUCTIONS

Charge it with the USB cable attached.



- Use a USB cable to directly connect to a computer for charging or charged by a mobile phone charger;
- The voltage should be in 5V and current should not exceed 500mA while charging;
- The indicator light flashes while charging;
- The LED keeps on when full charged, do not overcharge for a long time;
- Unable to use during charging, please unplug the power or wait until fully charged before use.

INSTRUCTION FOR BUTTON

 
Main Body

Power on/off key:

- long press the power on/off key for 2 seconds to turn on/off the product;
- Tap to turn on telescopic mode. 6 different telescopic modes can be switched cyclically;
- Double-tap to turn off the telescopic mode;

Function key:

- Tap this button to turn on the vibration mode, there are 10 different vibration modes that can be cycled;
- Long press this button for 2 seconds to turn off the vibration mode;
- Double-tap this button to turn on the heating mode, double-tap again to turn off the heating mode;

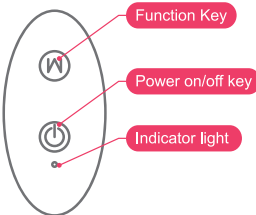

Notes:

- The display has an indication of remaining power / function / mode / heating / stretching times;
- When the function is turned on, the corresponding function icon will be lit in the function display;
- When the function is turned off, the corresponding function icon in the function display will go out;

Telescoping counting operation:

Stretch once, count once, double click power button can pause the stretching, the counter will keep the data; Only switching on and off will the data be cleared and recounted.

INSTALLATION & REPLACEMENT

• Base mounting:

Align the holes at the bottom of the gunner with the holes at the top of the suction cup, and then screw the screws to install and fix it;

 
• Replacement installation

Large



• Align the bayonet and be careful not to load it incorrectly;

Small

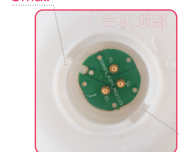

• After being stuck on it, screw it clockwise until it is firm, then turn it counterclockwise to remove it. Remove by turning counterclockwise;

WASHING INSTRUCTIONS



- The main body must not be wet;
- The body of the dildo/vibrator may be washed, but not the bottom bayonet;
- It is prohibited to rinse the bayonet at the base of the shaft;
- It is prohibited to rinse the bayonet at the base of the wand; it is prohibited to immerse the bayonet in water;
- The whole body of the base is washable;



FAULT TIPS

- When the machine cannot be turned on, check whether there is no power and recharge it before using it.
- If it doesn't work properly after charging, check whether the charging indicator is lit or check whether the charging cable is damaged.
- When the vibration is weak, please charge the product and use it again;
- If a program error occurs, it may return to normal after restarting.

CARE AND MAINTENANCE

- Before and after each use, please use water to wash it with shower gel or soap.
- Keep away from extreme high or low temperature environment.
- Avoid direct sunlight, store the product in a cool and dry place.
- 5V/ 1A power adapter is recommended, avoid overcharging.
- Please charge it at least once every three months to prevent battery aging if you do not use it for a long time.

WARNING

- This is an adult toy product and is prohibited from use by minors.
- Please stop using immediately when you feel uncomfortable.
- In order to protect your delicate skin, we recommend you to use lubricating oil for adults.
- The product needs to be checked regularly for damage and stopped using it immediately if damaged.
- Please do not try to replace the battery in the host, the battery in the product should be replaced by an authorized service provider.
- Please do not use the cleaning agent containing alcohol, gasoline or acetone to clean the product.
- Please use the national standard cell phone type power adapter to charge the product.
- Before discard, the battery power needs to be completely cut off and removed, disposed safely, separate from household garbage, but should not be incinerated.

Adults Only
Quality Control : Qualified



SOLD AS NOVELTY ONLY
ALL RIGHTS RESERVED. MADE IN CHINA

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.