

XIII. Equipment Troubleshooting

Problems	Possible causes	Responses or solutions
Bedding not warm	The air outlet or suction outlet is blocked.	Disconnect the plug from the power supply and clear the blockage of the air outlet or suction outlet before running.
	The air outlet or suction port is covered.	Keep the shelter more than 15 cm away from the machine vents .
	The temperature is set to the lowest state.	Press the "heat up" to adjust the temperature to the highest or appropriate temperature.
Cannot run	Start button not pressed	Press the start button
Garbled code display	Loading not completed	Disconnect and re-energize the power

※If the above measures still do not solve the problem, please unplug the power supply and contact the after-sales service center.

① Caution

1. The temperature of the blown air changes.

The temperature is being adjusted during operation of the unit. This is normal.

2. The product makes a sound during operation.

It is also normal for a sound to be made during operation to indicate that the unit is making temperature adjustments.

② If the problem is still not solved

Please turn off the device and unplug it from the power supply, then contact the after-sales service at customerfirstone@outlook.com.



Warning! Do not disassemble, repair or modify this product by yourself.

Bedding Dryer HDCX-NB11

User Manual



Thank you for purchasing our bedding dryer. This manual contains safety precautions, product cleaning, maintenance, inspection tips, and instructions for use. Please read carefully and use the product safely. Keep this manual for future reference.

XI. Q&A

Q: Is the bedding dryer energy efficient?

A: The bedding dryer adopts high-efficiency motor and intelligent temperature control system, which is more energy-saving. However, the specific power consumption will vary depending on the model and frequency of use.

Q: How to ensure better drying results?

A: Place the bedding evenly and keep it loose, avoid overlapping and pressing. At the same time, make sure there is proper air circulation space between the bedding.

Q: How long can the bedding dryer run continuously?

A: Our bedding dryer can be timed and you can choose between 5 to 180 minutes. It is recommended to set the time as needed to avoid long continuous operation to prolong the life of the machine.

Q: Does the bedding dryer damage the material of the bedding?

A: Bedding dryers will not damage most materials if used according to the manufacturer's recommendations. It is recommended to use the low temperature mode for delicate materials.

Q: How long can the bedding dryer run continuously?

A: Our bedding dryer can be timed and you can choose between 5 to 180 minutes. It is recommended to set the time as needed to avoid long continuous operation to prolong the life of the machine.

Q: Is it normal for the dryer to have a burning smell sometimes during operation?

A: Not normal. The burning smell may be due to overheating or foreign matter inside. You should stop using it immediately and contact the after-sales service.

Q: How long can the machine run continuously?

A: It is recommended to run continuously for no more than 2 hours at a time to avoid long time use affecting the life of the machine.

I. Bedding dryer after-sales service instructions

Warranty coverage:

1. The problem of quality under normal use of this product, such as motor failure, abnormal heating function, etc., are within the warranty.
2. Due to non-human damage caused by parts failure, such as heating elements, circuit boards, display, etc., are entitled to free replacement service.

Not under warranty:

1. Failure caused by improper use, unauthorized disassembly, repair or modification of the product.
2. Damage caused by external factors such as fall and impact, liquid infiltration, etc.
3. Damage caused by natural disasters (such as lightning, earthquake, fire, etc.) or other force majeure factors.
4. Products that exceed the warranty period.

This product is entitled to one year free warranty service from the date of purchase. We offer extended warranty service, our customers can contact us in Whatsapp and after getting in contact with us the warranty will be extended for two years.

Participate in the method of obtaining the extended service:

1. Add [WhatsApp] account: Tillie
2. Send the product name, order number, purchase date, purchase platform name, email address and WhatsApp ID.
3. You will get additional 24 months extended after-sales service, the total warranty period is 36 months.

In case of emergency, please feel free to contact us through the after-sales service mail: customerfirstone@outlook.com

X. Usage instructions

- *When the set time runs out, the screen counts down 10 seconds, then displays "OFF" and stops operation.
- *If you want to stop the machine during operation, press the "STOP" button, the screen will count down 10 seconds, then display "OFF" and the machine will stop running.

4. Storing after use

1. Hold the power plug and unplug it from the socket.
2. Remove the hose after the main unit cools down and store it.
3. Use velcro strap to bundle the power cord for storage.



Note :

Do not force the power cord into the outlet, as it may cause a fire if the cord breaks.

• Various applications

Closets and closets

Open the door and operate with the air vents facing inwards and the temperature set to 40°C.

Caution:

*Do not place the dryer body in a closet or drawer.

*Make sure that drawers and closets are in open form to allow free access to take out and put in items.



Under sink or washbasin

Operating temperature is 40°C with the door open and the air vents facing you.

Caution:

*When using 65°C or 40°C, make sure that the material and heat-resistant temperature of the part of the object to be dried that is exposed to the warm air is higher than the warm air temperature before using it.

*Use the "warm air" when drying items with a lower heat-resistant temperature.

II. Safety precautions:

Must know!!

● Enforcement

The plug

*Insert the plug firmly into the electric socket.

Hold the plug to pull it out.

*Pulling on the power cord may damage it, resulting in electric shock or a short circuit.

Remove the plug after using the product.

*After using the product, unplug it from the power source, otherwise it may cause injury, burns or fire and electric shock due to the insulation falling off.

● Prohibited

Do not use damaged power cord, plug or loose socket.

* Short-circuiting may cause fire or electric shock.

Do not bundle power cord and energize them.

* Excessive heat may cause burns or fire. Be sure to use the power cord fully uncoiled.

● Power-off operation

When cleaning, checking or moving the equipment, be sure to remove the plug from the outlet before cleaning, checking or moving the product.

● Prohibited

Do not damage the power cord.

*Do not scratch, modify, or forcibly bend the power cord.

*Do not bend, stretch, or twist the power cord when handling or storing it.

*Do not place heavy objects on the power cord or squeeze it.

*Otherwise the power cord may be damaged, resulting in fire or electric shock.

If the power cord is damaged, it must be replaced by the manufacturer, its service department or a similarly unavailable professional to avoid danger.

X. Usage instructions

- *Leather, synthetic leather and vinyl shoes may warp or discolor when exposed to warm air.
- *Always set the appliance to "Warm Air" and select the lowest temperature (the first indicator light on the thermostat comes on).
- *When the set time runs out, the screen counts down 10 seconds, then displays "OFF" and stops operation.
- *If you want to stop the machine during operation, press the "STOP" button, the screen will count down 10 seconds, then display "OFF" and the machine stops running.

4. Storing after use

1. Hold the power plug and unplug it from the socket.
2. Remove the hose after the main unit cools down and store it.
3. Use velcro strap to bundle the power cord for storage.



Approximate drying time (room temperature:
approx. 20°C / humidity: approx. 65)

*Suitable for small loads of laundry.



Towels (3-4 pairs)



Socks (3 pairs)



Shorts (3 pairs)

Approx. 120 min.

When this group of items pictured on the left is dehydrated in the dehydrator until completely dry.

When wet: about 40 minutes
When washed: about 60 minutes

When wet: approx. 30 minutes
When washed: approx. 50 minutes.



Sneakers



Boots and shoes

II. Safety precautions:

Must know!!



This appliance should not be used by persons who lack physical strength, mental ability or experience and common sense and by children, always watch over children to ensure that they do not play with the



Prohibited

- * Do not dry clothes contaminated with oils or solvents.
- * Do not dry clothes that have been in contact with cooking oil, machine oil, dry cleaning agents, gasoline, light oil, thinner, etc.



Do not insert metal or other foreign objects.

- * Failure to do so may result in electric shock or fire from overheating.



No disassembly is allowed
Do not disassemble, repair or modify

- * Failure to do so may result in fire, electric shock or injury

CAUTION

 


Prohibited
Do not ride or sit on the equipment.

- * Failure to do so may result in injury, malfunction or damage.

Do not carry the unit during operation.

- * Failure to do so may result in burns.

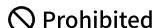

Prohibited
Do not carry the equipment by holding the hose!

- * The equipment may fall and cause injury. Be sure to hold the handle when handling.

Do not move the product by pulling or lifting the hose!

- * The hose may be damaged, causing the equipment to fall.

X. Usage instructions

*If you want to stop the machine in the middle of the operation, press the "Stop" button, the screen will count down 10 seconds, display "OFF" and the operation will stop.

*During operation, you can also adjust the temperature and select the desired time.

Warning:

Do not touch the nozzle or hose immediately after use (may cause burns).

Usage instructions

• Drying shoes

1. Extend the hose and insert the nozzle (air outlet) into the shoes.



*It is also possible to dry two pairs of shoes at the same time.



*When drying shoes with laces, be careful not to let the laces get sucked into the air vents.

Tips to make shoes dry quickly

*Wiping water off wet shoes first with a dry cloth will make the dryer take less time to dry shoes.

 
*When drying shoes with laces, loosen the knot of the laces first, and put the laces into the shoes to prevent the laces from being sucked into the air inlet and outlet.

II. Safety precautions:

Must know!!


Do not dry dripping laundry.

*Failure to do so may result in electric shock.

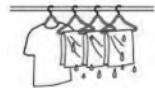

Do not use on items with low heat-resistant temperature (e.g. leather, synthetic leather sofas, etc.).

*Failure to do so may result in deformation or deterioration.

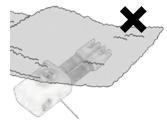

Leather shoes (including synthetic leather), clothes with low heat resistance, bleach-soaked clothes, or clothes that need to be laid flat to dry.

Do not use high temperature air for drying.

*Be sure to use the warm air mode and adjust the temperature to the lowest (room temperature) setting.

Do not use against a window or mirror.

*Sharp changes in temperature difference may cause breakage.

Using instructions

This bedding dryer is intended for home use only. Do not use it for any purpose except for drying bedding, using accessories or for professional use.

X. Usage instructions

* Start operation: Press the Start button to start the unit, the remaining time will be displayed on the operation panel and a “hissing” sound will be emitted.

Caution:

In this state, the default mode is “Summer” mode.


When the set time is reached, the remaining time on the display will gradually decrease. The screen will count down for about 10 seconds, then “OFF” will be displayed and the screen will turn off.

- * When drying heavier bedding, lift the bedding slightly so that the warm air can reach downward.
- * If you feel that the side opposite to that on which the hose is inserted (e.g. the foot side) is not drying enough, insert the hose on that side and try again.
- * If the four corners of the mattress are not warm enough, move the hose and try again.
- * If you want to stop the machine, press the “Stop” button, the screen will count down for about 10 seconds, and then “OFF” will be displayed to stop the machine.

After using the product to remove mites, it is recommended to use the bedding vacuum cleaner to suck away the dead mites.

5. Storing after use

1. Hold the power plug and unplug it from the socket.

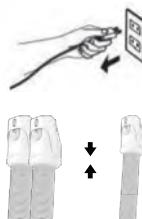

2. Remove the hose after the main unit cools down and store it.



III. Product description

Main part

This product is an unpadded bedding dryer and is not supplied with a cushion.

Front



Side



X. Usage instructions

1. Stretch the hose and place the unit control panel facing upwards


*Please assemble the main unit and hose in the following order.

When placing this product from the cover head

*Place this product with the control panel facing upward at the head of the cover.

*When using dual hoses at the same time, you can choose to assemble the two hoses to different lengths.

*When using both hoses at the same time, place both mouthpieces into the comforter even if you are only drying one comforter.

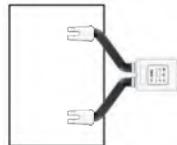


When placing the product from the side of the comforter

*Place the product from the side of the comforter with the control panel facing up.

*When using two tubes at the same time, you can choose to place one tube at the head of the comforter and one at the tail of the comforter.

*Extend the hose so that the mouthpiece is as close as possible to the center of the comforter.

(Do not block the suction port on the side of the main unit.)

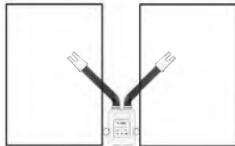

V. Description of accessories and functions

Wireless remote control



1. 5mins, start the timer of the machine for 5mins .
2. 15mins, start the timer of the machine for 15mins.
3. 60mins, start the timer of the machine for 60mins.
4. 120mins, start the timer of the machine for 120mins.
5. Cooling down, lower the temperature by one degree.
6. Heating up, raise the temperature level by one degree.
7. Turn off the device remotely.
8. Turn on the machine remotely.

IX. Usage Scenarios and Storage Methods

1. Usage scenarios

- Drying bedding/Warming/
Removing Dust Mites



- Drying Closet



- Drying Clothes



- Drying Shoes




2. Storage method

After stopping the machine, unplug it from the power supply, store the hose and nozzle in the main unit, and store the power cord with the velcro strap.

- Hose and nozzle

1. Shorten the hose by about 35cm.

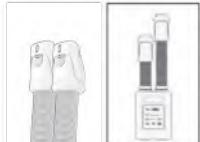

- Power Cord

Equipped with a velcro strap to easily store the power cord.



VI. Product temperature control instructions

Notes

- *Please press the "Warm" button once and then the "Start" button when you want to activate the constant temperature.
- *If the "Start" button is not pressed, the constant temperature will not start.
- *In addition, if you want to cancel the constant temperature mode after pressing the "Warm" button, you can double-click the "Warm" button to release the constant temperature.

VII. Product specifications and plug-in instructions for use

1. Product specification

Model	Using environment
Rated Voltage	AC100V
Rated Frequency	50/60HZ
Power Consumption	500W
Product Size	210*158*124MM
Power Cord Length	About 2.0M
Product Weight	1.8KG
Running Time	5, 15, 30, 45, 60, 75, 90, 120, 180 minutes
Safety Device	Temperature control protection switch + thermal fuse insurance
Product Shell Material	High temperature resistant flame retardant ABS
Noise	12 square test room noise test: ≈ 55 DB

Contents

I. Bedding dryer after-sales service instructions.....	01
II. Safety precautions.....	02
III. Product description.....	09
IV. Functional description of the operating panel.....	10
V. Description of accessories and functions.....	11
VI. Product temperature control instructions.....	12
VII. Product specifications and plug-in instructions for use.....	13
VIII.Cleaning & Maintenance.....	14
IX. Usage Scenarios and Storage Methods.....	16
X. Usage instructions.....	17
XI. Q&A.....	27
XII. Maintenance instructions.....	29
XIII. Equipment Troubleshooting.....	29

XI. Q&A

Q:What is the effect of using the machine in summer or humid weather?

A: Using the bedding dryer in humid weather can keep the bedding dry, especially in the rainy season or high humidity summer, the use of the effect is particularly significant.

XII. Maintenance instructions

① Caution

After using the machine, it will become very hot, so please wipe or clean it after it has cooled down sufficiently.

1. When cleaning the body, please fully wring out the rag with water and then wipe the dirt.
2. Clean the dust from the power plug regularly.
3. Be sure to remove the power plug from the socket before cleaning.
4. Do not rinse the body with water or immerse it in liquid.
5. A clogged or dirty filter (air inlet) can easily lead to a decrease in drying performance, resulting in overheating or malfunctioning of the machine, so it is recommended to clean it with a vacuum cleaner once a month at regular intervals.

XIII. Equipment Troubleshooting

Problems	Possible causes	Responses or solutions
Unable to power up	Plug is not securely inserted into the socket	Insert the plug firmly into the socket

II. Safety precautions:

Must know!!

Please read this "Safety Precautions" carefully before using this product and use it properly.

The precautions listed here are intended to prevent injury or damage to the user or others and are divided into two sections, "WARNING" and "CAUTION".

All of these are important safety instructions that must be followed.

⚠ Warning

The potentially hazardous situation demonstrated, if not avoided, could result in death or serious injury.

⚠ Caution

The potentially hazardous situation shown could result in injury or property damage if not handled

Meaning of graphic symbols

🚫 This is "prohibited" content and cannot be done.

❗ This is "instructed" content that must be followed.

⚠ WARNING

❗ Enforcement

The plug

*Please clean the dust on the plug regularly.

*So that the plug will not be poorly insulated due to dust accumulation, which may cause fire or electric shock.

*The plug must be inserted into the electric socket.

🚫 No wet hands

*Do not insert or remove the plug with wet hands.

*This may cause electric shock, burns and injuries.

X. Usage instructions

Raincoats and umbrellas

Dry the water and operate in the "Warm Air" mode.

Drying Pet Hair

Before using the dryer, use an absorbent towel to wipe away any moisture from your pet's body before using the dryer to dry its coat.

- Do not put the air vents directly into your pet's ears. If water gets into your dog's ears, gently wipe it away with a paper towel or gauze.
- Keep a distance of about 30 centimeters from your pet's face to prevent the hot air from blowing directly into your pet's face.
- Observe the situation and adjust the temperature at any time to avoid burdening the pet and owner.



XI. Q&A

Q: What is the main function of the bedding dryer?

A: The main function of the bedding dryer is to remove moisture and humidity from the bedding by means of a warm airflow, keeping the bedding dry, warm and comfortable and preventing the growth of mold and bacteria.

Q: What types of bedding are bedding dryers suitable for?

A: Bedding dryers are usually suitable for bedding made of cotton, synthetic fibers, feather and wool. Please check the wash label or manufacturer's instructions before using the dryer.

Q: What should I be aware of when using a bedding dryer?

A: Do not cover the body of the bedding dryer with bedding or block the air intake; make sure the dryer is well ventilated. Avoid using the dryer in humid environments and clean the machine's filter regularly.

II. Safety precautions:

Must know!!

● Enforcement

If an abnormality occurs, stop using the product immediately, disconnect the power supply, and remove the plug from the power socket to avoid smoke, fire, and electric shock.

(Abnormal conditions)

- * Burning smell, strange noise in motion.
- * Plug and power cord are abnormally hot.
- * The power supply is intermittent when the power cord is moved.
- * The power supply stops from time to time during operation.
- * Tingling sensation when touching.

Please stop using the product immediately and consult with the store where you purchased it or the after-sales service center.

● Prohibited

Do not get into the bedding (or bed, etc.) immediately during or after operation.

* Failure to do so may result in burns.

Do not use this product alone or keep it out of the reach of children!

* Failure to do so may result in electric shock or burns.

● Do not get wet

Do not use outdoors or in wet bathtubs or showers, as leakage may cause electric shock or fire.

- * Do not splash or immerse in water as it may cause fire due to short circuit.



X. Usage instructions

Note :

Wet or washed shoes can be dried faster if the water is absorbed with a cloth beforehand.

Usage instructions

• Drying clothes


1. Aim air hose at the clothes.

Caution:

* Make sure that the clothes to be dried have a heat-resistant temperature of 70°C or higher.

* Do not place the dryer directly under the clothes to be dried. If water drops get inside the dryer, it may cause electric shock or short circuit.

* When adjusting the outlet angle, tilt the root of the hose tip.

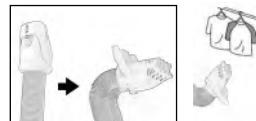

2. Insert the power plug: Insert the power plug into the socket and the appliance will enter standby mode.



3. Selecting the operation mode.

Select the temperature and running time according to the clothes.

1. Set the temperature to room temperature.



2. Set the time to 60 minutes.

60 minute

II. Safety precautions:

Must know!!

● Enforcement

Only use power sockets with an AC current of 100 V and a rated current of 15 A or more.

*Do not use a power source other than 220 V AC, as this may cause a fire or electric shock.

Stop operation before plugging in or unplugging from the power supply.

*Do not plug or unplug the power plug until the unit stops operating, as this may damage the plug blades or the socket and may cause a fire.

Please allow the appliance to cool down before cleaning.

*Do not touch the heat generating parts as this may cause burns.

● Prohibited

Do not insert fingers, metal or other foreign objects into the vent or air inlet!

*Failure to do so could result in electric shock or injury.



● Prohibited

Do not use with other heating devices such as electric blankets and heaters.

*Or it will cause fire.

Do not operate the unit by hanging or placing objects such as clothing directly over the air outlet.

● Prohibited

Do not move the product by pulling or lifting the power cord!

*The power cord may be damaged and cause a fire.

Do not wrap the power cord around the body when storing the unit

*Failure to do so may cause the unit to malfunction.

● Prohibited

Do not operate with the unit completely off when using it in a closet or closet.

*Failure to do so may result in abnormal heat generation or equipment malfunction.

X. Usage instructions

2. Insert the power plug: Insert the power plug into the socket and the appliance will enter standby mode.



3. Select the operation mode:

*Please select the temperature and running time according to the type of shoes.

• Shoes of fabric type

1. set the temperature to the maximum temperature	2.set the time to 60 minutes.
	60 minute (Four indicator lights are on)

• Leather shoes and boots

1. set the temperature to the lowest temperature	2.set the time to 30 minutes.
	30 minute (One indicator light comes on)

Press the button to start running and the control panel will show the remaining time.

START

Note: In this state, the default mode is "Summer".

Note :

*Drying time depends on how wet the shoes are and the type and material. If the shoes are still wet, repeat the drying process.

II. Safety precautions:

Must know!!

Do not pull the hose by force or it may be damaged.

*Do not pull the product by holding the hose.

*Do not lift the product by holding the hose.

Do not use the product if the filter is clogged or damaged.

Do not spray insecticides or deodorizers, etc.

Use in special environments may affect the lifespan of the product.

*For example, coastal areas where the product is directly exposed to the sea breeze, hot springs where the air contains sulfur, and places where there is a lot of smoke and oil.

Do not place the unit close to the radio or TV.

*Failure to do so will result in noise from the radio or TV.


Disposal

*Please follow the local regulations in your area for disposal of products and their packaging materials.

🚫 Prohibited

Do not place the unit in bedding.

*Failure to do so may cause a fire. Do not place anything other than hoses inside the bedding!

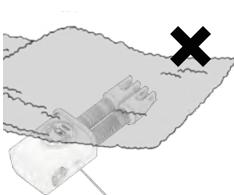

X. Usage instructions

3. Use velcro strap to bundle the power cord for storage.



Caution:

Do not force the plug into the socket!

Do not bend the plug cord for storage. To prevent the cord from breaking and causing a fire.

*【Precautions for drying down comforter】


When drying the down comforter, be careful that the temperature is not too high to avoid damaging the feathers. High temperatures may damage the fluffiness and warmth of the down, and may also cause odors or fires. You are advised to set the drying temperature to the lowest possible setting to ensure the safety and performance of your duvet.

Usage instructions

• Freedom to use

1. Unfold the hose and place the nozzle as close to the bedding as possible.
2. Place the bedding flat on the hose and press down on both sides of the hose to prevent warm air from leaking between the hose and the bedding.
3. Insert the power plug firmly into the wall socket, and the unit will automatically enter the last set operation mode after the power is turned on.
4. Press the Mode button to switch the automatic operation mode “removal mites → warm air → summer → winter” in sequence.
5. Press the start button to start running, the machine will emit a “nuisance” sound and the remaining time will be displayed on the operation panel.

IV. Functional description of the operating panel

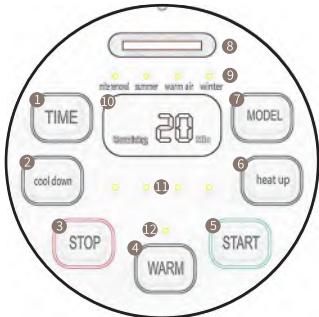

1. Setting the timer, press the button again will switch to the next timer in order, there are a total of nine timers, respectively 5-15-30-45-60-75-90-120-180 minutes.
2. Cooling down, lower the temperature by one degree.
3. Stop, press the button will enter the 10s countdown, the end of the countdown will turn off the device, press other buttons during the countdown will not stop the countdown to shutdown.
4. Warm, according to the current room temperature automatically adjust the temperature gear.
5. Start, will cancel the "stop" button countdown and turn on the device again.
6. Heating up, raise the temperature level by one degree.
7. Mode, switch four automatic operation modes: "mite removal", "summer", "warm air", "winter".
8. Temperature light, display the current temperature level, in order of the first "green light", second "orange light", third "orange-red light", fourth "Red light".
9. Mode indicators, from left to right are: "Mite Removal", "Summer", "Warm Air", "Winter".
10. Countdown screen, displaying the countdown time of the current execution.
11. Temperature level light, using different colors to show different temperature levels: first "green light", second "orange light", third "orange light", fourth "red light".
12. Constant temperature light, to show whether the constant temperature is now on or not.

X. Usage instructions

2. Dry beddings:

- *Place the hose outside the comforter as far as possible.
- *Press the hose firmly to prevent air from escaping through the gap between the hose and the bedding.

Caution:

- *Do not cover the body of the product with bedding or block the air intake.
- *Drying is not possible using only the mattress (lower comforter). Be sure to cover the comforter (top quilt) with the hose.
- *The overlapping part of the mattress and comforter may not dry sufficiently.

Improving drying efficiency

- *Please stretch the warm air hose and open the folded wing at the end of the hose.



- *By creating some space between the bedding, the hot air can be distributed more evenly.

3. Insert the power plug: Insert the power plug into the socket and the appliance will enter standby mode.



4. Select the operation mode:

(Select temperature mode and time setting as needed)

- *Temperature adjustment from left to right has 4 settings: room temperature, 40°C, 50°C and 65°C.



- *It can run for any of the 8 time settings of 15, 30, 45, 60, 75, 90, 120 or 180 minutes. The unit will stop automatically when the running time is over.

VI. Product temperature control instructions

Temperature setting and running time for each mode.


Mode	Using environment	Temperature and running time
Winter	For drying bedding in winter	High-temperature warm air (approx. 65°C) for 60 mins.
Summer	For drying bedding in summer	High-temperature warm air (approx. 65°C) for 60 mins, then cold air (near room temperature) for 20 min.
Warm air	For warming the bed in winter and before going to bed	Warm air at high temperature (approx. 65°C) fo
Mite removal	For removing mites from bedding	High temperature warm air (approx. 65°C) 90 mins.

Constant temperature will vary in operating temperature and usage time depending on the room temperature.


Room temperature	Mode executed at the current room temperature	Start-up time for each temperature
Above 25°C	Room temperature → 40°C → 50°C	<ul style="list-style-type: none"> Room temperature mode running for 10 mins 40°C mode runs for 15 mins 50°C mode runs for 20 mins 65°C mode runs for 30 mins
20-24°C	40°C→50°C→65°C	<p>The appliance will continue to run in sequence for a maximum of 12 hours and will automatically switch off at the end of that time.</p> <ul style="list-style-type: none"> If you want to stop in the middle, press the "Stop" button, the screen will count down for about 10 seconds, and the unit will stop running when "OFF" is displayed.
13-19°C	50°C→65°C	
Below 12°C	65°C	

IX. Usage Scenarios and Storage Methods

2. Hook part A on the back of the nozzle to part B of the main unit.
3. Store the nozzle on the back of the main body.

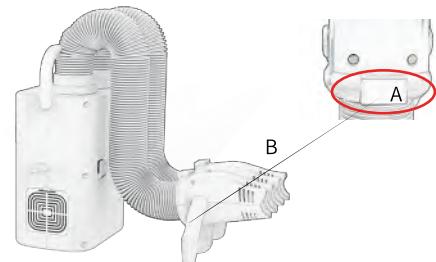

4. The detachable hose makes cleaning and storage easier.

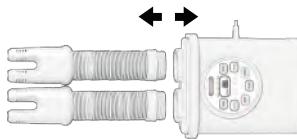

X. Usage instructions

• Drying/warming bedding/anti-dust mites

This product comes with two hoses. You can dry or heat two futons at the same time.

Caution: Please ensure that the heat-resistant temperature of the futon to be dried is 70°C or higher. In particular, functional bedding (beaded material, pipe pillow, etc.) may lose their function due to the temperature of

Quilt Size Guide
 Cushion: 150×200cm (3.5kg)
 Quilt: 150×210cm (3.0kg) There is no need to purposely remove the comforter and sheets when using the dryer.

VII. Product specifications and plug-in instructions for use

Heating Method	Ceramic heating PTC
Ventilation Hose Length	Double hose: about 80CM
Fan	Double ball bearing

2. Notes on plugging in

Plug the power cord into the socket on the wall or in the plug-in board.

VIII.Cleaning & Maintenance

Must read before cleaning:

⚠ Note:

1. Before cleaning or moving the product, please make sure to unplug the power plug from the socket and allow the main unit to cool down sufficiently, otherwise it will lead to burns or electric shock
2. When cleaning, do not use thinner, gasoline, polishing powder, hard bristle brush or chemical cleaner.
3. When cleaning, use warm water or mild kitchen detergent.

* Some neutral kitchen detergents are sometimes not suitable for use on plastics (resins). Even if a detergent suitable for plastics (resins) is used, if the detergent is left behind, a chemical reaction may occur, resulting in corrosion of the plastics (resins), which may cause damage, injury or accidents. Therefore, be sure to wipe thoroughly after cleaning to ensure that no detergent residue remains.

⚠ Warning:

1. Do not remove this product after inserting it with wet hands, as this may cause a short circuit or worse burns.
2. Do not pour water on the product or immerse the product in water, as this may result in electric shock, short circuit or fire.



VIII.Cleaning & Maintenance

Cleaning (1 time per month is appropriate)

1. Body: Please wipe with a soft cloth moistened with water (below 40°C) and then wipe off the cleaning agent with a thoroughly wrung cloth.
2. Filter: If used when the filter (air inlet) is clogged or dirty, it will degrade the performance of the product or even cause malfunction due to overheating of the product. Therefore, please follow the steps below for regular cleaning and maintenance:

- (1) Remove the filter cover on the side of the main unit and take out the filter.
- (2) Dust gently or use the soft brush of a vacuum cleaner to remove it. If it is particularly dirty, wash it with water and dry it thoroughly.
- (3) After cleaning, reinstall as is.



*Do not use the product without a filter. Failure to do so may result in malfunction.

*The filter is a consumable item. If dirt does not come off after cleaning, or if it is broken, please replace it promptly.

Maintenance

1. Do not place this product near heating devices, bathrooms and other high-temperature and humid places, and avoid direct sunlight or unstable places;
2. Please place it in a place where children can't touch it for safekeeping.
3. If the product is not used for a long time and needs to be used again, be sure to check and confirm that the product is in a normal, safe operating condition before use;

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Changsha Huadian Innovation Electronic Technology Co., Ltd. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.