

MH5 Instruction manual

(Note: For internal use only)

Product Appearance

Picture (1): Function Interface Diagram

Picture (2): Device End Power Interface Diagram

Picture (3): Power Adapter Interface Diagram

Picture (4): Interface Diagram After Power Supply Connection



Picture (1)



Picture (2)



Picture (3)



Picture (4)

Function Instructions

1 Turning on and off the machine

Turns on automatically when plugged in, as shown in (Picture 4) interface connection

Automatic shutdown after power disconnection.

2 Restart

Long press Reset for ten seconds in the beginning state, the machine will restart automatically.

3 USB interface

Insert the mouse to use when operating the application.

Support USB storage device.

4 TYPE_C interface

For the use of developers.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.