


产品说明书（中英文）

产品英文说明书：

1. After the product is plugged in, the light will automatically turn on .

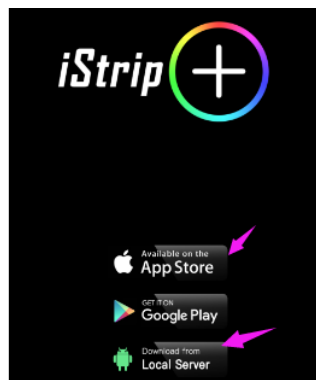

2. Scan the QR code on the right to download the app.


3. App searches for the SSL-xxxxxxx device and connects to it.

4. The realization of different modes and functions is controlled by APP .



产品中文说明书：

1. 产品插电后灯自动会亮起来。

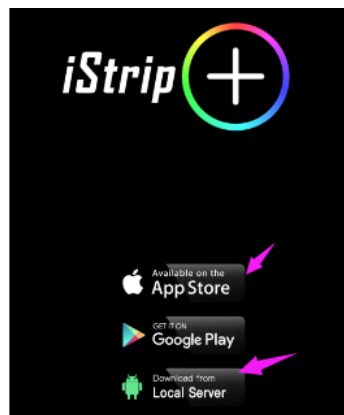

2. 扫描右边二维码进行 app 下载：

3. App 搜索到 SSL-xxxxxxx 设备并连接。

4. 通过 app 控制设备进入不同模式及功能的实现



Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different.

from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter