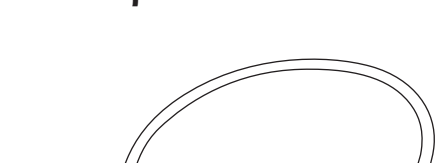 
 
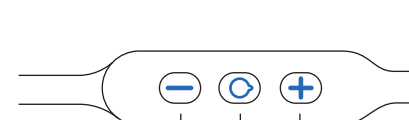 
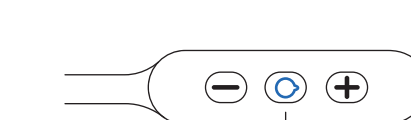 
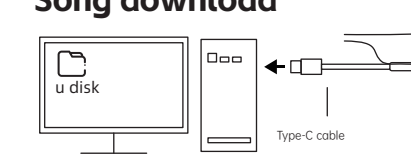 
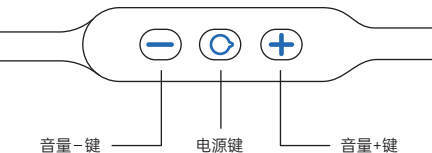 
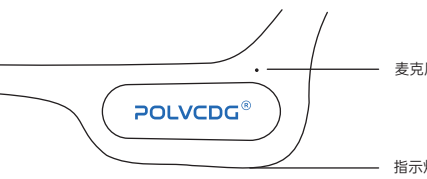 
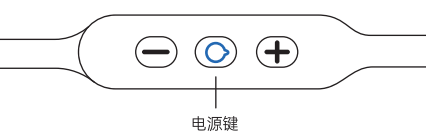 


 
 
尺寸：高105mm宽450mm

POLVCDG®  USER PRODUCT GUIDE Bone conduction sports earphones The power delivered by the charge must be between min 0.03 Watts required by the radio equipment, and max 5 Watts in order to achieve the maximum charging speed. 	Product parameters Product model: X15 Wireless version: V5.3 Transmission distance: ≤10M Musical format support: MP3, WAV, WMA, APE, FLAC, AAC Battery: 140mAh Charging: About 2 hours Play: 6~8H@50% volume Protocol: A2DP, AVRCP, HSP, HFP	Multiple use button  Volume - button Power switch Volume + button Power on: Long press the power button for 3 seconds, Red and blue lights flashing. Power off: Long press the power button for 3 seconds, Red light goes off. Answer an incoming call: Press the power button. Reject an incoming call: Long press the power button for 2 seconds. To end the call: Press the power button. Volume up: Press the "Volume +" button. Volume down: Press the "Volume-" button. Previous song: press the "Volume-" button for 2 times. Next song: Press the "Volume +" button for 2 times. Music play / Pause: Press the power button. Game Mode (Low latency): Long press the "Volume-" button. Wireless / MP3 (Memory version): Tap the power button twice.	Pairing/Pilot lamp  Microphone Pilot lamp Enter the pairing state: It will enter the pairing mode when it is turned on, and the red and blue lights will flash alternately when it is pairing. Reminder: After entering pairing mode, open the wireless search device name "POLVCDG X15" on the device, Click on the device "POLVCDG X15" to pair and connect. Once the connection is successful, it can be used. Connection successful waiting for playback: Blue light flashing. Game Low Latency Mode: Blue light flashing. When charged: The red light is long on. Fully charged: The blue light is long on. Low battery warning: When the battery is low, the red light flashes and the warning sound reminds every 3 minutes. Replace paired device: Disconnect the current paired device wirelessly, the indicator light flashes alternately in red and blue, and other devices You can search for "X15" and click on the link.	MP3 Mode Switching (memory card function required)  Power switch Dual mode switching: Double click the power button to freely switch between wireless and MP3 (TF card) modes. Reminder: The wireless mode defaults automatically upon startup. MP3 (TF card) mode: default sequential playback with memory function. Song download  Type-C cable - Connect the headphones to your computer via the Type-C cable. - Open the disk on your computer. - Import audio files to the disk.	Charging - The headphones use a built-in rechargeable battery, which must be fully charged when using the headphones for the first time. If the voice prompts low battery, you need to charge the headphones on time. - Connect the charging cable to the charging port of the headphones, and it will be fully charged in about 2 hours. The indicator light stays red while charging and turns blue when fully charged. Warning!!! - Do not soak the headphones in the water. Risk of water ingress into the product may cause damage to the product. - The rechargeable battery of this product must be properly disposed of for recycling. Please do not put the battery into the fire to avoid causing an accident. Matters needing attention - If you do not use it for a long time, please charge it at least once a month. - Please do not disassemble any part of the product without permission. If the product is found defective, stop using the product immediately. Contact the seller for after-sales treatment. - After each exercise, please wipe the water on the surface of the headphones, especially the position of the charging port. It should be cleaned in time to prevent water from corroding the charging port and affecting the service life of the product. - Keep the product away from fire, heat source, freezing source, and chemicals, and prohibit violent impact, disassembly, and extension of the product. - Please use the charging head with output 5V 1A or less. If the charge is greater than 5V, it will cause the headphones to heat up, which may cause damage to the battery and motherboard.
--	--	---	---	---	--

 
 
 
 
 
 
尺寸：高105mm宽450mm

POLVCDG® 铂典 X15 用户产品指南	产品参数  产品型号: X15 无线版本: V5.3 传输距离: ≤10m 音乐格式支持:MP3、WAV、WMA、APE、FLAC、AAC 音乐: 140mAh 充电: 约2小时 播放: 6-8H@50%音量 协议: HFP、A2DP、AVRCP	多功能键  开机 关机 接听 结束通话 蓝牙/MP3 (内存卡) 手机智能语音 游戏模式(低延迟) 音量加 音量减 上一曲 下一曲 音乐播放 音乐暂停 长按电源键5秒,红灯闪烁。 长按电源键3秒,红灯灭。 短按电源键一下。 短按电源键一下。 双击电源键。 长按音量+键。 长按音量-键。 短按音量+键。 短按音量-键。 短按2次音量+键。 短按2次音量-键。 短按电源键。 短按电源键。	配对/指示灯  麦克风 指示灯 进入配对状态: 开机即进入配对模式,在配对状态时,红灯交替闪烁。 配对: 进入配对状态后,打开设备上的无线搜索设备名称“POLVCDG X15”,点击设备“POLVCDG X15”配对连接,连接成功即可使用。 连接成功等待播放: 蓝灯闪烁。 游戏低延迟模式: 蓝灯闪烁。 充电时: 红灯长亮。 充满电时: 蓝灯长亮。 低电提示: 低电时红灯闪烁,提示音每隔3分钟提醒一次。 更换配对设备: 断开当前配对设备无线,指示灯红蓝交替闪烁,其他设备即可搜索到“X15”,点击连接即可。	双模式切换 (适用32g)  电源键 双模式切换:双击电源键自由切换无线和MP3(TF卡)模式 提醒:开机自动默认无线模式。 MP3(TF卡)模式:默认顺序播放,带记忆功能。 歌曲下载: 1.通过Type-C电缆将耳机连接到计算机。 2.打开计算机上的磁盘。 3.将音频文件导入磁盘。 警告!!! 1.不要将耳机浸泡在水中。充电端口进入水有风险。请迅速干燥充电端口。 2.本产品的可充电电池必须妥善处理以进行回收。请勿将电池投入火中,以避免造成火灾	充电 1.该耳机使用内置可充电电池,首次使用耳机必须给电池充满电使用中,若语音“滴滴”提示电量低时,表示电池电量低,此时需要给耳机充电。 2.将充电线连接到耳机的充电口,2小时左右即可充满,充电状态指示灯长亮,充满电常亮蓝灯。 充电提供的功率必须在无线设备所需的最小0.03瓦和最大5瓦之间,以达到最大充电速度。  注意事项 1.耳机不能泡海水/盐水,使用后如有雨水,请用纸巾擦干充电部分。 2.如果长时间不使用,请至少一个月充一次电。 3.请不要私自拆装产品上任何部件,如发现产品有缺陷应立即停止产品使用,联系销售方售后服务。 4.每次运动后请将耳机表面的汗水擦拭干净,特别是充电口位置。 5.要及时处理干净,防止汗水、盐水腐蚀充电口,影响产品使用寿命。 6.产品远离火源、热源、冷冻源、化学品,严禁暴力撞击拆装挤压产品。 7.请慎用输出5VIA及以内的充电宝。如果大于5V充电,会造成耳机发热,有可能造成电池及主板损坏。
--	--	--	---	--	--

尺寸：高105mm宽450mm

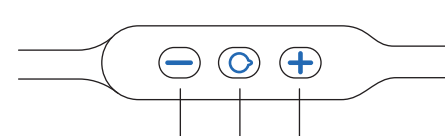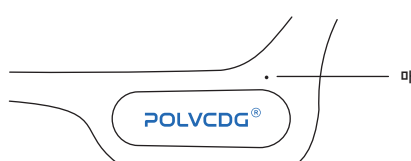POLVCDG® (X15) 사용자 제품 안내서 충전은 최대 충전 속도를 위해 무선 장치에 필요한 최소 0.03W와 최대 5W 사이의 전력을 공급해야 합니다. 0.03 ~ 5 W 제품 모델:X15 무선 버전:V5.3 전송 거리: ≤10m 음악 형식 지원:XMP3, WAV, WMA, APE, FLAC, AAC 배터리: 140mAh 충전: 약 2시간 재생: 6-8H@50% 음량 프로토콜:HFP, A2DP, AVRCP	제품매개변수  제품 모델:X15 무선 버전:V5.3 전송 거리: ≤10m 음악 형식 지원:XMP3, WAV, WMA, APE, FLAC, AAC 배터리: 140mAh 충전: 약 2시간 재생: 6-8H@50% 음량 프로토콜:HFP, A2DP, AVRCP	다기능 키  전원 켜기: 전원 버튼을 3초 동안 길게 누르면 파란색 불이 2초 동안 깜박입니다. 전원 끄기: 전원 버튼을 3초 동안 길게 누르면 빨간불이 항상 1초 동안 켜집니다. 수신: 전원 버튼을 짧게 누르십시오. 통화 종료: 전원 버튼을 짧게 누르십시오. 게우기 음성 지시: 전원 키 15를 길게 눌러 게우기를 놓습니다. 볼륨 클러시: 볼륨 + 키를 짧게 누릅니다. 볼륨 감소: 볼륨 - 키를 짧게 누릅니다. 이전 곡: 1초 음량 - 키를 길게 누릅니다. 다음 곡: 1초 음량 + 키를 길게 누릅니다. 재생 / 일시정지: 전원 키를 짧게 누릅니다. 송곡이 및 영어에 있어 전원: 장치가 연결되지 않은 상태에서 빠르게 연속 4 회 전원 키를 눌러 중영 전환 켜.	페어링 / 표시등  쌍 설정: 전원을 켜면 쌍 모드로 전환되고 쌍 설정 시 빨간색과 파란색 등이 번갈아 깜박입니다. 페어링: 페어링 상태가 되면 장치에서 무선 검색 장치 이름 "POLVCDG X15"를 엽니다. 장치 "POLVCDG X15" 페어링 연결을 클릭하여 연결에 성공하면 사용할 수 있습니다. 연결이 성공적으로 재생 대기 중: 파란색 램프가 깜박입니다. 게임 지면 시간 단축 모드: 파란색 램프 깜박임. 충전 시: 빨간불이 켜집니다. 충전 시: 파란색 램프가 길고 밝습니다. 지연된 알림: 충전할 시 빨간불이 깜박이고 알림음이 3번만 울립니다. 페어링 장치 고착: 원격 페어링 장치의 무선 찾기, 표시등 빨간색과 파란색 번갈아 깜박임, 기타 장치 "X15"를 검색하고 접속을 클릭하면 된다.	이중 모드 전환  이중 모드 전환: 전원 키를 두 번 클릭하여 무선 및 MP3(TF카드) 모드를 자유롭게 전환. 알림: 전원 켜기 지동 기본 무선 모드. P3(TF카드) 모드: 메모리 기능이 있는 기본 순서 재생.	충전  1. 이 헤드폰은 내장 충전 기능인 배터리를 사용하며, 처음 헤드폰을 사용하면 배터리를 충전해야 합니다. 사용 중. 만약 음상 "디"가 장치가 많이 낮아지고 배터리를 때 전지의 전기가 많이 낮아지는 것을 표시하는 데 이때 이어폰을 충전해야 합니다. 2. 이어폰의 마그네틱 충전구에 충전선을 연결하면 2시간 정도만 충전할 수 있다. 충전 상태 표시등이 길고 밝아져가 더욱 차분한 항상 파란색 등을 밝힌다. 경고!!! 1. 자기 흡입 충전은 양극극의 대응이 있다. 상호 흡착은 정상적으로 충전할 수 있다. 상호 배척하면 충전할 수 없다 심지어 합선도 초래한다. 2. 본 제품의 충전 가능한 배터리는 재충전을 위해 적절하게 처리해야 합니다. 폭발을 일으키지 않도록 배터리를 잘 관리하십시오. 주의 사항 1. 이어폰은 배터리를 소모할 때 오래 달고면 안되며 사용 후 담수로 씻어 충전지기를 일부는 닦아낸다. 2. 장시간 사용하지 않을 경우 최소한 한 달에 한 번은 충전하십시오. 3. 제품의 어떤 부품도 사자로이 분해하지 마십시오. 만약 제품을 결함이 발견되면 즉시 제품의 사용을 중지하고 판매자에게 연락하여 판매 후 처리합니다. 4. 제본 음용 후 이어폰 표면의 물을 깨끗이 닦으십시오. 특히 충전 지기 흡입구 뒤치는 제액이 깨끗이 닦아내어, 소음없이 충전구를 부식시켜 제품의 사용 수명을 영향을 주지 않도록 해야 합니다. 5. 제품은 차온, 과열, 냉동, 냉각, 화상을 유발하고 충격적인 충격을 경험하여 화재하여 제품을 압출한다. 6. 출력 5V1A 이내의 충전 헤드폰을 사용하십시오. 5V 이상으로 충전하면 이어폰에 열이 나고 배터리와 마더보드가 손상될 수 있다.
---	---	--	--	---	--

尺寸：高105mm宽450mm

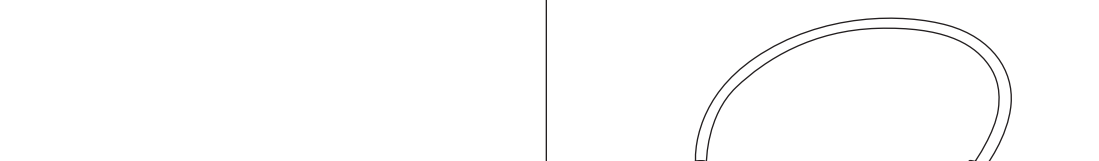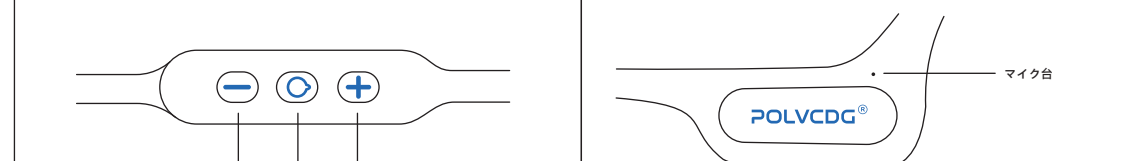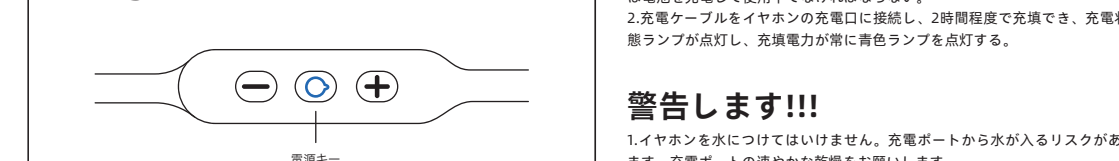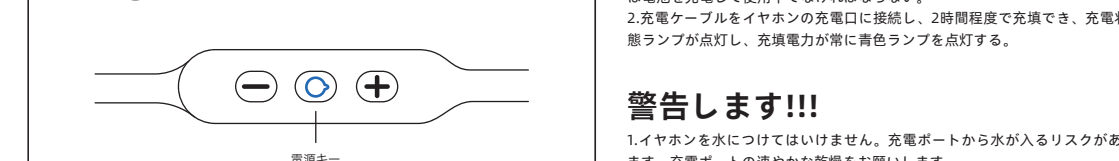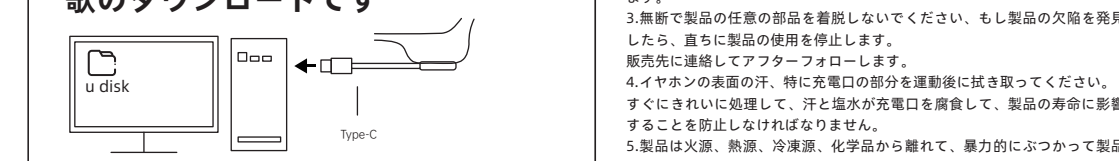 ユーザー製品の パフォーマンス  充電に必要な電力は、最大充電速度を達成するために無線デバイスに必要な最小0.03 Wと最大5 Wの間にある必要があります。 	製品パラメータ 製品型番: X15 ワイヤレスバージョン: V5.3 伝送距離: ≤10m 音楽フォーマットのサポート: MP3、WAV、WMA、APE、FLAC、AAC 電池: 140 mAh 充電: 約2時間 再生: 6~8H@50音量% プロトコル: HFP、A2DP、AVRCP 多目的キー  電源オン: 電源ボタンを3秒間押し続けると、赤と青のランプが点滅します。 電源を切る: 電源キーを3秒間押し続け、赤信号が点滅した。 受話器: 電源ボタンを短く押してください。 通話終了: 電源ボタンを長く押してください。 Bluetooth/MP3 (メモリー版): 電源キーをダブルクリックします。 携帯電話のスマート音声: 音量+キーを長押しします。 ゲームモード (低遅延): 音量-キーを長押しします。 音量プラス: 音量+キーを短く押します。 音量減: 音量-キーを短く押します。 前の曲: 音量+キーを2回押します。 次の曲: 音量-キーを2回押します。 音楽再生: 電源ボタンを短く押します。 音楽の一停止: 電源ボタンを長く押します。	ベアリング/LED  ベアリング状態に入る: 電源を入れるとベアリングモードに入り、ベアリング状態になると赤と青のランプが交互に点滅する。 ベアリング: マイクがベアリング状態になったら、デバイス上の無線接続デバイス名「POLVCDG X15」を開き、デバイス「POLVCDG X15」のベアリング接続をクリックして、接続が成功すれば使用できます。 接続が正常に再生されるのを待っています: 青ランプが点滅します。 ゲーム低遅延モード: 青ランプ点滅。 充電LED: 赤信号が点灯。 フル充電LED: 青ランプが点灯します。 低電力プロンプト: 低電力時に赤信号が点滅し、プロンプト音は3分おきに注意する。 ベアリングデバイスの交換: 現在のベアリングデバイスのワイヤレスを切断し、LEDが赤と青で交互に点滅し、他のデバイスは「X15」を検索でき、接続をクリックすればよい。
		デュアルモード切り替え (32 g適用)  デュアルモード切り替え: 電源キーをダブルクリックして無線モードとMP3 (TFカード) モードを自由に切り替える リマイ징: 電源を入れると自動的にデフォルトのワイヤレスモードになります。 MP3 (TFカード) モード: デフォルトステータス再生、メモリー機能付き。 充電します 1.イヤホンは内蔵充電可能電池を使用し、初めてイヤホンを使用するには電池を充電して使用中でなければなりません。 2.充電ケーブルをイヤホンの充電口に接続し、2時間程度で充電でき、充電状態ランプが点灯し、充電電力が常に青色ランプを点灯する。 警告します!!! 1.イヤホンを水につけてはいけません。充電ポートから水が入るリスクがあります。充電ポートの湿やかな乾燥をお願いします。 2.本製品の充電式電池は回収のために適切に処理しなければなりません。電池を火に入れないでください。 火事にならないようにするです。 注意事項です 1.イヤホンは海水、塩水につけてはいけません。使用後に雨が降った場合は、充電部をティッシュペーパーで拭いてください。 2.長時間お使用にならない場合は、最低でも月に一回はフル充電をお願いします。 3.無断で製品の任意の部品を改造しないでください。もし製品の欠陥を発見したら、直ちに製品の使用を停止します。 販売先に連絡してアフターフォローします。 4.イヤホンの誤操作のリスク、特に充電の部分を運動中に拭き取ってください。 すぐにきれいに処理して、汗と塩水が充電口を腐食して、製品の寿命に影響することを防止しなければなりません。 5.製品は火源、熱源、冷凍源、化学品から離れて、暴力的なぶつかる製品を分解して破ることを避けます。 6.出力5V1A以下の充電ケーブルを使用します。5V以上の充電をするとイヤホンが熱くなります。バッテリーおよびマザーボードが破損する場合があります。 歌のダウンロードです  1.イヤホンをtype-Cケーブルでパソコンに接続します。 2.コンピュータのディスクを開きます。 3.オーディオファイルをディスクに取り込みます。

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.