



# User Manual

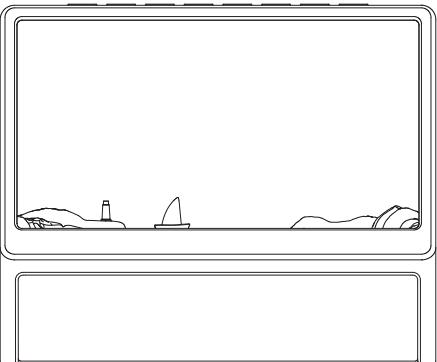

HXD-RC-003



## Host Button Operation Instructions

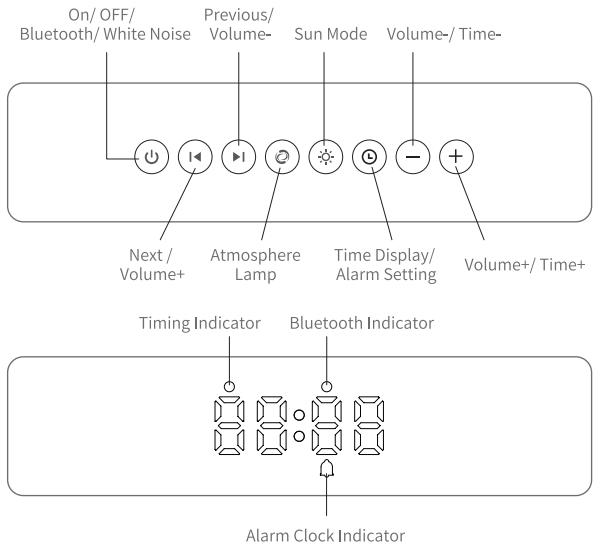

### Attention

- ◆ This product is not replaceable, when the light source reaches the end of life, the entire lamp should be replaced.
- ◆ Please connect the 5V=2A adapter for power supply. Please do not directly connect to the USB socket for power supply. Otherwise, there is a chance that the product will shut down frequently due to insufficient power supply.

◆ **On/OFF/ Bluetooth/ White Noise:** Short press the button to turn on the device. The sun mode turn on automatically when you power on the device. In Power-On state, short press to activate Bluetooth mode, press again to switches to white noise mode. Long press to turn off the device.

◆ **Previous/ Volume-:** Short press the button to switch to the previous song. Long press the button to reduce the volume.

◆ **Next / Volume+:** Short press the button to switch to the next song. Long press the button to turn up the volume.

◆ **Atmosphere Lamp:** The atmosphere lamp turn on automatically when you power on the device. Short press the button to switch atmosphere lamp's mode. Long press to turn off the light. Short press the button to turn on the light.

◆ **Sun Mode:** Short Press this button to activate sun mode (simulated sun). The overall appearance of the product is an animation simulating the rising and setting of the sun. In this state, short press the button to pause movement(sun rising or setting), press again to continue the current movement. Long press to turn off this function.

◆ **Time Display/ Alarm Setting:** Short Press "◎" enters time display settings state. In this state, short press "◎" again can adjust Hour/Min selection. After the settings are completed, press the button briefly again to confirm the current time. Long Press "◎" enters alarms settings state, with the alarm indicator "■" appearing in display screen. In this state, short press this button again can change setting items include: [ON/OFF Alarm]-[Hour/Min Setting]-[Alarm Tone Selection];

• **[ON/OFF Alarm]:** Short press the button "+/-" can turn on or turn off the alarms with "ON/OFF" in the display screen.

• **[Hour/Min Setting]:** Short press the button "+/-" to adjust the time display.

• **[Alarm Tone Selection]:** Short press the button "+/-" to select alarm tone. After confirming the alarm clock tone, short press the "◎" again to finalize the alarm cloock configuration.


◆ **Volume-/Time-:** In time display or alarm setting mode, short press to decrease the displayed time number by 1. In alarm tone selection mode, short press to cycle to the previous white noise sound and decrease the number on the time display panel by 1. When the audio is playing, short press this button will decrease the volume.

◆ **Volume+/Time+:** In time display or alarm setting mode, short press to increase the displayed time number by 1. In alarm tone selection mode, short press to cycle to the next white noise sound and increase the number on the time display panel by 1. When the audio is playing, short press this button will increase the volume.

### How to Connect the Bluetooth?

When you hear Bluetooth tone, the Bluetooth function is turned on and ready to connect to your phone. The Bluetooth name of the device is "Sunrise Wake-up Lamp" turn on your phone Bluetooth function and search, when "Sunrise Wake-up Lamp" appears, select this option to pair with a successful connection tone. If the Bluetooth connection is not established within 5 minutes, it will automatically turn off.

## Remote Control Operation Instructions

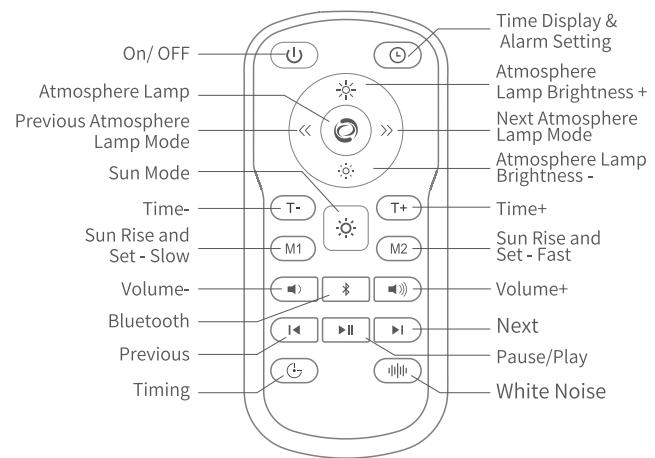

- ◆ **On/ OFF:** Short press the button to turn on or turn off the device.
- ◆ **Time Display/ Alarm Setting:** Short Press "◎" enters time display settings state. In this state, short press "◎" again can adjust Hour/Min selection. After the settings are completed, press the button briefly again to confirm the current time. Long Press "◎" enters alarms settings state, with the alarm indicator "■" appearing in display screen. In this state, short press this button again can change setting items include: [ON/OFF Alarm]-[Hour/Min Setting]-[Alarm Tone Selection];
- **[ON/OFF Alarm]:** Short press the button "+/-" can turn on or turn off the alarms with "ON/OFF" in the display screen.
- **[Hour/Min Setting]:** Short press the button "+/-" to adjust the time display.
- **[Alarm Tone Selection]:** Short press the button "+/-" to select alarm tone. After confirming the alarm clock tone, short press the "◎" again to finalize the alarm cloock configuration.
- ◆ **Atmosphere Lamp Brightness + :** Under monochrome mode, you can adjust the brightness of the light. The brightness is adjustable across 5 levels, defaulting to the medium level. Each button press increments the brightness by one level. When reaching maximum brightness , there is a prompt tone.
- ◆ **Atmosphere Lamp:** The atmosphere lamp turns on automatically when you power on the device, short press to switch the atmosphere lamp mode, long press to turn off the atmosphere lamp function. Short press to activate atmosphere lamp.
- ◆ **Previous Atmosphere Lamp Mode:** Short press this button to switch to previous light mode.
- ◆ **Next Atmosphere Lamp Mode:** Short press this button to switch to next light mode.
- ◆ **Atmosphere Lamp Brightness - :** Under monochrome mode, you can adjust the brightness of the light. The brightness is adjustable across 5 levels, defaulting to the medium level. Each button press decrements the brightness by one level. When reaching minimum brightness, there is a prompt tone.

◆ **Sun Mode:** Short Press this button to activates sun mode (simulated sun). Motion speed defaults to slow. The overall appearance of the product is an animation simulating the rising and setting of the sun. In this state, short press the button to pause movement(sun rising or setting), press again to continue the current movement. Long press to turn off this function.

◆ **Time-:** In time display or alarm setting mode, short press to decrease the displayed time number by 1. In alarm tone selection mode, short press to cycle to the previous white noise sound and decrease the number on the time display panel by 1.

◆ **Time+:** In time display or alarm setting mode, short press to increase the displayed time number by 1. In alarm tone selection mode, short press to cycle to the next white noise sound and increase the number on the time display panel by 1.

◆ **Sun Rise and Set - Slow:** Press this button, the sun moves (sun rising or setting ) slowly.

◆ **Sun Rise and Set - Fast:** Press this button, the sun moves (sun rising or setting ) fastly.

◆ **Volume- :** Short press this button to reduce the volume.

◆ **Bluetooth:** Short press to activate Bluetooth mode, long press the button to turn off the Bluetooth function.

◆ **Volume+ :** Short press the button to turn up the volume. When reaching maximum volume, there is a prompt tone.

◆ **Previous:** Short press the button to switch to previous song.

◆ **Pause/Play:** While audio is playing, press the button to pause. Press it again to resume playback.

◆ **Next:** Short press the button to switch to next song.

◆ **Timing:** Press the button to activate a 45-minute countdown. You'll hear a confirmation tone and see the timing indicator light up blue. Press the button again to activate a 90-minute countdown. You'll hear two confirmation tones and see the timing indicator light up red. Long press this button to cancel the automatic turn off function with no tone.

◆ **White Noise:** The white noise mode turns on automatically when you power on the device. Short press the button to activate white noise mode, and long press the button to turn off the white noise mode.

### FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Material: ABS/PMMA/PC/POM

Rated Voltage: 5V=2A

Control Mode: Remote control

Remote Control Range: <5meters(Best distance)

Product Size: 180\*114\*150mm

Applicable Environment: Indoor Home(Better in a dark environment)

Working Temperature: 10°~40°Celsius

