

W&P 智能OWS运动耳机 W2_说明书(亚马逊)


材质: 哑粉纸128g 成型方式: 风琴折 印刷颜色: 单黑


成型尺寸: 70*105mm

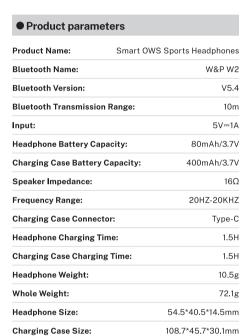

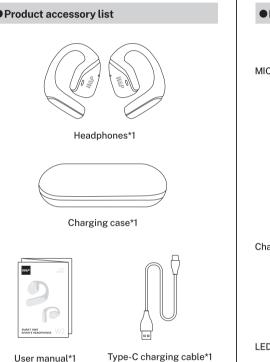



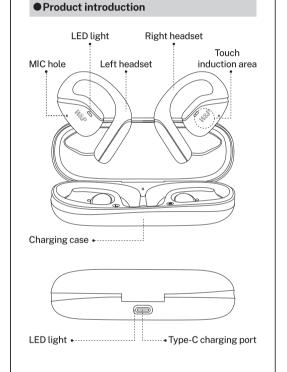

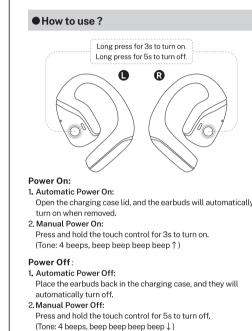

1. Headphones cannot be paired with cell phone?

2. The headphones cannot be turned on?

3.Can I replace the battery of headphones?

4.Is the headphones disconnected from my cell phone?

indoor, if the distance between the cell phone and the

headphones is more than 10 meters or there are multiple

obstacles, the headphones and the cell phone will be disconnected, please keep within the effective distance

Since Bluetooth is a wireless technology, it is sensitive to

device, please check whether there is metal or other objects

my cell phone when it is connected to my cell phone?

The software settings of device applications may vary, so that the functions of individual applications do not support

5. After connecting the headphones to the computer or

cell phone, I hear different sounds?


control by headphones.


for 30 min before turning on.


Check whether the headphones is in pairing or connecting state, and check the Bluetooth search function of your cell


Low Battery Reminder


(Tone: 1 beep)

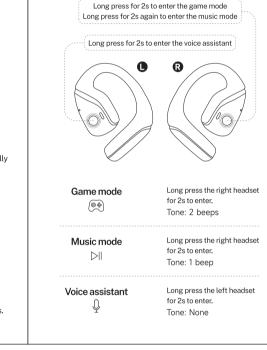

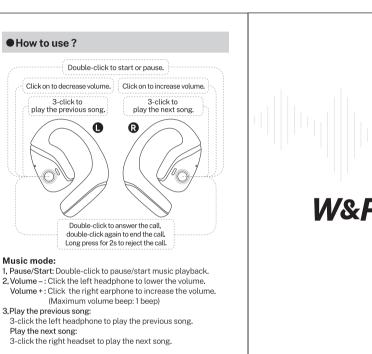

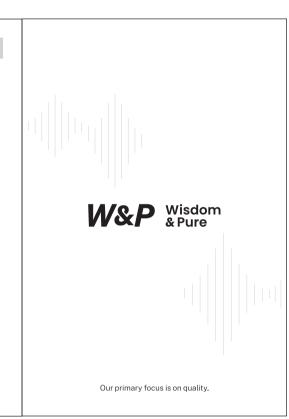

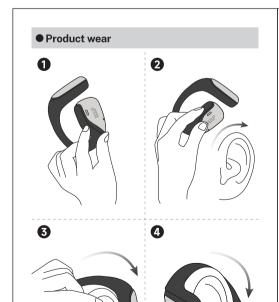

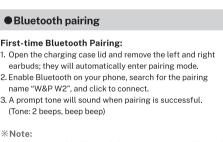

If you cannot find the Bluetooth device, please turn off Bluetooth on your phone and then turn it back on to reconnect.
The pairing time for the earbuds is 5 min, they will automatically turn off if the time is exceeded. If you need to connect again, please follow the steps above until the Bluetooth connection

Automatic Reconnect Feature: After the first successful connection, the earbuds

to reconnecting to the last paired device upon power on.

Clear Bluetooth Pairing History:

Turn off Bluetooth on your phone, ensuring the earbuds in an unconnected state.

in an unconnected state.

2. Click each earbud 5 times; a tone will sound to confirm that the Bluetooth pairing history has been cleared.

(Tone: 4 beens, been been been been)

Device status	LED light status	
Turn on	Blue light on for 1s	
Turn off	Blue light on for 1s	
Pairing state	Main headphone: White and blue light flashes alternately Secondary headphone: Blue light flashes slowly	
Not connected	Main headphone: Blue light blinking Secondary headphone: Indicator light is off	
Connected successfully	LED light is off	
Music mode	LED light is off	
Call mode	LED light is off	
Game mode	LED light is off	
While charging	White light is always on	
After charging	LED light is off	
Clear pairing	White light on for 2s and then off	

Device status	LED light status		
While charging	Red light is always on		
After charging	Red light is off		
While charging headphones	White light is always on		
After charging headphones	LED light is off		
While low battery	White light blinks until it goes out		

Charging case LED light description

Malfunctions	Causes	Solutions
Unable to boot	Low battery	Please recharge in time
Cannot connect	Outside the connection range	Be careful to connect within 10 meters
No sound during calls	Connection Failure / Not in call mode	Reconnect / Switch to call mode

Precautionary note

- Do not use corrosive cleaning agents to clean the product.
- Do not expose this product to direct sunlight for a long time, do not place this product in a high temperature environment, and keep it away from ignition sources.
- Do not immerse headphones in water.
- If there is a serious bulge, it is prohibited to continue using it.
 Do not disassemble or squeeze the battery, and do not put it into fire, which may cause the battery to leak, overheat, catch
- Do not attempt to disassemble this product to make any modifications, as it does not contain any detachable service
- This device is not a toy and should be used by children under adult supervision.
- If you do not intend to use this product for an extended period
 of time, please store it in a dry environment and charge the
 headphones at least once a month to prolong its life and avoid
 extreme temperatures and dust.

● Product storage & maintenance

1. Answer call: Double-click to answer the call.

2.Reject call: Long press for 2s to reject the call.

- Please store in a cool and dry place
- 2.Product Maintenance
- A. Recommended use 5V/2A charger to charge headphones.
- B. Please wipe off any residual sweat on the headphones contacts after use to avoid oxidation of the metal contacts.

 C. The suggested working temperature range is 5°C-45°C.
- Too cold, too hot, or high-temperature environments will "can" reduce battery life and affect product performance.

 D. Do not use it in thunderstorms.
- E. Please recharge the battery before use after a long time of
- F. Please use dry soft cloth to clean the headset.
- G. If there is water or sweat at the slot, wiping it with a dry cloth, does not affect normal use.
- H. Please do not approach sharp or hard objects, easily damage the product.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an te 2:

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID: 2BLSM-W2

版本	变更描述	变更日期
A01	初始发行	2024/10/
∤√ F	€. Ⅲ炒/红1 20~	
	5:哑粉纸128g 型方式:风琴折	
	別颜色:单黑	
	型尺寸: 70*105mm	

项目工程师

吴剑

设计师

胡芳妹

物料名称: 折页说明书

W2 OWS开放式蓝牙耳机