

User Manual

ASTRONAUT SPEAKER

WHAT'S IN THE BOX


- » 207-Astronaut all colors
- » USB-A to USB-C charging cable
- » User manual

YOU MAY ALSO NEED


- » USB-A power source for charging (laptop/PC, powerbank, car charger, 240V wall)

PARTS AND CONTROLS

[M] Change: Mode / Light [◀◀] Vol. Down / Previous Song [▶▶] Vol. Up / Next Song Effects [▷▷] Play-Pause

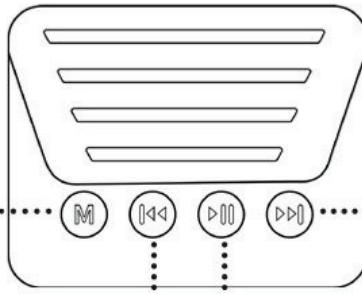

USB Port USB-C Charging Port
Micro SD Card Slot Power Switch
Indicator Light.....

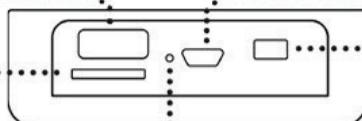

FUNCTION	OPERATION
Charge	<ul style="list-style-type: none">» Connect the USB-C cable to a 5V USB-A power source (wall charger, car charger, laptop/PC, powerbank, etc.).» Red light: Charging.» No light: Fully charged. <p>i Fully charge before first use.</p>
Turn On/Off	<ul style="list-style-type: none">» Slide the Power switch.
Change lighting effects	<ul style="list-style-type: none">» Press to change the effects.» Press and hold the [M] button to turn on/off the light.

FUNCTION	OPERATION
Play Music via Bluetooth	<ol style="list-style-type: none"> 1. Turn on the speaker (red and blue lights flash). 2. Open Bluetooth settings on your device (smartphone, tablet, etc.) 3. Select U Astronaut from the list. 4. Start playback on your device. <p>» To disconnect, turn off your device or the speaker.</p>
Play from a Micro SD Card or USB Flash Drive	<ol style="list-style-type: none"> 1. Turn off the speaker. 2. Insert a Micro SD card with metal contacts facing back or a USB flash drive (both not included). 3. Turn the speaker back on. It will automatically switch to the correct mode. <p>» Supports MP3 files.</p>
Switch Between Input Modes	<p>» Double press the [M] button.</p>
Control playback*	<p>» Press the [▷II] button to play or pause.</p>
Adjust volume*	<p>» Press and hold the [▶] button to increase the volume.</p> <p>» Press and hold the [◀] button to decrease the volume.</p>
Skip tracks*	<p>» Press the [▶] button to skip to the next track.</p> <p>» Press the [◀] button to go to the previous track.</p>

*In Bluetooth mode, you can control playback, adjust the volume and skip tracks on your device.

SAFETY PRECAUTIONS

- » Always supervise children while using the speaker.
- » If the speaker become hot during use or charging, unplug and stop using them immediately.
- » An adult should assist with Bluetooth pairing to avoid unknown connections.
- » An adult should handle the charging process. Do not let children charge the speaker.
- » Charge on a flat, dry surface, away from flammable materials.
- » Unplug the speaker once fully charged to prevent overheating.
- » Keep away from moisture, dust and extreme heat.
- » Clean with a soft, dry cloth. Avoid harsh chemicals.

- » Avoid dropping or subjecting to impact to prevent damage.
- » Never insert the USB plug if the speaker or cable is wet to prevent short circuits, overheating or damage.
- » To prolong battery lifespan, fully charge at least once every 3 months. Battery life varies by use and settings.
- » Do not alter the charging mechanism, battery or other internal components.

TROUBLESHOOTING

Speaker will not turn on:

- » Charge the battery.

No sound:

- » Check volume level on the speaker and connecting device.
- » Check Bluetooth connection.

Cannot pair Bluetooth device with speaker:

- » Keep speaker next to your device during pairing.
- » Ensure speaker are in pairing mode. Disconnect AUX cable, and remove the Micro SD card. Turn off and on again to switch to pairing mode.
- » If speaker are paired to another device, disconnect before connecting to your device.
- » If speaker's Bluetooth name is not found, refresh or search again. Wait up to 1 minute for device to appear.

SPECIFICATIONS

- » Model: 207-Astronaut all colors
- » Audio inputs: Bluetooth, Micro SD, USB
- » Bluetooth pairing name: U Astronaut
- » Bluetooth version: 5.4
- » Bluetooth range: 10m (unobstructed)
- » Sensitivity: 82dB ±3dB at 1kHz
- » Frequency range: 20Hz-20kHz
- » Battery capacity: 2500mAh
- » Micro SD card & USB flash drive: Up to 64GB in FAT32 format
- » Charging time: Approx. 3-4 hours
- » Charging power input: 5V, 1A



Do not dispose of batteries or electronic devices with household waste.
Follow local recycling regulations. Visit <https://recyclingnearyou.com.au> for more information.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.