

1. 尺寸: 95*155mm

2. 正反面折页一面英语一面汉语

英文

record player turntable JUKEBOX

User Manual

Model: 1900

1

2

3

4

5

BEFORE USE

- Read these instructions
- Follow all instructions
- Choose a safe location and avoid placing the unit in direct sunlight or near any heat source.
- Avoid locations subject to vibrations, excessive dust, cold or moisture.
- Do not open the cabinet as this may result in electrical shock. If a foreign object is inserted accidentally contact your dealer.
- Do not attempt to clean the unit with chemical solvents as this might damage the finishing. A clean, dry cloth is recommended for cleaning.
- Clean only with dry cloth.
- Keep this manual for future reference.

Vintage Turntable Parts & Features

1. Lift lever
2. Headphone
3. AUTO STOP ON/OFF switch
4. Function switch knob
5. 33/45/78 RPM switch – This switch controls the RPM of the turntable platter
6. Power on/off and volume control knob
7. Power indicator
8. Tone arm
9. Stylus
10. Tone arm lock
11. Platter – Place your record here. Please use the 45 RPM adapter, if the spindle is the incorrect size
12. 45 RPM adapter holder – Holds the included 45 RPM adapter. When not using the adapter, please place it in this holder
13. RCA output – Use to connect to external speakers (not included)
14. Type-C IN jack

Getting Started

Firmly and securely insert the DC plug of the adaptor to the DC IN Jack on the back of the unit. Plug the adaptor's AC plugs into a power outlet.

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT THE PLUG TO MAIN POWER SOCKET.

Phone Mode

- Switch the function switch knob① to PHONO mode. Turn on the power switch⑩. The power indicator will become red color.
- Place a record on the turntable platter and select the desired speed (33/45/78)⑤ according to the record. NOTE: When playing a 45 rpm record, use the included 45 rpm adapter⑫ located in the holder near the tone arm

Bluetooth Mode

- Switch the function switch knob① to BT. The power indicator will become blue color with flashing.
- Turn on your Bluetooth function on your mobile phone or tablet PC and then search the turntable player with its name **Vintage Turntable**. After pairing and connection, the power indicator will become blue color without flashing, and you can play your music from your mobile phone or tablet PC on this turntable player. The Bluetooth wireless connection distance is generally 10 meters without any obstacles.
- Turn the VOLUME CONTROL KNOB⑩ to adjust the volume. (The mobile phone or tablet PC's volume control may also impact the volume level so ensure that it is also turned up.)

Bluetooth Transmitter

- Power ON the unit by turning the volume switch knob clockwise.
- Switch the function knob to the BT OUT(Bluetooth Out) position, the blue LED light will begin to slow flash.
- Turn ON your external Bluetooth receiver device(such as Bluetooth headphones and Bluetooth speakers) and set to pairing mode.
- When pairing is complete you will hear a chime and the blue LED light will stop flashing. This may take approximately 15-30 seconds
- You are now connected to your external Bluetooth device

MUSIC playback on your own speaker system

- Connect your own speaker system to the RCA port with a RCA-3.5mm audio cable (not included).
- You can enjoy the music of the vinyl records at your own speaker system.

MUSIC playback on your headphone

Connect your headphone to the headphone port. You can enjoy the music of the vinyl records via your headphone.

TIPS TO BETTER TURNTABLE PERFORMANCE

- When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
- Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
- Frequently clean the needle tip-use a soft brush in a "back-to-front" motion only.
- If you must use a needle cleaning fluid, use very sparingly.
- Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.
- Never apply harsh chemicals or solvents to any part of the turntable system.

How to Replace the Turntable Stylus (Needle)

Removing the Stylus from the Cartridge

- Place a screwdriver at the tip of the stylus and push downward as shown in direction "A".
- Remove the stylus by pulling the stylus forward and pushing downward.

Installing the Stylus

- Hold the tip of the stylus and insert the stylus by pressing as shown in direction "B".
- Push the stylus upward as in direction "C" until the stylus locks into the tip position.

中文

台式留声机

使用说明书

型号: 1900

1

2

3

4

5

产品功能介绍

■ a: PHONO模式: 手动切换模式, 提示音 黑胶播放 和 LED红色灯, 3速转盘, 可选转速33/45/78RPM, 可播放7英寸、10英寸、12英寸的黑胶唱片。
■ b: BT模式: 蓝牙接收, 手动切换模式, 提示音 蓝牙接收 和LED蓝色灯。
■ c: BT OUT模式: 蓝牙发射, 手动切换模式, 提示音 蓝牙发射 和LED蓝色灯。

包装清单

打开产品包装后,请在使用之前仔细检查以下物品:
1. WhatPlus 1900 台式留声机*1
2. 产品说明书*1
3. 5V 1A电源适配器*1
4. Type-C充电线*1

了解我们的产品结构和组成

1. 唱臂提升杆
2. 耳机插孔
3. 自动停止开关
4. 功能选择
5. LP播放速度开关
6. 电源按钮和音量控制:
旋钮⑥以打开/关闭、
旋钮⑦以增大/减小音量

7. 指示灯
8. 唱臂
9. 帽头
10. 唱臂夹子
11. 转盘
12. 45RPM 固定器
13. LINE OUTPUT输出接口
14. Type-C电源接口

了解我们的产品功能

连接电源适配器后, 向右旋转电源按钮⑥, 当LED灯亮蓝色时, 播放机开始操作, 请参阅下面的说明以更好地操作。

旋钮⑥向右旋转电源开关旋到适当音量, 向左旋回关闭电源

如何使用LP功能

注意: 松开唱臂前请先将锁扣解开
LP唱片播放模式: 旋钮④手动切换为PHONO模式提示音为"黑胶播放", 提示音和LED红色灯, 当唱臂⑧上升时, 播放机自动切换到LP唱片播放模式, 表示已成功进入LP播放模式。请按照以下说明开始播放/停止播放唱片。

如何使用RCA功能

RCA输出插孔连接到扬声器: 使用音频线连接外部扬声器 (仅限活动扬声器) 和后面板上的播放器RCA OUT插孔, 然后声音将从转盘传送外部有源扬声器。

如何使用蓝牙功能

蓝牙播放模式: 旋钮④手动切换为(BT)蓝牙模式提示音为"蓝牙接收"。LED蓝色灯闪烁。播放器开始工作时您可以听到声音, 蓝牙设备已准备好配对, 在蓝牙设备上连接WhatPlus 1900, 提示音将提醒"咚咚"。LED灯将停止闪烁。

蓝牙发射模式: 旋钮④手动切换为(BT OUT)蓝牙发射模式提示音为"蓝牙发射", LED灯将开始慢闪。打开外部蓝牙接收设备(如蓝牙耳机和蓝牙扬声器), 并设置为配对模式, 配对成功时您将听到提示音"咚咚", LED灯将停止闪烁。(这可能需要大约15-30秒)。

产品保养的注意事项

- 不要用手指接触唱针针尖, 避免将针头撞到转盘或唱片边缘。
- 经常清洁唱针针尖 - 仅使用软刷"从后向前"擦拭。
- 如果必须使用针头清洁液, 请谨慎使用。
- 用软布轻轻擦拭防尘罩和转盘表面, 仅使用少量温和的清洁剂清洁。
- 请勿在唱机的任何部分涂抹刺激性化学品或溶剂。
- 打开或关闭防尘盖时, 轻拿轻放, 住中心或两侧。

更换唱针的步骤

从包装盒中取出唱针

- 将螺丝刀放在笔尖并按"A"方向轻轻向下推
- 向箭头向下推, 取下唱针(用力过猛可能会损坏或折断唱针)

安装唱针

- 按住针尖并按方向"B"所示将其插入
- 按方向"C"向上推唱针, 直到唱针锁定在唱头

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meeel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.