

Simple instructions in many languages

Dear friends, thank you very much for buying our products, this simple multi-language quick use guide can quickly solve some of your daily use of simple statements and installation methods, thank you for your patience. I hope you can use smoothly and get your approval. Thank you! ★★★★★




order
el:V7

- order, the memory card is inserted into the TF card slot of the recorder) When first time, please format the memory card in the center of the menu.
- and rear camera before installation (purchase only). After installing the power and rear camera into each other and work properly, so as not to work properly after
- If this product is only used to save time and update data, and cannot be used included with the car, which will be connected to the power bracket during
- g frequency of the card, please use a genuine Class 10 memory card. Low capacity of up to 32 Gcards will lead to a series of failures, such as crash! our genuine high-speed memory card products.
- the device is stuck, does not work properly, or a "file error" message appears, and restart the device, or format the memory card.
- cord and the rear cable of the camera. In order to avoid burning and other original power supply. (A 24-hour parking monitoring function is required, and less power supply is provided, and the supply must be purchased at the store).
- during normal recording, check whether the protective siLefilm lens is torn or

...ine video to pause the current video (Blu-ray Xops flashes at this time) to enter
gs!

- ase format the memory card in the machine Settings.
0 or above memory card, the recommended capacity is not more than 32GB.
l part of this product.

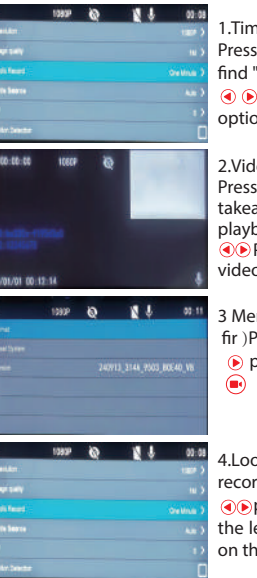


- Time setting: (Press OK to pause the recording)-
 (M) twice (to enter the left picture), press (◀▶) to
 "Time setting", press (⊗) to enter the right picture,
 to adjust the time, press (◀▶) to adjust the next
 on. Press Save device.

- eo playback: (Press OK to pause the recording)-
 (⏸) once (enter the left picture), press OK to
 a picture. Press (⏸) twice to enter the video
 back mode (enter the right picture). Press
 Page turn key>Select atime period to play the
 . Press (⏸) to play/pause the video .

- memory formatting:(Press OK to pause recording
press **M** twice (to enter the menu bar, press **4**
page to find "Format"(as shown on the left).Press
Confirm to format.(as shown on the right)

- Loop recording setup time: (Press OK to pause recording first) Press **M** to enter the menu bar, press **Page** turn key to find "Loop video"(as shown on the left). Press to confirm the setting time.(as shown on the right)

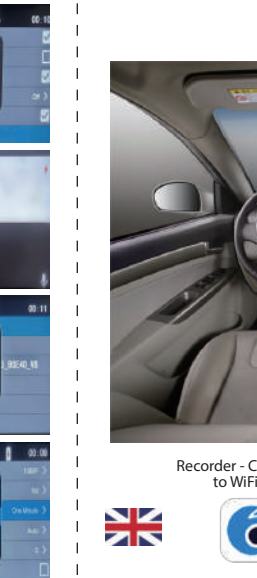

- 

- 
3. Run the power window cord down the side of the center console, under the decorative window trim.

5. Route the power cable along the bottom of the storage box towards the cigarette lighter and insert the power plug into

- connected
APP
- 



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.ct.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.