

多功能VR遥控器&游戏手柄

Universal Wireless VR Remote & Gamepad

操作手册

Operation Manual



MOCUTE-052F

感谢您购买本产品，这是一款便携式无线遥控器，可用于遥控手机、平板电脑、TV电视盒、智能电视、PC等，具有游戏手柄、无线鼠标、无线自拍、音乐遥控、电子书翻页、PPT演示等功能，支持苹果（iOS）系统，安卓（Android）系统，PC（Windows）系统等。

重要提示：

产品规格如有更改，恕不另行通知。本产品已申请多项专利，防冒必究。

操作说明：

1. 开机：按住  键，直到指示灯亮起（约2秒钟），系统开机。（先要装入电池）

关机：按住  键，直到指示灯熄灭（约5秒钟），系统关机。注意：当开机后没有连接无线设备，5分钟后系统将自动关机；如果有连接无线设备，30分钟没有任何操作，系统也将自动关机。

2. 配对连接：开机后，LED指示灯将闪烁，自动进入无线配对模式，查找到本设备的地址及名称（MOCUTE-052F-xxx），点连接即可。连接成功后，LED指示灯熄灭。下次开机将会自动连接到最后配对的无线设备。

取消配对：在关机状态下，开机时按住  键超过8秒钟，指示灯将闪烁，此时进入重新配对模式，将不会自动连接上次已配对设备。


3. 开机模式（出厂默认自动AUTO模式）：

手柄在出厂时默认为自动AUTO模式，直接按电源键开机显示无线名**MOCUTE-x-AUTO**，此模式将自动适应安卓苹果。Y+电源键开机为HID模式，手柄在关机状态下先住按B键，再同时按住电源键开机，可以转换回AUTO模式。

4. KEY 模式功能（AUTO模式）：

将侧边的拨动开关拨到KEY这边（机器侧面有KEY字符），（如右图所示）

4.1 音乐/视频功能操作（侧边的拨动开关位于KEY这边）：

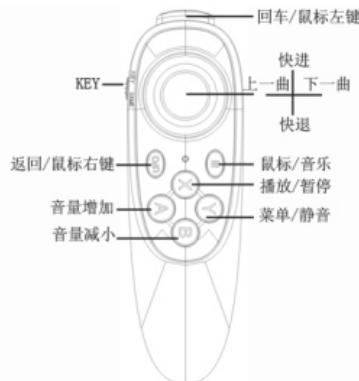

无线连接后，打开手机的音乐/视频放器（如三星自带的音乐/视频播放器），先进行播放，此时可以用手柄 **X** 键进行播放或暂停以及换曲等操作。因软件和系统不同，可能存在差异。**Y** 键在苹果系统下为静音功能，在安卓系统三星手机下为菜单功能。

4.2 自拍操作：

苹果手机用 **A** 键进行拍照；安卓三星手机用 **OK** 键进行拍照，用音量键进行焦距调节；其它安卓手机可进入相机设置，将音量键设为拍照快门键。

4.3 鼠标功能操作（安卓全部支持/苹果iOS13.0以上才支持鼠标）：

当遥控器处于音乐操作功能时，按下  键，此时摇杆变为鼠标功能，**OK** 键为鼠标左键， 键为鼠标右键，再次按下  键转换回音乐控制模式。如果需要拖动鼠标功能，请按住顶部鼠标确认键并同时移动摇杆光标就可以了。

苹果iOS13.0以上鼠标用法：连接手柄后，进苹果设备的【设置】

【辅助功能】-【触控】-【辅助触控】-打开，鼠标就可以用了。

MENU键功能：**Y** 键为安卓MENU功能。

4.4 电子书翻页：掌阅中用音量加减键功能翻页(拨动到KEY)；

在Kindle中或在苹果设备（X模式）的PPT中，在Game 模式下用摇杆翻页(侧边开关拨动到**GAME**）。

5.GAME模式功能: 将侧边的开关拨动到**GAME** 边（机器侧面有**GAME**字符），手柄可以操作流行的VR软件。（右图所示）


5.1 安卓手机系统VR应用（AUTO模式）：

VR应用下载：用二维码扫描软件，扫描包装上的二维码

（或进入<http://www.migamepad.com/> 网址），

进入下载中心，可以下载迷游派推荐VR应用市场。

VR游戏：这些应用市场中下载的游戏，如果支持无线手柄，连接无线即可直接用手柄操作（注意侧边

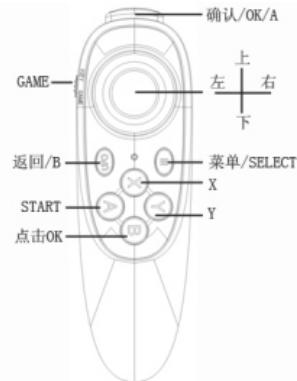

的开关要拔到GAME）。这类游戏如：丧尸猎手,Virtual Reality FPS,等。（个别游戏可能需要在游戏
中设置选择使用手柄GAMEPAD）。

VR视频操作: VR软件中一般为: **OK** 键播放/暂停, **△/□** 键返回, 用摇杆方向快进快退等操作, 也可以用
鼠标控制（注意：先确认安卓/苹果模式是否转换成功，并正常连接）

点击确认功能键-B : 在三星Gear VR 的Oculus以及其他游戏平台中, 一般需要触屏点击光标点, 才
能开始游戏等, 当采用本手柄时, 只需按 **B** 键即可。

5.2 苹果手机系统VR操作 (AUTO模式) :

苹果VR应用市场: APP Store或从包装二维码 (www.migamepad.com) 下载应用中心即可。

VR游戏: 在进入VR应用前, 先将软键盘输入法, 设定为英文输入状态, 可以输入英文字母即可（如
进入浏览器点地址栏, 会出现键盘输入状态, 拨动侧边**GAME/KEY**可以弹出软键盘）。再连接无线,
就可以了。下载丧尸猎手 或Zombie Warfare 等 iCade 游戏, 就可以用手柄操作了。或在APPStore
搜索“ iCade ”, 就会找到支持手柄的iCade类型的游戏, 安装即可。如: Akane Lite, Brotherhood,
TTR Premium 等。（个别游戏可能需要在游戏中设置选择使用手柄iCade）

VR 视频操作: 用苹果官方的视频软件, 也可以使用KEY模式下的音乐控制功能来控制视频操作, 如果
不支持的软件可以用鼠标点击操作。

6. 专用游戏手柄模式 (HID模式) : 【Y+电源键开机】连接**MOCUTE-HID-Y**安卓/苹果/PC通用, 如<魂 斗罗归来>, 长按 键3秒, 灯闪到灭后, 可转换摇杆使用方向, 这样可以双手横向玩游戏。部分 旧的安卓系统不支持此模式, 可以按 【B+电源键开机】开机可以转换回**MOCUTE-AUTO**模式。

7. 短视频/直播/抖音/快手等翻页控制 (安卓/苹果, 苹果仅支持iOS13.0以上版本)

在鼠标模式下, 同时按 **【A+Y】** 键, 此时指示灯会闪烁一下, 表示进入翻页模式。先用摇杆将鼠标指
针放到手机屏幕中间位置, 然后按 **【X键】** 是向上翻页, **【B键】** 是向下翻页。

关闭鼠标模式即可关闭此翻页功能。。

8.电池 本产品需要两节7号(AAA)电池, 当电量低至需要更换电池时, LED指示灯会闪烁提示。

9.产品规格参数

项目	规格
型号	MOCUTE-052F
产品尺寸	116mmx36mmx42mm
无线协议	Wireless 4.2 compliant
无线距离	2-10米
支持系统	Android /iOS/PC
CPU	32Bit RISC-V Core
电池	碱性7号(AAA) 1.5V 两节
连续游戏时间	>300小时
工作电流	0.5~3mA
待机电流	0.5-1mA
关机电流	<9uA



扫描上方的二维码，获得更多详细帮助以及海量游戏资源

注意事项：

- 1.当意外情况导致无法开机或无法关机，请取出电池后，再重新装上。
- 2.如果出现不能连接情况，请按同时按 B + Y + 电源键开机，并将摇杆转动两圈（校准）后再关机，恢复出厂设置。
- 3.当配对不正常或找不到无线名，手柄关机，按住电源键8秒钟以上灯闪再松开，将设备上无线配对全部取消并忽略（包括耳机/手环等），再重新配对。

Universal Wireless VR Remote & Gamepad
User Manual



MOCUTE-052F

Many thanks for purchasing our product! This is a portable wireless controller, used for mobile phone, MID, TV box, smart TV, PC and so on. It can be used as gamepad, VR remote, wireless mouse, music control, E-book page, PPT presentation etc. and support iOS, Android, Windows and so on.

Important Note: Products are subject to change without any notice.

Operating instructions:

1. Power On: Press  button until LED is on (about 2 seconds). (First put the batteries.)

Power Off: Press  button until LED is off (about 5 seconds).

Note: If no connecting with wireless device after 5mins, system will power off automatically; after connecting with wireless device, if no any operation, system will power off after 30mins.

2. Pair and connect: after power on, LED indicator will flash, the device will enter into the wireless pair mode automatically to find the address and name of this device (**MOCUTE-052F-xxxx**), click then can connect. Pair and connect successfully, LED indicator will turn off. Next power on, it can connect and pair the last wireless device.

Unpair: In the turn off state, press  (over 8 seconds), LED will flash, then go to pair mode again, and can't connect last paired device.

3. Boot mode (factory default auto mode):

The handle defaults to automatic mode (-AUTO), directly press the power button to turn it on display the wireless name MOCUTE-x-AUTO, this mode will automatically adapt to Android and iOS, [Y+Power] button is turned on to HID mode. When the handle is turned off, press **B** button and **the Power** button at the same time to turn on, you can switch back to AUTO mode.

4. KEY Mode: Turn switch on side to KEY (there is "KEY" on the side) (AUTO mode).


4.1 Music/Video operation:

After connecting with wireless, open mobile's music player (like Samsung's player), click play, then can use this handle to operate, like music play, pause, changing songs and so on. There are some difference due to different software and system, like: **Y** button is for **Mute** in iOS,

but **Menu** in Android.

4.2 Selfile operation:

For iOS mobile, press **A** key to shutter; for Android Samsung mobile, then press **OK** key to shutter, Volume key to adjust focus; for other Android mobile, please enter camera setup first, then set volume key to shutter.

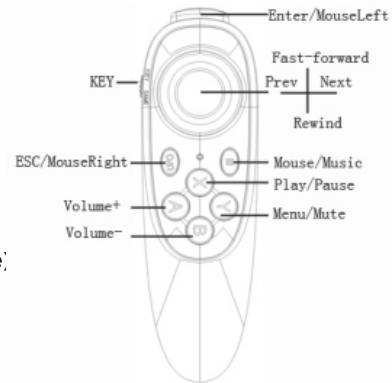

4.3 Mouse operation(Android/iOS13.0+ support mouse)

When the controller is in the music operation function, Press , then joystick can change to mouse function, **ok** is for mouse confirm key, is for mouse right key.

Press again, then can switch to music mode.

iOS13.0 + mouse usage: After connecting the handle, enter the iOS device's [**Settings**]-[**Accessibility**]-[**Touch**]-[**AssistiveTouch**]-[**On**], then you can use the mouse function.

MENU function: press **Y** is MENU key function.


4.4 E-Book flip function:

In iReader: use Volume+/- to turn page up down; In Kindle or PPT for iOS, use joystick in Game mode to turn page.

5. VR (Game/Video) function: Turn side switch to Game side (there is "GAME" on side).

5.1 VR (Game/Video) function on Android:

VR App Download: use QR code software to scan QR code on the packing (or enter into website: <http://www.migamepad.com/>) to enter into MIGAMEPAD download center, then you can download MIGAMEPAD

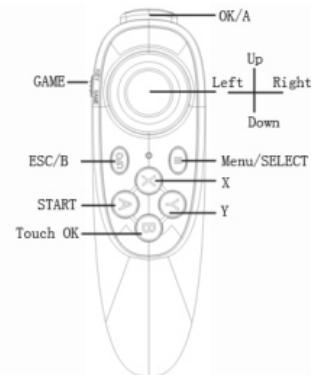

game application or third party's VR application.

VR game: from these applications download games, if support the Gamepad, connect wireless can be directly used to operate the game (Pay attention to the switch on the side to GAME).This kind of games such as: Zombie Hunter, Virtual Reality FPS, etc.. (Some games maybe need set to use Gamepad control in game menu)

VR video operation: VR software generally: **OK** is play / pause,  is back, the joystick is fast forward and rewind operation.

Touch OK function keys: in the Samsung VR Oculus Gear or other VR games , the general need to touch the screen to click the cursor point, to start games etc. when using the handle, press the button **B** .

5.2 iOS VR APP operation:

VR APP download: Enter into iOS APP store or scan QR code on the packing (or enter into website: <http://www.migamepad.com/>) to enter into MIGAMEPAD download center, then you can download MIGAMEPAD game application or third party's VR application.

VR game: before entering the VR application, the soft keyboard input method, set the status of the English input, you can enter the English alphabet.Enter the address bar of the browser, there will be a keyboard input state(pull the side **GAME/KEY** to pop up the soft keyboard). Then connect the wireless, you can operate the gamepad. such as ZombieFight or Zombie Warfare, Virtual Reality FPS,SCW VR Free etc iCade games, you can use the gamepad operation. Or enter the APPStore search "iCade", you will find support for the games of iCade type , download and install, Such as: Lite Brotherhood, TTR, Premium Akane,etc.(Some games maybe need set to use iCade control in game menu).

VR video operation: if you use Apple's official video software, you can also use **KEY mode** of music control functions to control the video operation.If the software does not support, you can use the mouse to click and operate.

6. XINPUT Gamepad mode: [Y+Power] button to turn on:MOCUTE-HID-Y****

Universal for Android/PC/iOS13.0+, supports MF games, such as "Asphalt8", "Minecraft" etc. press  and hold for 3 seconds, after the light flashes to off, you can switch the direction of the joystick, so that you can play the game horizontally with both hands.

Press **B+Power** button to turn on, the gamepad will switch to MOCUTE-AUTO mode.

7. Video control such as short video/live/Tik tok (supports Android or iOS13.0+):

In the mouse mode, press the **[A+Y]** button at the same time, and the indicator light will flash once, indicating that it enters the sliding screen mode. First use the joystick to place the mouse pointer in the middle of the phone screen, and then press **[X]** button to slide up, and **[B]** button to slide down. Close mouse mode also close this mode.

8. Battery:

The product is need two 1.5V batteries of type size AAA, when power is low, LED will flash, please change the batteries.

Notes:

1. When accident cause not boot or unable to shutdown, please use needle to take out the batteries.
2. If can't connect, please Press **[B+Y+Power]** button to Power On, and turn the joystick two turns (calibration) and then turn it off, the device to restore factory settings.
3. When the pairing is abnormal or the wireless name cannot be found, turn off the handle, press and hold the **Power** button for more than 8 seconds, the light flashes and then release, cancel and ignore all wireless pairing on the device (including earphone bracelet, etc.), and re-pair.

9. Product Specifications

Item	Specifications
Model	MOCUTE-052F
Size	116mmx45mmx13.5mm
Wireless Protocol	Wireless 4.2 compliant
Wireless Distance	2-10 Meters
OS	Android /iOS/PC
CPU	32Bit RISC-V Core
Battery	Type size alkaline AAA 1.5V x 2
Working time (Continuous game)	About 300 hours
Work current	0.5-3mA
Shutdown current	<9uA

Scan above QR code to
get more details , help
and game resource.



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.