



NEiiC

USB Power Switch

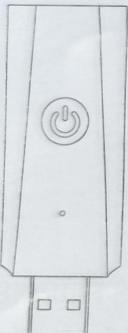

Model: RT040

Descriptions

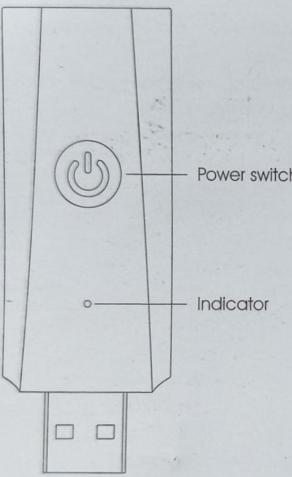

Power switch

Indicator

Specification

Model: RT040
Product size: 68*25*12.5mm
Product weight: 12g
Material: ABS
Input/ Output: 5V --- 2A

Which Echo Speaker Models are Supported

Echo Dot (2nd Gen), Echo Plus(2nd Gen), Echo Dot(3rd Gen), Echo (4th Gen), Echo Dot(4th Gen), Echo Show 5/8/10 (1st Gen), Echo Show 5/8/10 (2nd Gen), Echo Show 10 (3rd Gen).

How to add USB Power Switch to Alexa APP

1. Add Echo speaker to Alexa APP.
2. Add USB Power Switch to Alexa APP.

①. IOT device will enter pairing mode when powered on for the first time. In this mode, the blue indicator light will flash rapidly. You can also long press the on/off button for 5 seconds and the USB Power Switch will return to its initial state.

②. Wake up the Echo Speaker with your wake word, then the blue light will illuminate.

③. Command Echo speaker to scan nearby USB Power Switch devices. The voice command is "Discover device".

④. The Echo Speaker starts discovering nearby devices, please wait for a while. (Starting to discover..)

⑤. Wait for about 1 minute, and the Echo speaker will prompt that the device has been successfully added.
(I found xxx,e.g. I found the first plug).

⑥. View the device page of the app, click on all devices, and find that the USB Power Switch device has been successfully added.


Devices

Device Type Sort By

First plug • Recently added

How to Control USB Power Switch

1. Voice command by Echo speaker.
"Alexa, turn on the first plug"
"Alexa, turn off the first plug"
2. Control panel of Alexa APP.
View the device page of the app, click on all devices, and then click on the device you want to control to enter the device control panel.

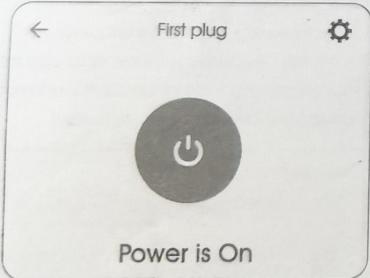

3. Mechanical control button

When the networking problem cannot be solved, you can try briefly pressing the power on/off symbol once to control it.

Reasons and solutions for Alexa can't find devices

1. About the USB power switch.
 - ①. Connect the USB power switch to the power source.
 - ②. Long press the mechanical control button on the device for 5 seconds until the blue indicator light on the device starts flashing.
 - ③. Wake up the Echo speaker and add device again.
2. About the Echo speaker.

The Echo speaker has previously been linked to other accounts and has not been properly unbound.

 - ①. Restore the Echo speaker to factory settings.
(Press and hold the function key for 10 seconds until an orange rotating aperture appears.)

②. Add the Echo speaker to your Alexa account.

③. Delete the Echo speaker from your Alexa account.

④. Add the Echo speaker to your Alexa account again.

⑤. Wake up the Echo speaker and add the device.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment. The device has been evaluated to meet

general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

THANKS FOR READING



Made in China