

NANO7 GNSS RECEIVER USER GUIDE



V1.0

Copyright ©. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any ways without prior written consent of Bench-Mark Equipment & Supplies.

Trademarks and Permissions

 GeoMeasure and other GeoMeasure trademarks are trademarks of Bench-Mark Equipment & Supplies.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between GeoMeasure and the customers. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope.

The information in this document is subject to change without notice. Efforts has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

FCC warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 80 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter, End-Users must be provided with transmitter operation conditions for satisfying RF exposure compliance.

Revision History

Revised Edition	Revision History	Date
V1.0	Initial Release	2022-11-30

Contents

I . Before You Start	1
1.1 Precautions For Safe Operation	1
1.2 Exemption From Liability	2
II . Nano7 At A Glance.....	3
2.1 Appearance	3
2.2 Battery Indicator	4
2.3 Power On And Off.....	4
2.4 Insert A SIM Card.....	5
2.5 Charge The Battery	5
2.6 Install The Radio Antenna	5
III. Web UI.....	7
3.1 System View	8
3.2 Device Firmware.....	9
3.3 Skyplot	10
3.4 Data Stream.....	11
3.5 Mode Config	14
3.6 Others Config.....	16
3.7 File	17
3.8 Log	17
3.9 Message Text	18
3.10 Remote Assistance	20
3.11 Data Config.....	21
IV. tSurvey Basic Operations	25
4.1 PCR100U Data Controller	25

4.2 Communication.....	26
4.3 New Project.....	27
4.4 Import Data	28
4.5 Export Data	28
4.6 Localization	30
4.7 Rover Mode Setting.....	33
4.8 Base Mode Setting	35
4.9 Static Mode Setting.....	37
4.10 Point Survey.....	39
4.11 Tilt Survey	41
4.12 Device Activation	42
4.13 Software Activation	43
V. Technical Indicator	44

I . Before You Start

Dear customers,

Thank you for purchasing our device. Before you start, please carefully read the following:

1. This user guide is for your device only. If the actual situation does not match with the situation in the user guide, the actual situation shall prevail.
2. For safety and instructions on how to use this device, please carefully read the precautions, exemptions from responsibility and instructions in the user guide.
3. The information in this user guide is subject to change without notice. We reserve the right to change or improve the device as well the content in the user guide without further notification.

1.1 Precautions For Safe Operation

For the safety of your products, operators and other persons, please read this part carefully before using your product.

Precautions can be divided into the following levels according to the degree of loss or injury under negligence or omission circumstances:

 **Warning:** Precautions requiring special attention. Ignoring this indication may result in death or serious injury to the operator.

 **Caution:** Precautions mainly for informing, such as supplementary instructions and using limitations. Ignoring this indication may result in personal injury or property damage.

1.1.1 Warning

1. Do not disassemble and open the device by yourself. Only GeoMeasure Information Technology authorized distributors can disassemble or rebuild the device.
2. Please do not cover the charger when charging.

3. Please do not use wet charger, defective power cable, socket or plug, and other power cable which is not recommended by GeoMeasure Information Technology. Otherwise, fire or electric shock may occur.

4. Please do not place the device near burning gas or liquid, and do not place it in an open flame or high temperature environment. Otherwise, an explosion may occur.

5. Please avoid battery short circuit. Otherwise, a fire may occur.

6. Please avoid the interference of severe electrostatic discharge. Otherwise, the device may experience some performance degradation, such as automatic opening/closing, etc.

1.1.2 Caution

1. Please fix the device firmly on the pole.

2. To avoid accidental damage, only use original accessories. Otherwise, the device may be damaged.

3. When transporting, please try to reduce the vibration of the equipment.

4. Do not touch the device with wet hands. Otherwise, electric shock may occur.

5. Please do not stand or sit on the carrying case, and do not turn it over, otherwise the device may be damaged.

1.2 Exemption From Liability

You should follow all operating instructions and periodically check the performance of this equipment.

We disclaim all liability for any damages and lost profits caused by:

1. False or Intentional Use or Misuse.

2. Any irresistible natural disasters, such as earthquakes, storms, floods, etc.

3. Data change, data loss, business interruption, etc.

4. Delivery error.

5. Use non-original accessories.


6. Operations not described in the user guide.

II. Nano7 At A Glance

The body of the Nano7 is designed with magnesium alloy material, which is durable and has better heat dissipation effect, and weighs only 750g. It supports IP68 dustproof and waterproof, and can work continuously for 16 hours when fully charged.

2.1 Appearance

The main body of Nano7 is as follows:

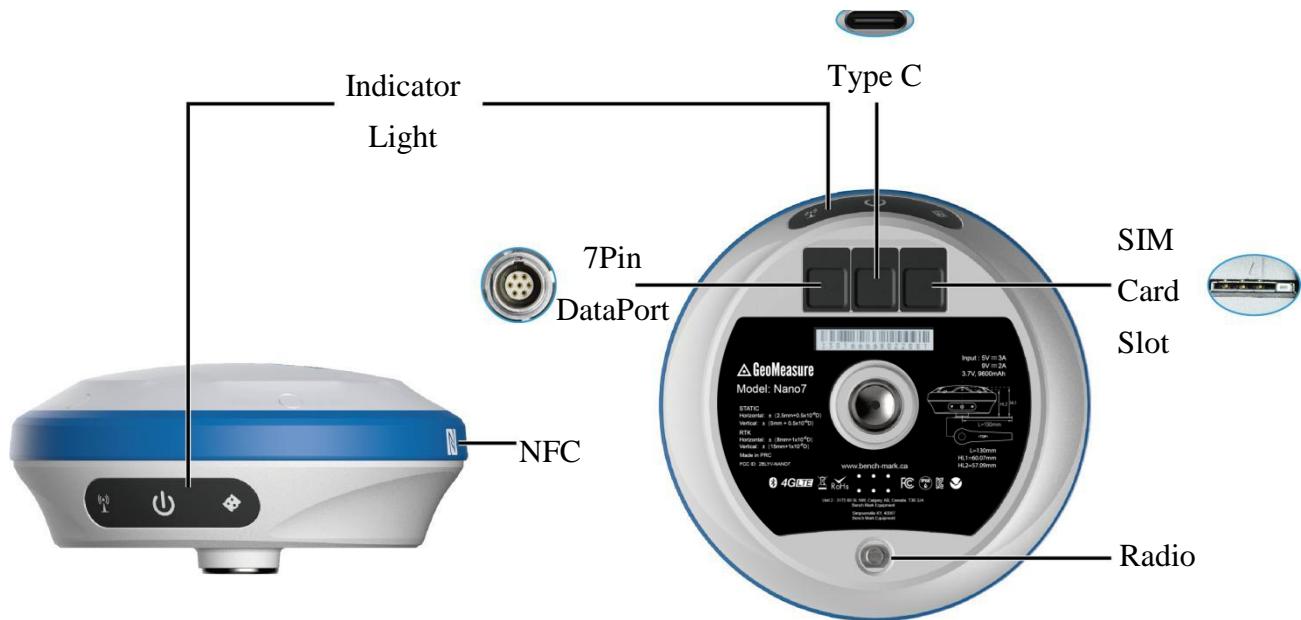

Projects	Function	Role or Status
	1.Battery level broadcast 2.On/Off Key	Short press to broadcast power; Long press to turn on/off.
	Differential data light	Rover mode: Blink when receiving differential data; Base mode: Blink when sending differential data.
	Satellite light	Rover/base station: 1 second interval flashing in the positioning state;

		Static mode: flashing according to sampling frequency.
--	--	--

2.2 Battery Indicator

Press the power key shortly when the device is off, through the Indicator light, you can know the battery level:

Indicator light	Battery level
	67% - 100%
	34% - 66%
	0% - 33%


2.3 Power On And Off

Power on: Press and hold the power button for 3 seconds until the buzzer "beeps". Release the button, the device starts to power on, and the panel light flashes. The device will not start until the buzzer emits a "beep" for 3 times.

Shutdown: Press and hold the power button for 3 seconds until the buzzer "beeps". Release the button and the device starts to shut down. The unit will power off until all panel lights go out.

Forced shutdown: In case of unexpected failure, press and hold the power button for 10 seconds, and the device will automatically shut down.

2.4 Insert A SIM Card

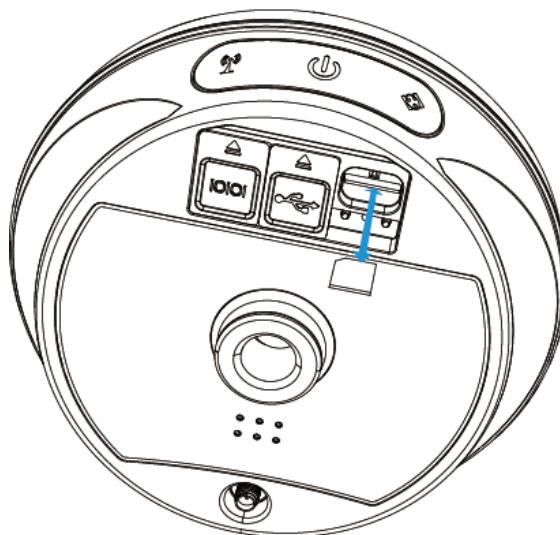

The device supports network working mode. Insert SIM card:

1. Open the rubber cover;
2. Insert the SIM card slot according to the instructions (the chip faces the bottom center, the notch faces the card slot);
3. Cover the rubber sleeve.

2.5 Charge The Battery

The device is equipped with a Type-C charger that supports up to 18W PD fast charging.

It takes 4 hours to fully charge the battery:

1. Red light: The battery is charging.
2. Green indicator light: The battery is fully charged.

To charge the battery, open the type-C cover, connect one end of the data cable to the type-C interface, and the other end to the charger.

Note: For the safety of your device, please use the standard adapter in the package or a 3C-certified brand adapter to charge the host.

2.6 Install The Radio Antenna

The antenna is required when the datalink is set to internal radio.


To plug in radio antenna, open the cover of UHF radio, and install the radio antenna.

III. Web UI

The device WIFI can be used as a hotspot, and a PC, smartphone or tablet can be connected to the hotspot. After connecting to the hotspot, you can manage the working status, change the working mode, configure basic settings, download raw data, update firmware and register devices, etc.

Take the interface of your PC as an example, enter the Web UI, and perform the following operations:

1. Use the computer to find the WIFI hotspot of the device. Hotspot name: device serial number, default password is empty.
2. Open a web browser and enter the IP address 10.10.10.10. The following interface displays:

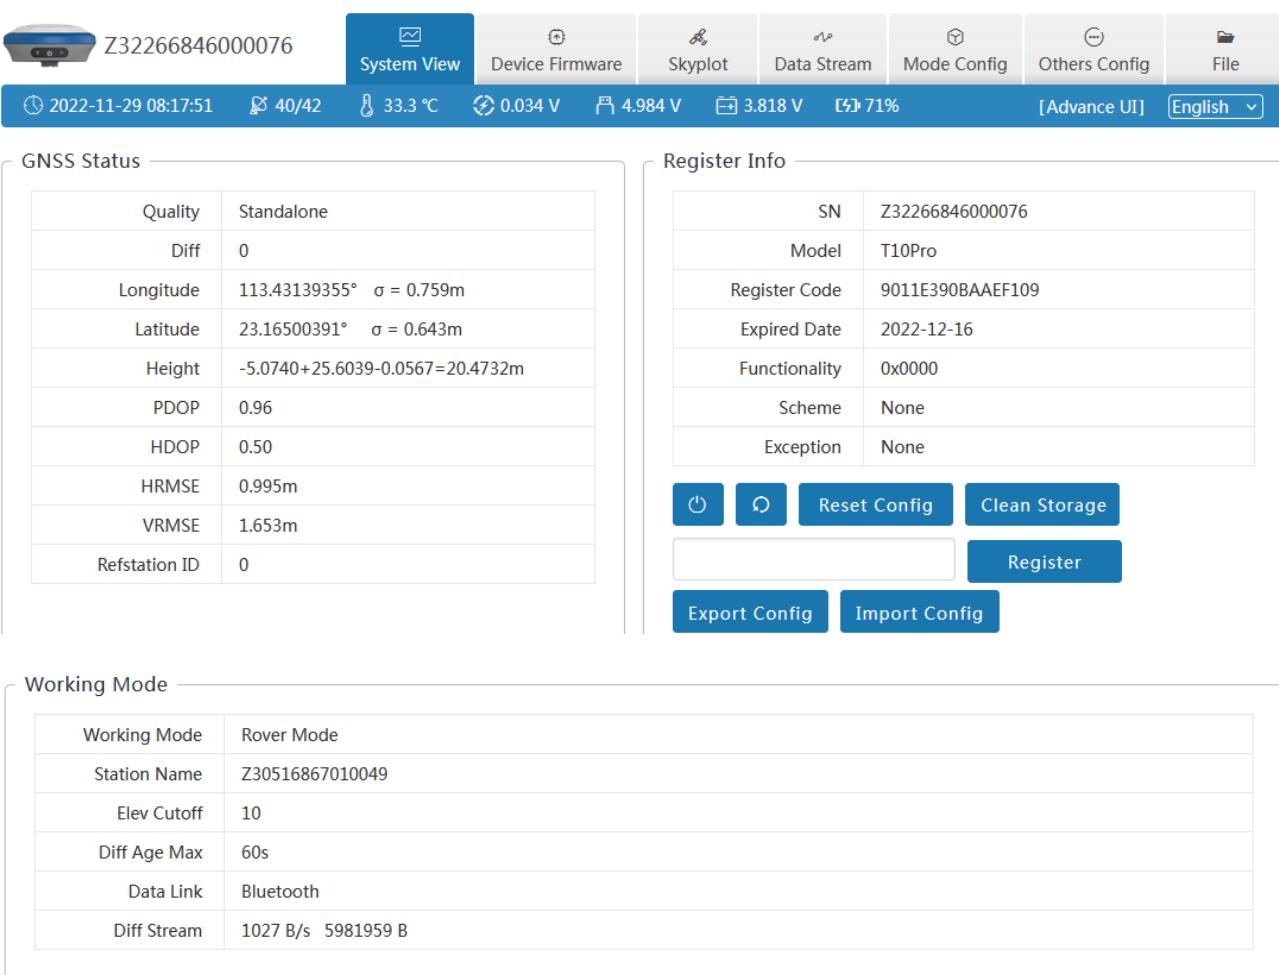

The screenshot shows the GeoMeasure Web UI interface with the following sections:

- GNSS Status** (Left Panel):

Quality	Standalone
Diff	0
Longitude	113.43139355° σ = 0.759m
Latitude	23.16500391° σ = 0.643m
Height	-5.0740+25.6039-0.0567=20.4732m
PDOP	0.96
HDOP	0.50
HRMSE	0.995m
VRMSE	1.653m
Refstation ID	0
- Register Info** (Right Panel):

SN	Z32266846000076
Model	T10Pro
Register Code	9011E390BAAEF109
Expired Date	2022-12-16
Functionality	0x0000
Scheme	None
Exception	None

 Buttons: Power, Refresh, Reset Config, Clean Storage, Register, Export Config, Import Config.
- Working Mode** (Bottom Panel):

Working Mode	Rover Mode
Station Name	Z30516867010049
Elev Cutoff	10
Diff Age Max	60s
Data Link	Bluetooth
Diff Stream	1027 B/s 5981959 B

Meaning of icons arranged horizontally above the interface:

39/42	39.3 °C	0.042 V	5.326 V	4.271 V	100%
Satellite Used/Tracked	Temperature	External Voltage	Supply Voltage	Battery Voltage	Battery Info

3.1 System View

- ① **GNSS Status:** Quality, Latitude, Longitude, Height, Satellite, Refstation ID;
- ② **Register Info:** SN, Expired Date, Scheme, Exception;

The registration code is a valid time code that authorizes the location function of the device. When it is found that the registration code has expired and the device positioning function is unavailable, we can obtain a new registration code from the supplier by providing the device SN, and enter it on this page and click [Register] to register.

- ③ **Working Mode:** Working Mode, Elev Cutoff, Data Link.

Z32266846000076
 System View
 Device Firmware
 Skyplot
 Data Stream
 Mode Config
 Others Config
 File

⌚ 2022-11-29 11:11:29
 28/48
 36.2 °C
 0.012 V
 5.101 V
 4.224 V
 100%
[Advance UI]
English

GNSS Status

Quality	RTK Fixed
Diff	1
Longitude	113.43138783° σ = 0.004m
Latitude	23.16501995° σ = 0.003m
Height	-5.0740+31.4799-0.0567=26.3492m
PDOP	0.80
HDOP	0.46
HRMSE	0.005m
VRMSE	0.008m
Refstation ID	0

Register Info

SN	Z32266846000076
Model	T10Pro
Register Code	9011E390BAAEF109
Expired Date	2022-12-16
Functionality	0x0000
Scheme	None
Exception	None

Reset Config
Clean Storage

Export Config
Import Config

Register

Working Mode


Working Mode	Rover Mode
Station Name	Z30516867010049
Elev Cutoff	10
Diff Age Max	60s
Data Link	Bluetooth
Diff Stream	1027 B/s 5981959 B

3.2 Device Firmware

- ① **Device Info** : SN, Hardware, GNSS Type, GNSS Hardware;
- ② **System Version** : System, GNSS Firmware, INS Firmware, Firmware.

Click Upgrade Firmware below to automatically identify and upgrade the positioning board firmware, tilt module firmware, and device firmware. There will be a prompt below during the upgrade process, and the device will restart after the upgrade is complete. The operation steps are as follows:

1. Click [Upgrade Firmware];
2. Select the correct device firmware in the pop-up window, flash the firmware and wait for the device to restart;
3. After the restart is complete, the firmware upgrade is completed;
4. Reconnect the device WiFi, enter the webui, and check whether the firmware has been upgraded successfully.

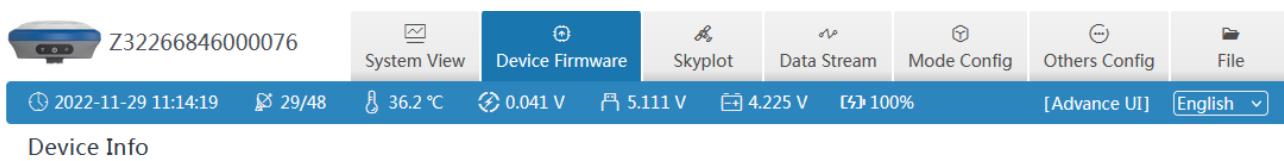

Device Info

SN	Z32266846000076
Hardware	1.1.211215.220111/G1K4M1N1P2S2T4
GNSS Type	P20
GNSS SN	21850321
GNSS Hardware	1
IMEI	868343049823060

Feature	
Product Date	2022-06-28
Brand	TokNav
Model	T10Pro
Board1 SN	4600000007
Board2 SN	00.09.0000091.01.02


System Version

System	1.33.2203.43
Linux Version	3.18.44 Fri Dec 11 17:07:31 CST 2020
GNSS Firmware	6.0Aa05/89
INS Firmware	B1.2_A3.4_d4ccd33b75290e
Radio Firmware	
Firmware	1.351.2211.1419

[Upgrade Firmware](#)


3.3 Skyplot

① **Skyplot** : Trace, Name, Health, Elev, Azim;

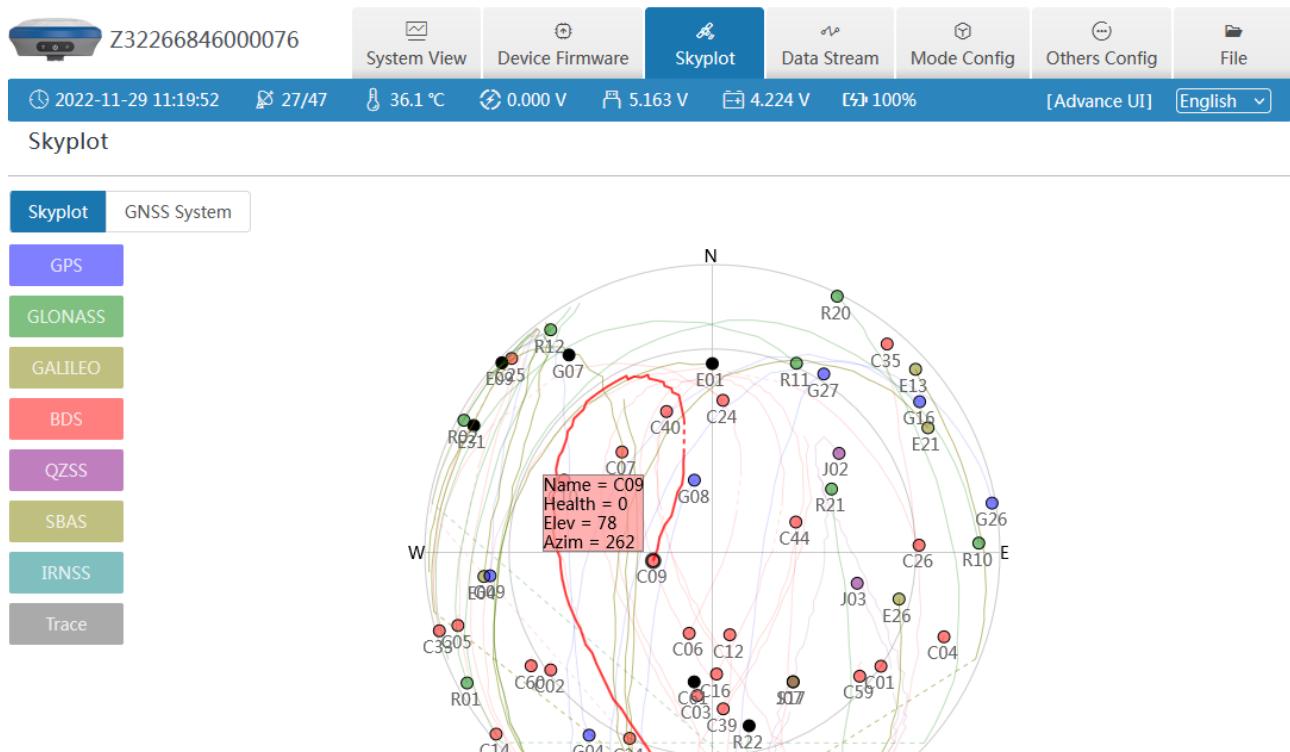

② **GNSS System** : Elev Cutoff, System, Table, Chart.

If it is found that the device receives fewer satellites under normal environment, you can enter this page to check whether all satellite systems have been turned on.

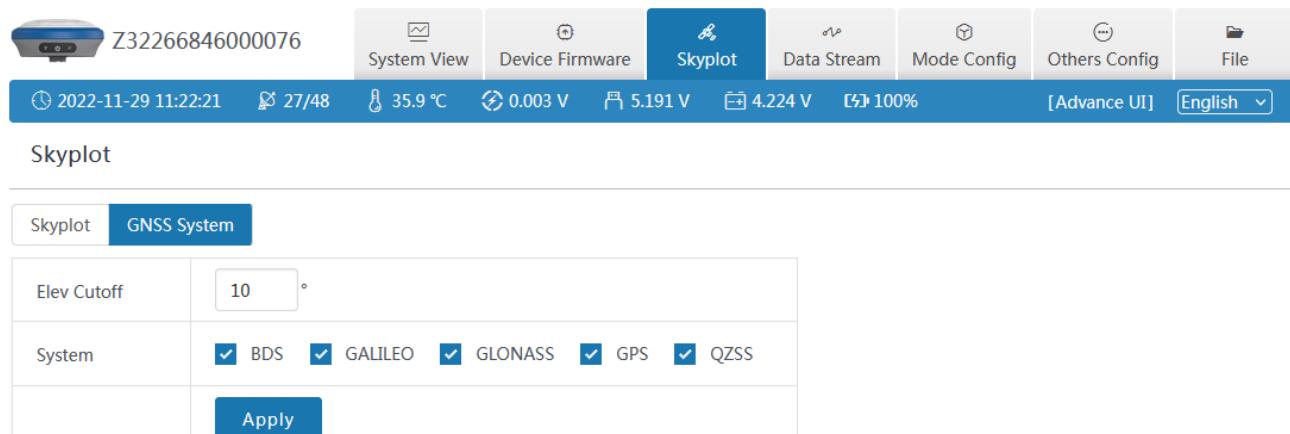

BDS*20 GALILEO*4 GLONASS*4 GPS*6 QZSS*3

Table

BDS	B1(I)	B2(I)	B3(I)	Elev	Azim
C01	40.85	38.15	39.47	45.1	124.3
C02	37.72	39.25	39.40	47	235.2
C03	41.31	38.54	40.61	61.3	187.1
C04	37.16	33.43	38.14	31.5	111
C05	31.67	34.24	34.24	24.1	254.6
C06	42.66	38.31	40.50	65.1	15.6
C07	41.93	39.32	41.98	69.4	213.4

BDS*20 GALILEO*4 GLONASS*5 GPS*6 QZSS*3

Table

Chart

B1(I) B2(I) B3(I)



3.4 Data Stream

The data stream is mainly used to debug data information; you can view the current data status, as shown in the following below:



Data Stream


Config

Data: Level of Detail:

Data:

For example:

1. Message Text: see 3.9 in this section for the configuration of text data.

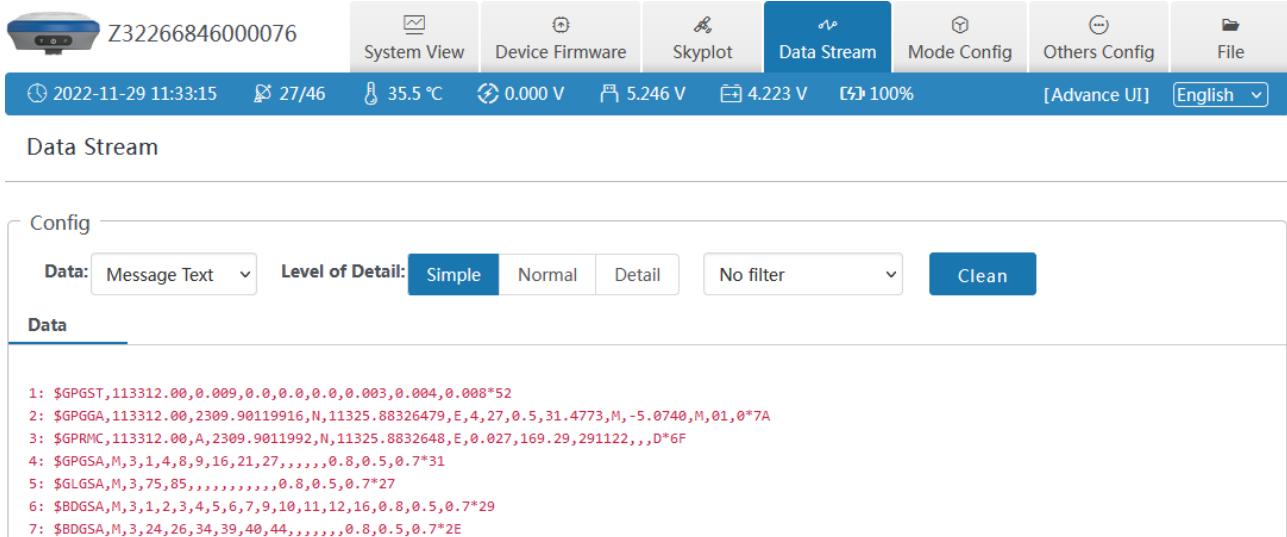


The screenshot shows the GeoMeasure software interface with the following details:

- Device ID: Z32266846000076
- System View, Device Firmware, Skypilot, Mode Config, Others Config, File, [Advance UI], English buttons.
- Time: 2022-11-29 11:33:15, Temperature: 35.5 °C, Voltage: 0.000 V, 5.246 V, 4.223 V, 100%.
- Config tab: Data: Message Text, Level of Detail: Simple, No filter, Clean.
- Data tab: Shows a list of NMEA messages in red text:


```
1: $GPGST,113312.00,0.009,0.0,0.0,0.003,0.004,0.008*52
2: $GPGGA,113312.00,2309.90119916,N,11325.88326479,E,4,27,0.5,31.4773,M,-5.0740,M,01,0*7A
3: $GPRMC,113312.00,A,2309.9011992,N,11325.8832648,E,0.027,169.29,291122,,,D*6F
4: $GPGSA,M,3,1,4,8,9,16,21,27,,,0.8,0.5,0.7*31
5: $GLGSA,M,3,75,85,,0.8,0.5,0.7*27
6: $BDGSA,M,3,1,2,3,4,5,6,7,9,10,11,12,16,0.8,0.5,0.7*29
7: $BDGSA,M,3,24,26,34,39,40,44,,,0.8,0.5,0.7*2E
```

2. Message Raw

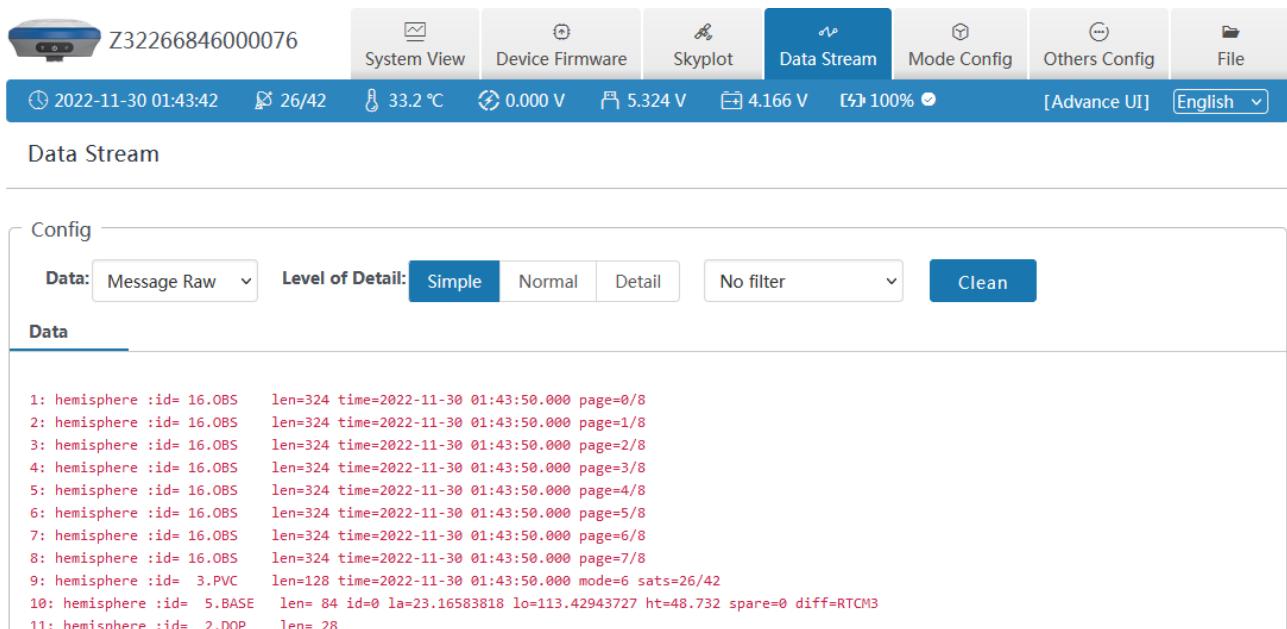

The screenshot shows the GeoMeasure software interface with the following details:

- Device ID: Z32266846000076
- System View, Device Firmware, Skypilot, Data Stream, Mode Config, Others Config, File, [Advance UI], English buttons.
- Time: 2022-11-30 01:43:42, Temperature: 33.2 °C, Voltage: 0.000 V, 5.324 V, 4.166 V, 100%.
- Config tab: Data: Message Raw, Level of Detail: Simple, No filter, Clean.
- Data tab: Shows a list of raw data messages in red text:


```
1: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=0/8
2: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=1/8
3: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=2/8
4: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=3/8
5: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=4/8
6: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=5/8
7: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=6/8
8: hemisphere :id= 16.OBS len=324 time=2022-11-30 01:43:50.000 page=7/8
9: hemisphere :id= 3.PVC len=128 time=2022-11-30 01:43:50.000 mode=6 sats=26/42
10: hemisphere :id= 5.BASE len= 84 id=0 la=23.16583818 lo=113.42943727 ht=48.732 spare=0 diff=RTCM3
11: hemisphere :id= 2.DOP len= 28
```

3. Message Diff: when the device is the base station, you can check whether there is differential data output here.

Data Stream

Config

Data: Message Diff Level of Detail: Simple Normal Detail No filter Clean

Data

```
1: rtcm3 :msg=1008.ANTENNA_SN len= 12
2: rtcm3 :msg=1033.RECV_ANT len= 39 id=0
3: rtcm3 :msg=1074.GPS_MSM4 len=145 station=0 time=day 3 02:26:43.000
4: rtcm3 :msg=1084.GLO_MSM4 len= 86 station=0 time=day 0 02:26:43.000
5: rtcm3 :msg=1094.GAL_MSM4 len=117 station=0 time=day 3 02:26:43.000
6: rtcm3 :msg=1124.BDS_MSM4 len=296 station=0 time=day 3 02:26:43.000
```

4. Message Static: When the device is static mode, you can check whether there is static data output here.

Data Stream

Config

Data: Message Static Level of Detail: Simple Normal Detail No filter Clean

Data

```
1: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=0/8
2: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=1/8
3: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=2/8
4: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=3/8
5: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=4/8
6: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=5/8
7: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=6/8
8: hemisphere :id= 16.OBS len=324 time=2022-11-30 02:30:38.000 page=7/8
9: hemisphere :id= 65.GLONAV len= 80 sv=15 freq= 0 tb=20700
```

5. Ntrip Client: When the device is a rover station and uses Ntrip Client to obtain differential data, you can check whether there is differential data output here

Data Stream

Config

Data: Ntrip Client Level of Detail: Simple Normal Detail No filter Clean

Data

```
1: rtcm3 :msg=1005.REF_PHASE len= 25 la=23.16583818 lo=113.42943727 ht=48.7322
2: rtcm3 :msg=1033.RECV_ANT len= 81 id=0
3: rtcm3 :msg=1074.GPS_MSM4 len=121 station=0 time=day 3 01:24:40.000
4: rtcm3 :msg=1084.GLO_MSM4 len= 57 station=0 time=day 0 01:24:40.000
5: rtcm3 :msg=1124.BDS_MSM4 len=339 station=0 time=day 3 01:24:40.000
```

3.5 Mode Config

① **Working Mode** : You can choose Rover Mode/ Base Mode/ Static Mode, and select the Elev Cutoff at the same time;

1. Rover Mode: the following parameters (Station Name, Elev Cutoff, Diff Age Max, Height Type, Antenna Height, Record, PPK) can be configured.

Mode Config

Working Mode

Mode: **Rover Mode** Base Mode Static Mode

Station Name: Z32266846000076

Elev Cutoff: 10 Degree

Diff Age Max: 60 Second

Height Type: Bottom

Antenna Height: 0 Meter

Record: Enable

PPK: Disable not affect by Record

2. Base Mode: the following parameters (Station Name, Elev Cutoff, Station ID, PDOP Threshold, Diff Type, Base Mode, Height Type, Antenna Height, Record) can be configured.




Mode Config

Working Mode

Mode:	<input type="button" value="Rover Mode"/>	<input checked="" type="button" value="Base Mode"/>	<input type="button" value="Static Mode"/>
Station Name:	Z32266846000076		
Elev Cutoff:	10	Degree	
Station ID:	0		
PDOP Threshold:	3.0000		
Diff Type:	RTCM32		
Base Mode:	Auto		
Height Type:	Bottom		
Antenna Height:	0	Meter	
Record:	Enable		

 3. Static Mode: the following parameters (Station Name, Elev Cutoff, PDOP Threshold, Sample Interval, Height Type, Antenna Height, Record) can be configured.




Mode Config

Working Mode

Mode:	<input type="button" value="Rover Mode"/>	<input type="button" value="Base Mode"/>	<input checked="" type="button" value="Static Mode"/>
Station Name:	Z32266846000076		
Elev Cutoff:	10	Degree	
PDOP Threshold:	3.0000		
Sample Interval:	1 s	s	
Height Type:	Bottom		
Antenna Height:	0	Meter	
Record:	Enable		

② **Data link** : You can choose No Data link/ Bluetooth/ Wifi/ Built-in Network/ Built-in Radio/ External Radio/ XLink.

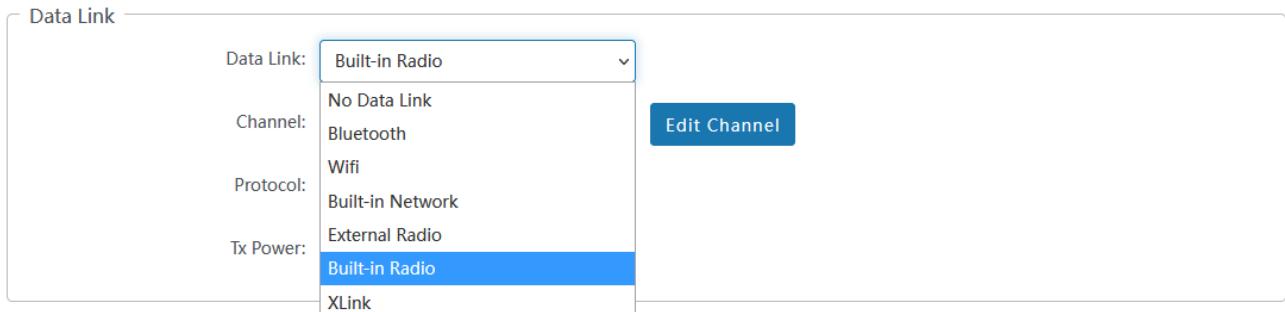

1. **Bluetooth:** the device obtains the differential data of tSurvey software accessed by the manual network through Bluetooth connection to the manual;
2. **Built-in Network:** the device receives or sends data through the built-in network. To select this data link, first insert the SIM card into the device;
3. **Built-in Radio:** the device receives data through the built-in radio. To select this data link, first connect the radio antenna to the device.

3.6 Others Config

- ① **GNSS System :** The small box behind a single point can turn on or off the corresponding satellite system;
- ② **WiFi :** You can choose three types of Disable/AP/Station, and you can set the WiFi name and password by yourself;

Note: when the device WiFi is used as the Station, you can access the network by entering the name and password of the external hotspot.

System	Enable
GPS	<input checked="" type="checkbox"/> Enable
GLONASS	<input checked="" type="checkbox"/> Enable
BDS	<input checked="" type="checkbox"/> Enable
GALILEO	<input checked="" type="checkbox"/> Enable
QZSS	<input checked="" type="checkbox"/> Enable

WiFi:

SSID: Z32266846000076

PSK: Empty or Length not less than 8

- ③ **Others :** Time Zone, Voice.

Others

Time Zone: UTC+00:00

Voice: Enable

3.7 File

File management can delete and download data of each channel in batches , as shown below:


3.8 Log

It provides the download of the operation log of the device. When the device is abnormal during use, you can download the log generated at the corresponding time here to the supplier for troubleshooting. As shown below:

File Name	Size	Time	Action
Z32266846000076-0086.zlog	982.44kB	2022-	Download
Z32266846000076-0085.zlog	8.00MB	2022-	Download
Z32266846000076-0084.zlog	8.00MB	2022-	Download
Z32266846000076-0083.zlog	941.39kB	2022-11-25 23:50:58	Download
Z32266846000076-0082.zlog	1.36MB	2022-11-25 17:20:10	Download
Z32266846000076-0081.zlog	617.45kB	2022-11-23 18:26:12	Download
Z32266846000076-0080.zlog	1.80MB	2022-11-22 23:05:58	Download

3.9 Message Text

You can set the type and frequency of output data in text format, as shown below. After configuration, you can check whether there is corresponding text data output in 3.4 of this section.

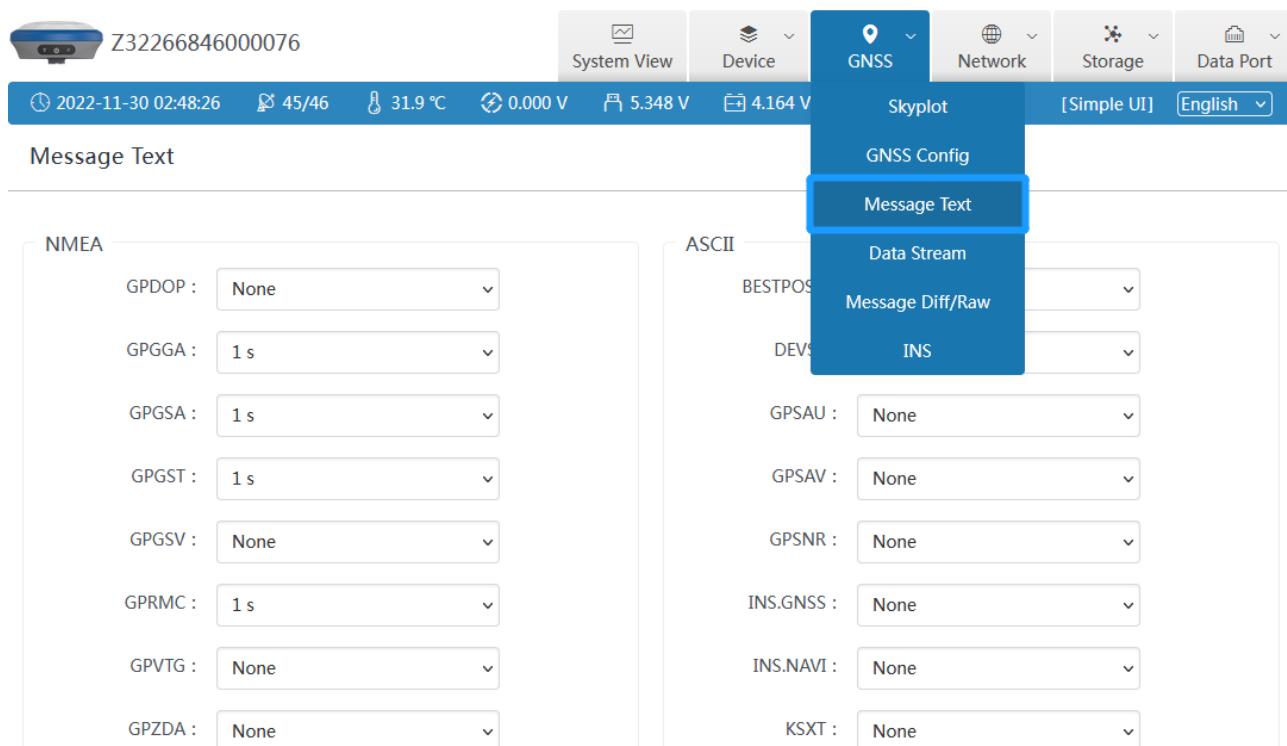

The following are the formats of several common message text:

GPGGA	\$GPGGA,<1>,<2>,<3>,<4>,<5>,<6>,<7>,<8>,<9>,M,<10>,M,<11>,<12>*hh
<1>	UTC time, hhmmss (hour minute second) format, 8 hours different from Beijing time
<2>	Latitude ddmm.mmmm (degrees and minutes) format (the previous 0 will also be transmitted)
<3>	Latitude Hemisphere N (Northern Hemisphere) or S (Southern Hemisphere)
<4>	Longitude dddmm.mmmm (degrees and minutes) format
<5>	Longitude Hemisphere E (East Longitude) or W (West Longitude)
<6>	GPS status: 0=no positioning, 1=single point positioning, 2=SBAS differential positioning, 4=RTK fixed solution, 5=RTK floating point solution, 6=inertial navigation

	positioning
<7>	The number of satellites (00~12) using the solution position
<8>	HDOP horizontal precision factor (0.5~99.9)
<9>	Altitude (- 9999.9~99999.9)
<10>	Height of earth ellipsoid relative to geoid
<11>	Differential time (the number of seconds since the last differential signal was received. If it is not differential positioning, it will be null)
<12>	Differential station ID No. 0000~4095 (the previous 0 will also be transmitted, otherwise it will be null)

GPGSA	\$GPGSA,<1>,<2>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<3>,<4>,<5>,<6>*hh
<1>	Mode, M=manual, A=automatic
<2>	Positioning type, 1=no positioning, 2=2D positioning, 3=3D positioning
<3>	PRN code (pseudo-random noise code), the satellite number (01~32, the previous 0 will also be transmitted) being used to calculate the position.
<4>	PDOP position precision factor (0.5~99.9). The spatial geometric intensity factor of satellite distribution. Generally, the better the satellite distribution is, the smaller the PDOP value is, which is generally less than 3.
<5>	HDOP horizontal precision factor (0.5~99.9)
<6>	VDOP vertical precision factor (0.5~99.9)


GPGSV	\$GPGSV,<1>,<2>,<3>,<4>,<5>,<6>,<7>,...<4>,<5>,<6>,<7>*hh
-------	---

<1>	Total number of GSV statements
<2>	Number of GSV in this sentence
<3>	Total number of visible satellites (00~12, the previous 0 will also be transmitted)
<4>	PRN code (pseudo-random noise code) (01~32, the previous 0 will also be transmitted), which can be understood as satellite number.
<5>	Satellite elevation (00~90 degrees, the front 0 will also be transmitted)
<6>	Satellite azimuth (000~359 degrees, the front 0 will also be transmitted)
<7>	Signal to noise ratio (00~99dB, empty when no satellite is tracked, and the previous 0 will also be transmitted), 50 is better.

3.10 Remote Assistance

ZXVPN can provide a virtual LAN, connect the device to the server, and conduct WEBUI access in the background to provide corresponding remote technical support and services. The operation steps are as follows:

1. Insert the mobile network card into the device;
2. Open the mobile network and confirm that the mobile network is online;
3. Click [Use Default Value] to apply.

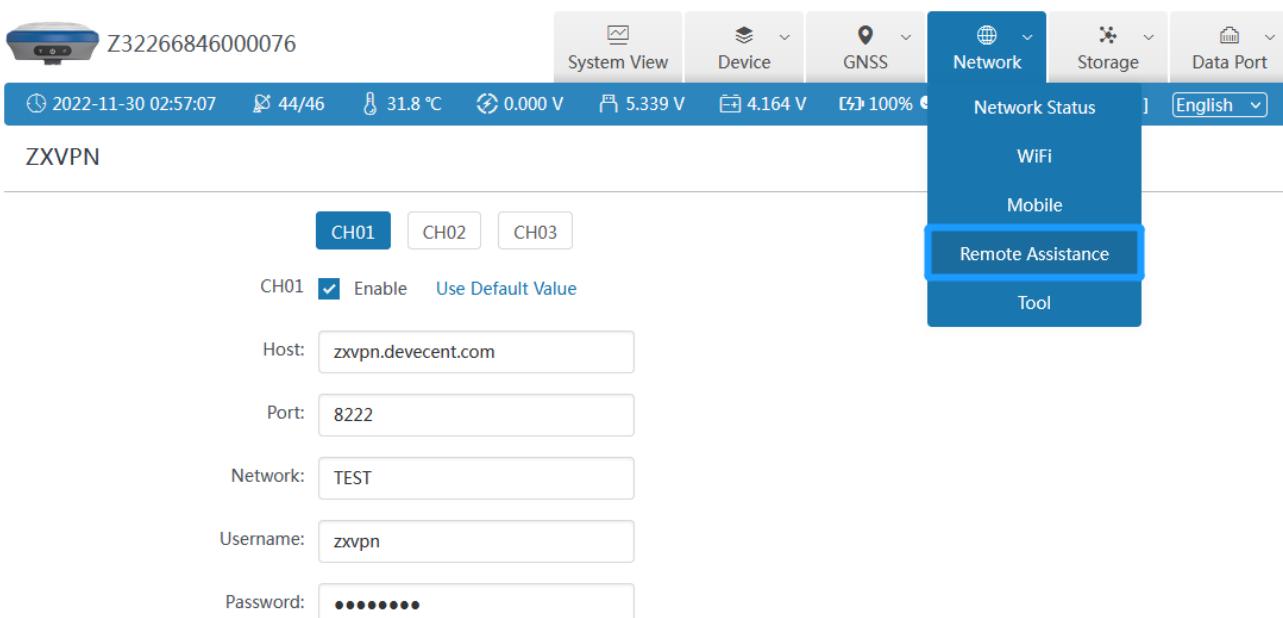


State: Online

IP Address: 10.1.4.160

3.11 Data Config

The device has 24G storage space (recyclable storage) and supports five channels (CH01/CH02/CH03/CH04/CH05) to save various files, as shown in the figure below. We can configure the data source, file period, file name and file format of each channel for storage as required.

Note: Do not change the mode after the device data configuration is completed, or the default storage configuration will be restored.

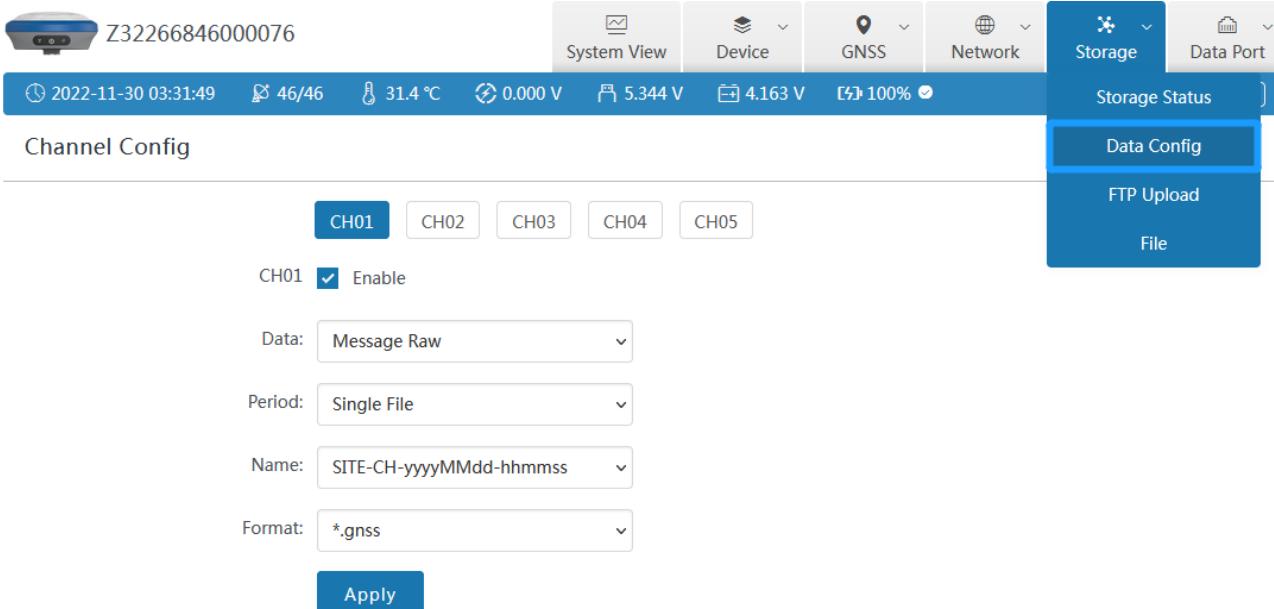

The screenshot shows the GeoMeasure software interface. At the top, there is a header with a device icon, the serial number Z32266846000076, and various status indicators: Date (2022-11-30 03:31:49), Temperature (46/46 °C), Voltage (31.4 °C, 0.000 V, 5.344 V, 4.163 V), and Battery (100%). Below the header, a navigation bar includes links for System View, Device, GNSS, Network, Storage, Data Port, Storage Status, Data Config (which is highlighted in blue), FTP Upload, and File. The main content area is titled 'Channel Config' and shows five tabs for channels CH01, CH02, CH03, CH04, and CH05. The CH01 tab is selected. Under CH01, there is a 'Enable' checkbox which is checked. Below the checkbox are four dropdown menus: 'Data' (set to 'Message Raw'), 'Period' (set to 'Single File'), 'Name' (set to 'SITE-CH-yyyyMMdd-hhmmss'), and 'Format' (set to '*gnss'). At the bottom of this section is a blue 'Apply' button.

Data:

None
 GNSS COM2
 Message Text
 Message Diff
 Message Raw
 Message PPK
 Message Static
 INS Debug
 Ntrip Client
 XLink
 Socket 1

Period:

Single File
 1 hour
 2 hours
 3 hours
 4 hours
 6 hours
 8 hours
 12 hours
 24 hours

Name:

SN-CH-yyyyMMdd-hhmmss
 SN-yyyyMMdd-hhmmss
 SITE-SSSS-yyyyMMdd-hhmmss
 yyyyMMddhhmmss
 SSSSDOYX
 SITEDOYhhmm
 SITEDOYX
 SITEDOYXmm
 SITEDOYhh
 SITE-CH-yyyyMMdd-hhmmss

Format:

*.gnss
 *.data
 *.txt
 *.dev
 RINEX2.10
 RINEX2.11
 RINEX3.02
 RINEX3.03
 RINEX3.04
 RINEX3.04 (.D)
 RINEX3.04 (.gz)

File name naming rules :


1.The time in file name is converted from GPS time directly.	Assume GPS leap second is 18, Time Zone offset is +08:00, Then 00:00:18 means 08:00:00 of local time.		
2.Key words in file name			
yyyy	=> year	DOY	=> day of year, 000~366
MM	=> month, 01~12	X	=> hour, a~x, 0 when one file per day

dd	=> day, 01~31	SN	=> Serial Number
hh	=> hour, 00~23	SITE	=> Marker Name
mm	=> minute, 00~59	SSSS	=> Marker Number
ss	=> second, 00~59		

When the device is set to rover station, base station or static mode, the device will automatically configure the corresponding channel for data storage by default.


1. Rover (CH01)

When the device is set as a rover station, the device will automatically configure CH01 to store and locate the original data by default. If ppk is enabled, CH05 will also be automatically configured by default to store post positioning data, as shown in the following figure.

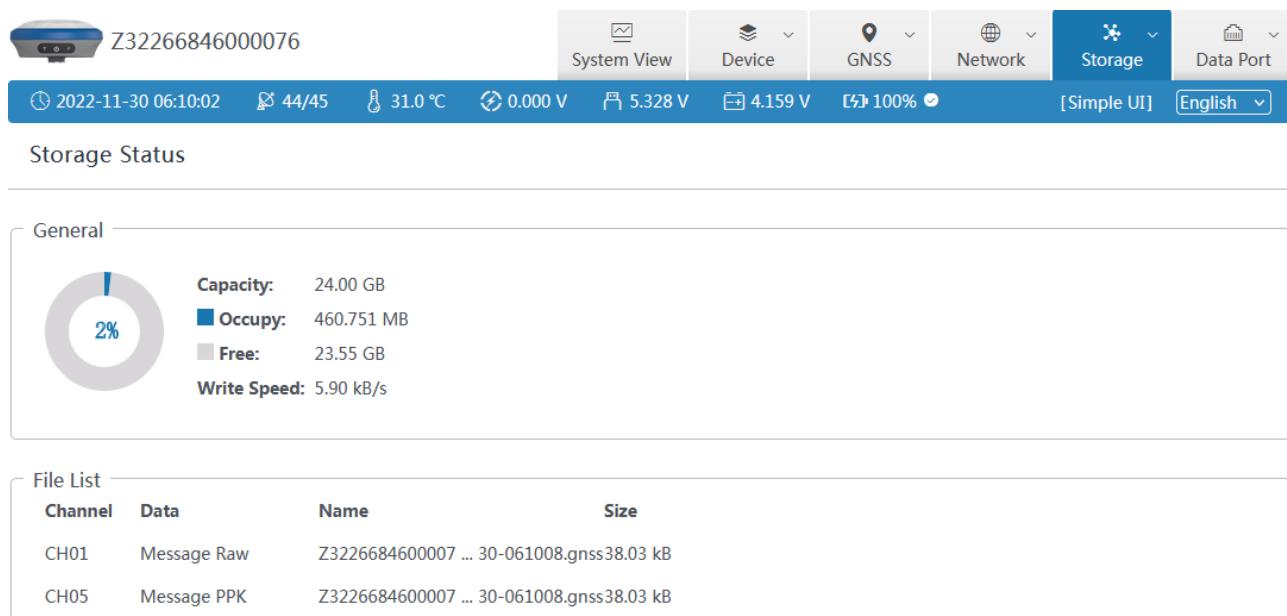


2. Base (CH02)

 When the device is set as the reference station, the device will automatically configure CH02 to store and locate the original data by default. If ppk is enabled, CH05 will also be automatically configured by default to store location post-processing data, as shown in the following figure.




3. Static (CH03)

When the device is set to the static mode, the device will automatically configure CH03 to store static positioning data by default, as shown in the following figure.

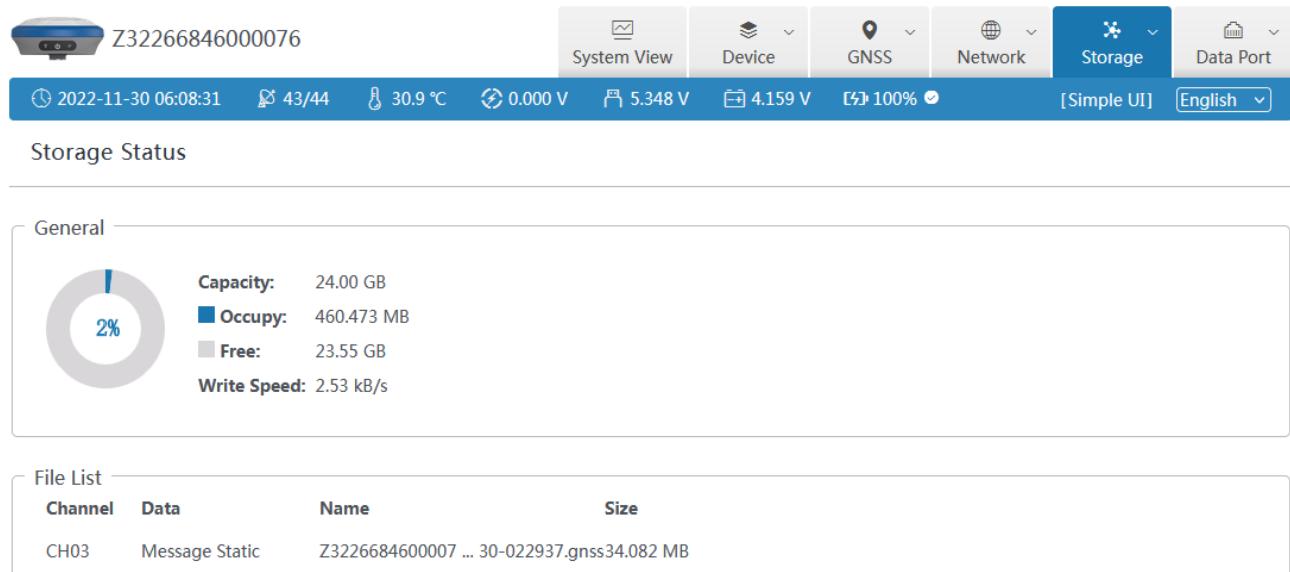

Note: Whenever the tSurvey software connects to the device through Bluetooth, the device will automatically configure CH04 to store Bluetooth monitor data. If there is any problem with the settings of the Bluetooth connection device, you can download the recorded Bluetooth monitor data for troubleshooting.

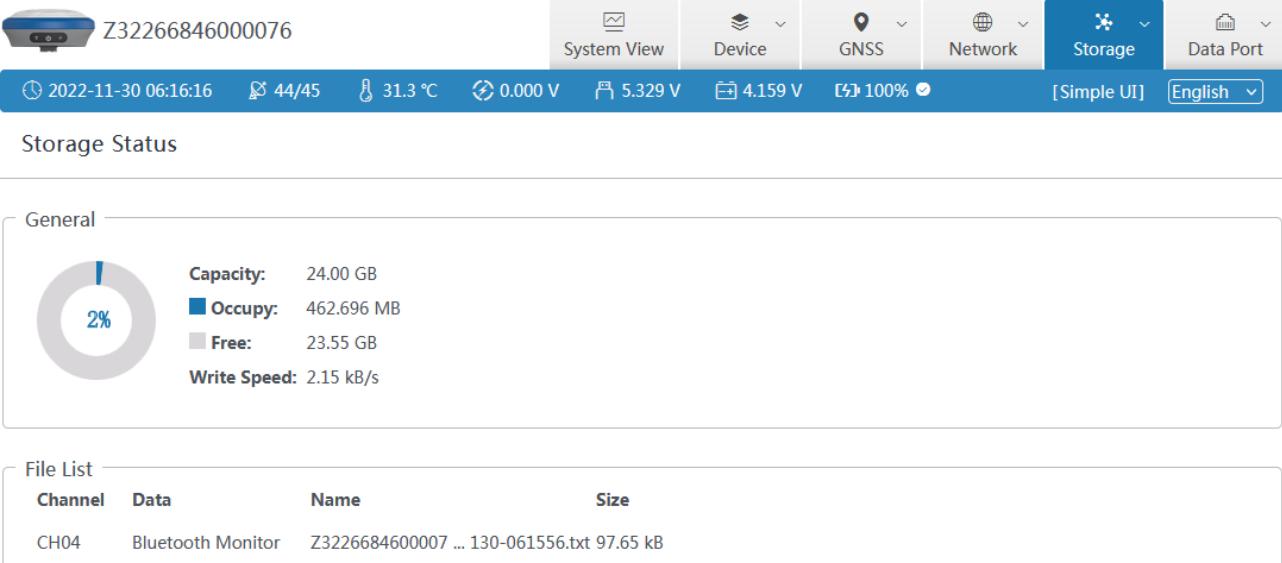

The screenshot shows the GeoMeasure software interface. At the top, there is a header with the GeoMeasure logo and the text "Bench-Mark GNSS Equipment". Below the header, there is a toolbar with various icons and status indicators. The status indicators include the date and time (2022-11-30 06:16:16), battery level (44/45), temperature (31.3 °C), voltage (0.000 V, 5.329 V, 4.159 V), and battery percentage (100%). There are also buttons for "Simple UI" and "English". The main content area is titled "Storage Status" and contains a "General" section with a circular progress bar showing 2% capacity. It also lists the capacity (24.00 GB), occupied space (462.696 MB), free space (23.55 GB), and write speed (2.15 kB/s). Below this is a "File List" section with a table showing one file: CH04, Bluetooth Monitor, Z3226684600007 ... 130-061556.txt, 97.65 kB.

Channel	Data	Name	Size
CH04	Bluetooth Monitor	Z3226684600007 ... 130-061556.txt	97.65 kB

IV. tSurvey Basic Operations

It describes the basic operations to start using the device.

4.1 PCR100U Data Controller



The PCR100U Controller is a rugged multifunctional data controller with design of 5.5-inch sunlight readable HD touch screen and an alphanumerical keypad. Equipped with powerful Octa-core processor and android operating system. With

professional IP67 rating, it is robust and reliable, suitable for various outdoor harsh environment. The large capacity lithium battery guarantees more than 15 hours of field working, which makes it excels at performing multiple surveying tasks throughout the day.

It's Key features:

- 5.5" sunlight-readable HD touchscreen;
- 8-core 2.0GHz processor;
- Pre-installed with Android 11 operating system
- 3GB RAM + 32GB ROM;
- 13 megapixel rear camera;
- IP67 protection, waterproof/shockproof/dustproof;
- Wi-Fi, Bluetooth, NFC;
- 4G all-network support;
- 7700 mAh battery with 15 hours of battery life;
- Universal Type-C connector;
- Charging time: less than 4 hours (fast charging).


4.2 Communication

Operation: Device → Communication

The device manufacturer selects [GeoMeasure], the device type defaults to [RTK(Nano7/T10Plus/T5/T5Lite)], and the connection type selects [Bluetooth].

Click the Bluetooth name in the device parameters to jump to the device search interface, find the Bluetooth name of the corresponding device in the available devices (the default is the device computer number) and click to automatically return to the communication setting interface. Click Connect to pop up the connection progress box, indicating that the connection is in progress. After successful connection, automatically return to the main interface of the instrument. If the


Bluetooth name of the corresponding device is not found in the available devices, click Search, switch to Refresh, and click Refresh.

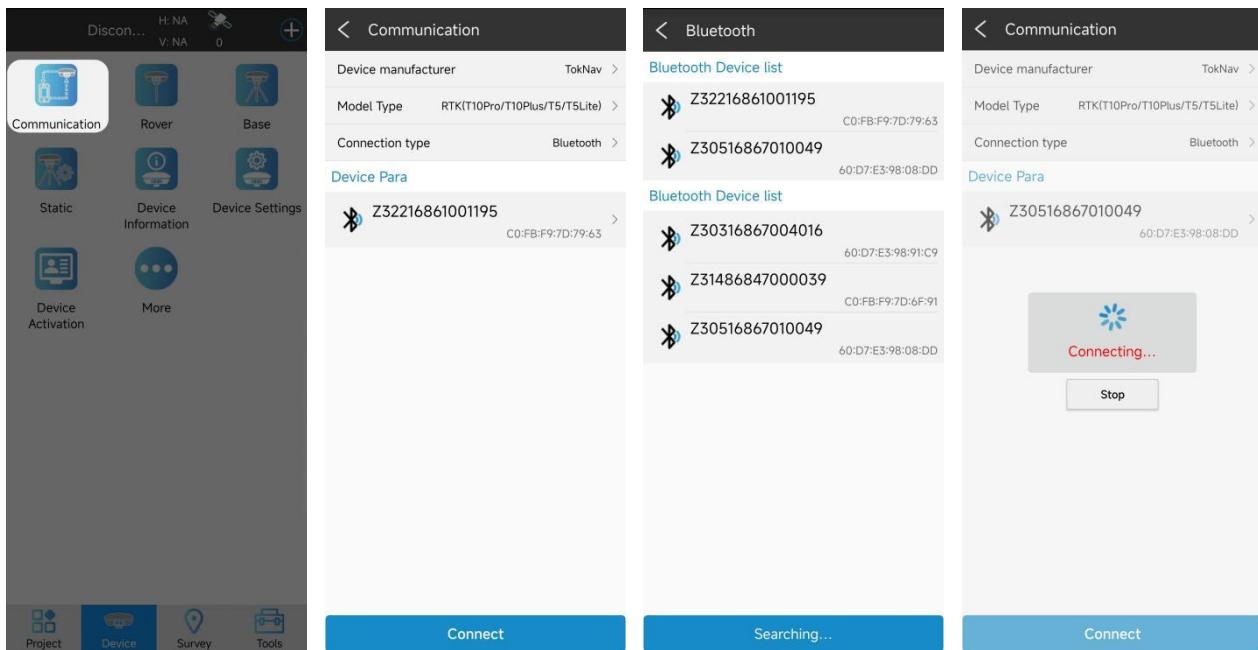

4.3 New Project

Action: Project → Project Manager → New


Enter the name of the item. Others are additional information and can be left blank. Fill in by default or according to actual data. Click [Next.Jump] to the coordinate system parameter interface. The ellipsoid parameter in China is CGCS2000, projected by Gauss by default. For other parameters, you can set the coordinate system according to the actual operation requirements.

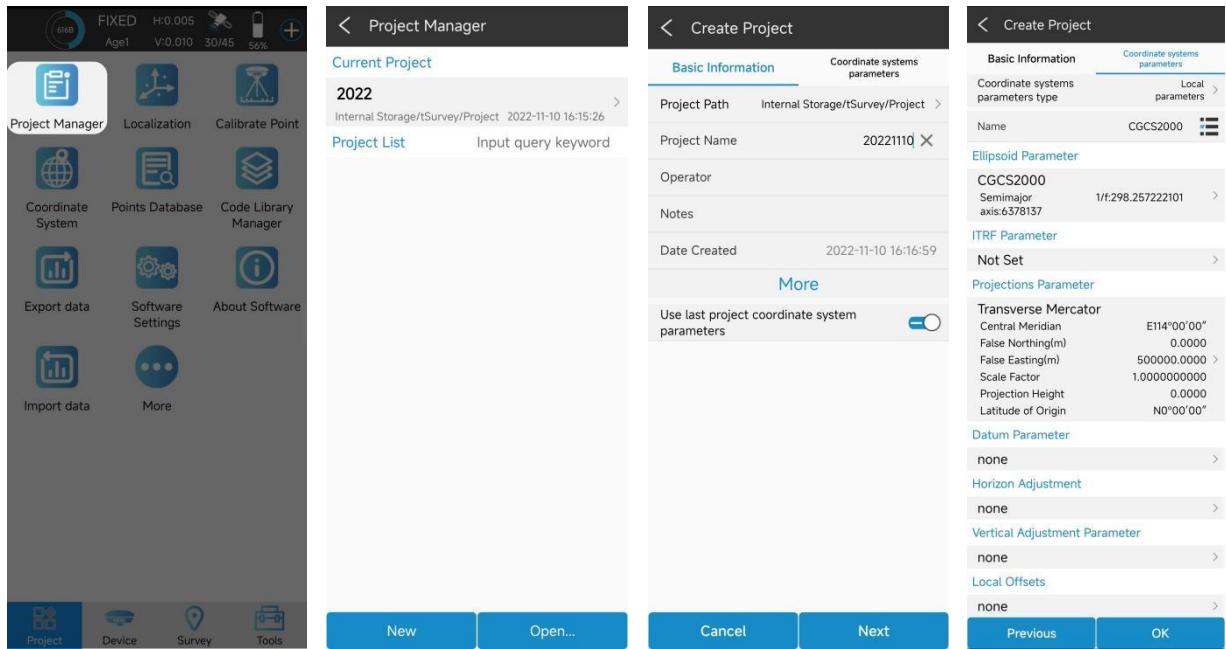

4.4 Import Data

Actions: Project → Import Data


Copy the data file to be imported to the internal storage of the notebook, select the data type, length unit, angle format and data format, click Next, go to the storage directory, select the corresponding file, and click OK.

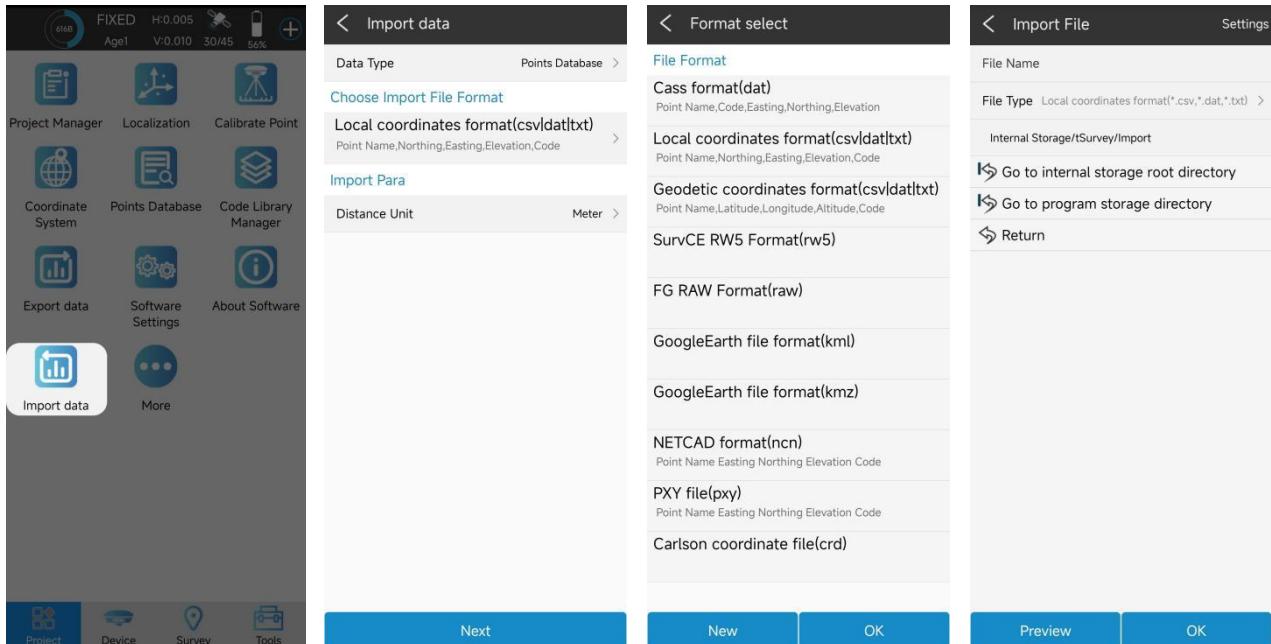


4.5 Export Data

Operation: Project→ Export Data

Confirmation export path, input file name, select length unit, angle format and data format, click export to export data file.

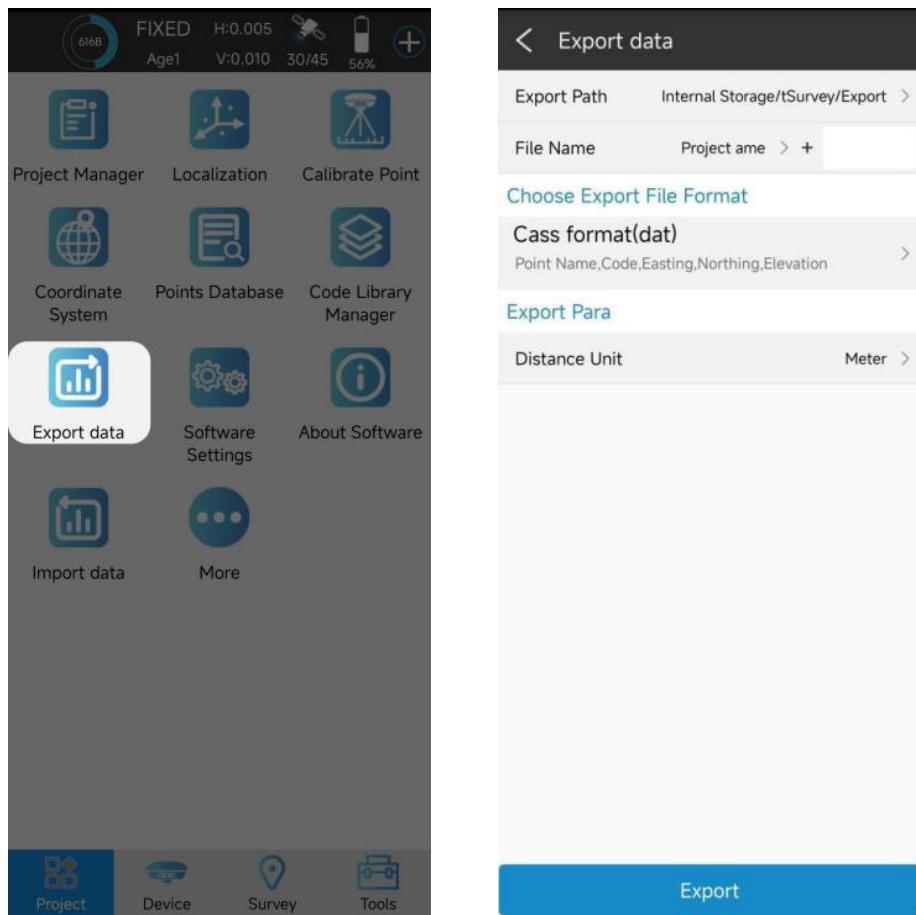


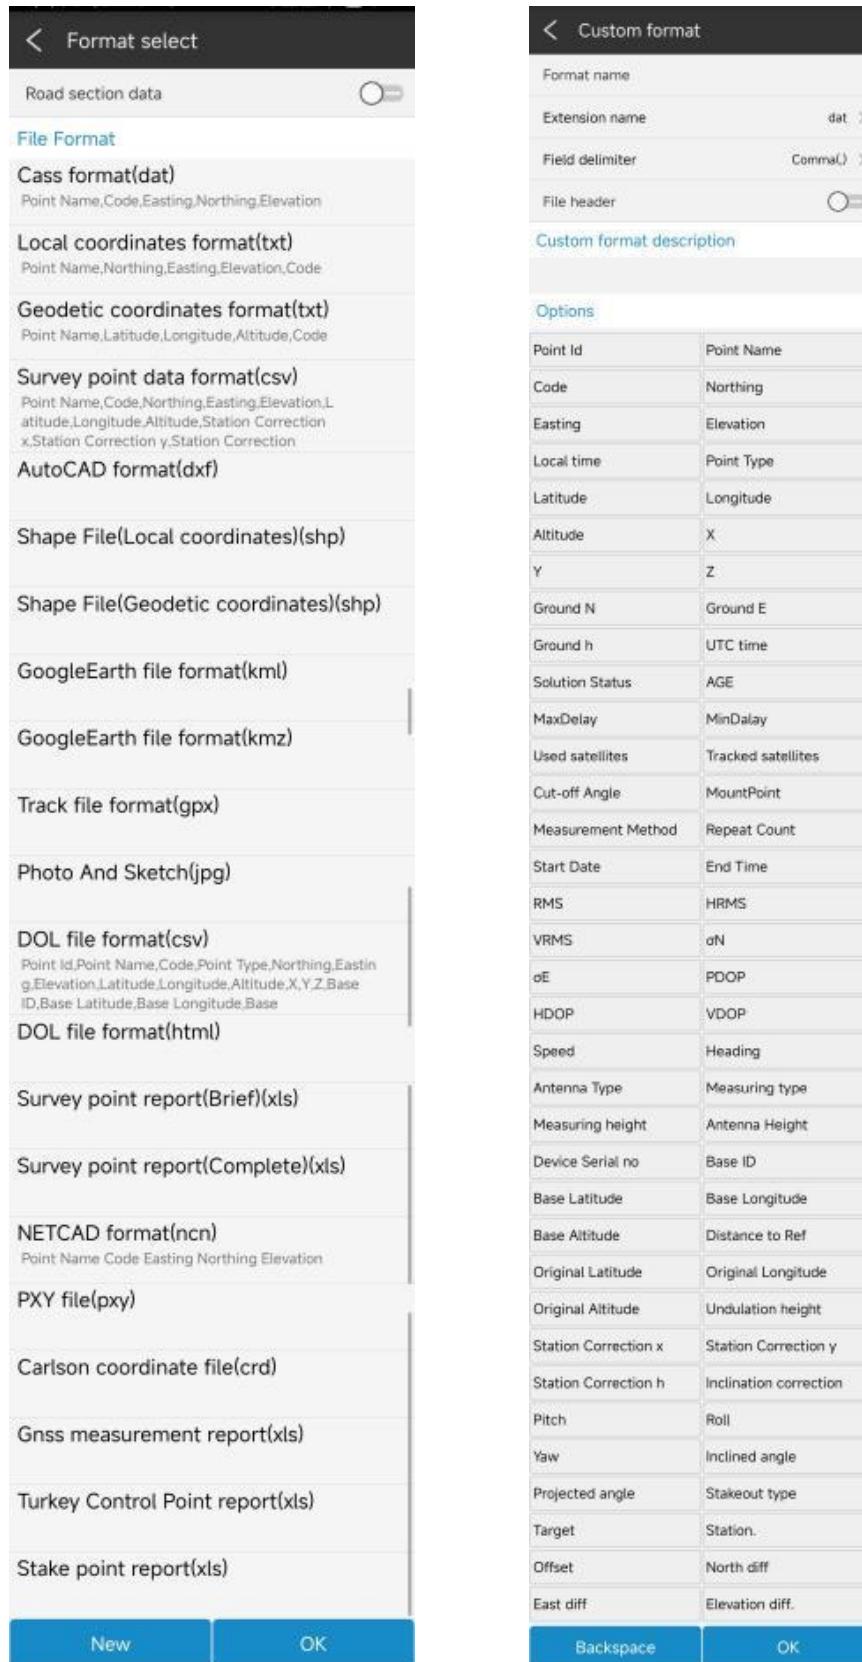

4.6 Localization

Example: four-parameter conversion.

Correctly configure the rover station to obtain fixed state, click [Collect Point] to measure two known control points in the survey area.

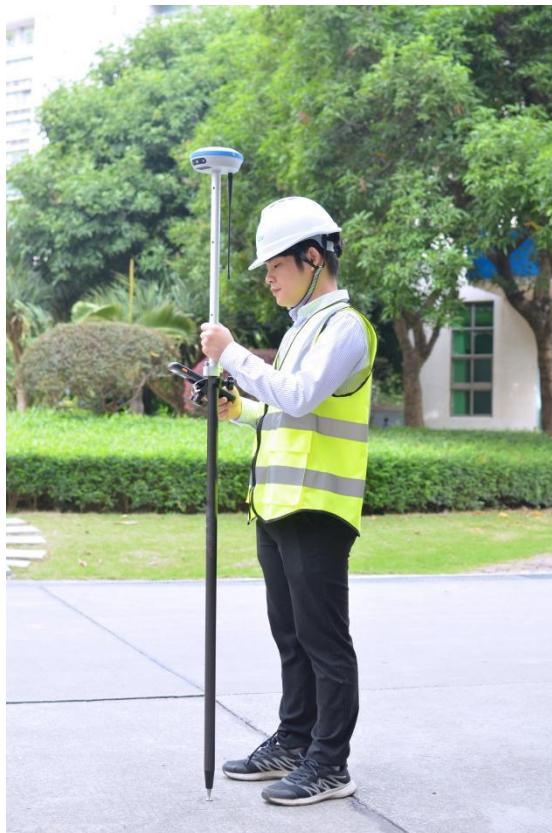

Operation: Project → Localization

Localization is a special design of software, which is designed for specific survey work in China. When the survey is carried out in the same operation area, the position of the base station is changed due to moving the base station or re-erecting the base station, so it is necessary to calculate the translation parameters of the base station on the basis of using four or seven parameters, that is, only one common control point is used to calculate the difference between two sets of coordinate systems.

Select Item→Calculate Conversion Parameters, first click the Add button at the lower left corner, enter the name, fill in the coordinates and whether to enable the option on the page to be jumped to, click OK to automatically return to the previous page, then click the calculation button at the lower right corner, select the coordinate conversion method, horizontal precision limit and elevation precision limit on the page to be jumped to, click OK to obtain the conversion parameter calculation result, and click Apply.


Note: In the parameter report, the plane conversion parameters and elevation conversion parameters can be checked.

The scale parameter is generally infinitely close to 1. If the value does not match, please check the operation whether there is any operation error or coordinate error in the process.

4.7 Rover Mode Setting


Operation: Device → Rover

Set basic parameters such as height cut-off angle, differential delay and whether PPK is enabled. Click "Data Link" to select the required data link.

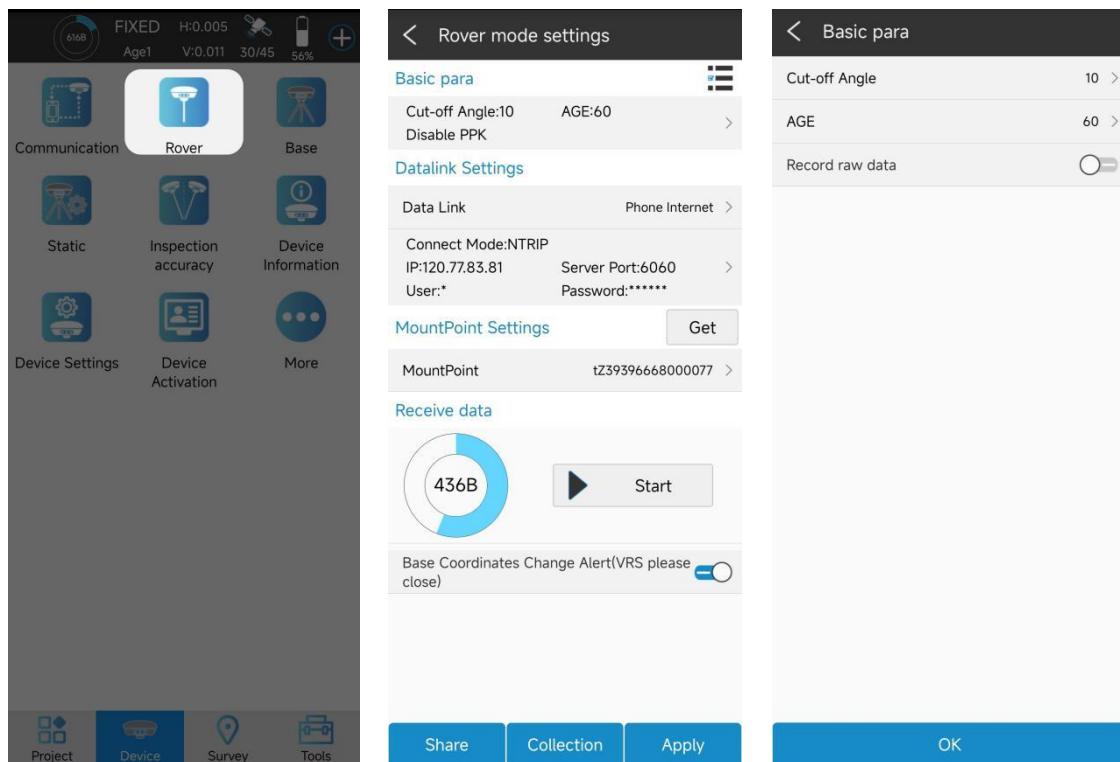


4.7.1 Phone Internet Data Link

Select "Manual network" for data link, enter parameter setting, select connection mode and CORS setting, click "OK" to automatically return to rover station setting interface, click "Get ", select access point base station, click" Start "or" Apply ", return to instrument main page to check whether the solution is fixed.

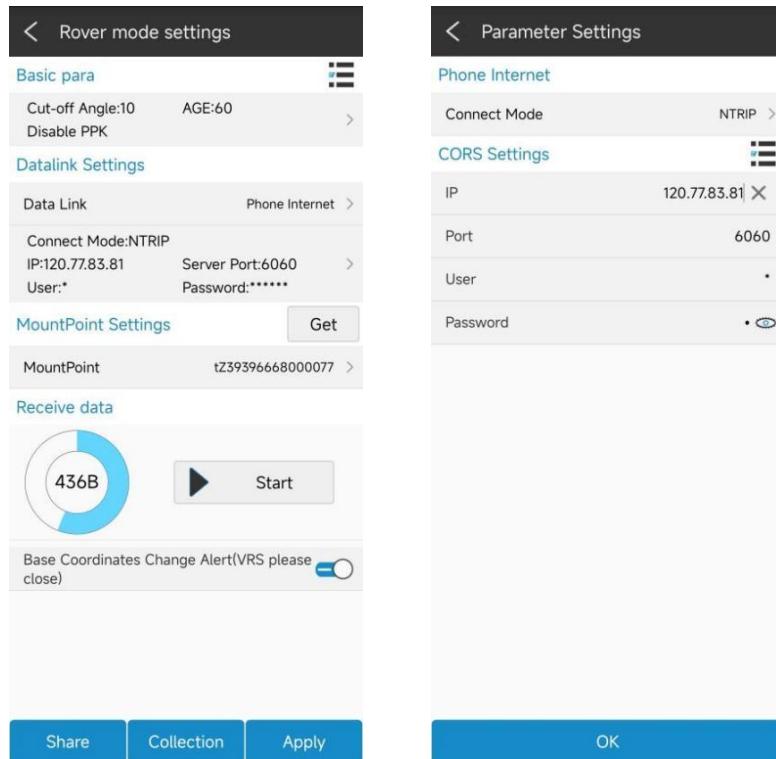


4.7.2 Device Internet Data Link

Insert the SIM card into the device, select "device Network" for the data link, enter the parameter setting, select the connection mode, CORS setting and APN setting, click "OK" to automatically return to the rover station setting interface, click "Get ", select the access point base station, click" Apply "to automatically return to the instrument main page to check whether the solution is fixed.

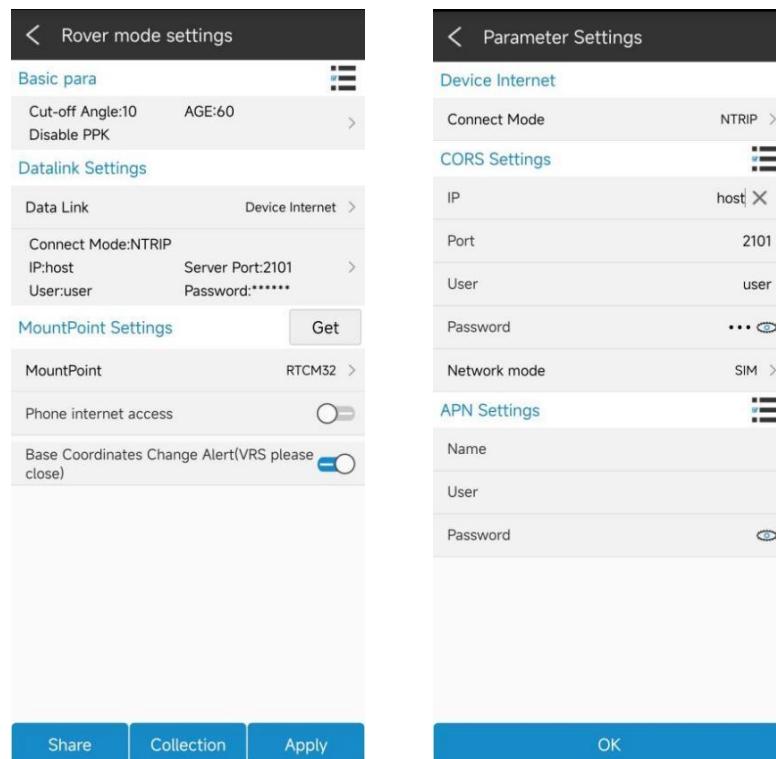

4.7.3 Internal Radio Data Link


Plug in the radio antenna of the device, select "built-in radio station" for the data link, enter the parameter setting, click "Default radio station setting" in the lower left corner to configure the radio station channel, select the channel and protocol content, click "OK" to automatically return to the rover station setting interface, click "Application" to automatically return to the main page of the instrument to check whether the solution is fixed.

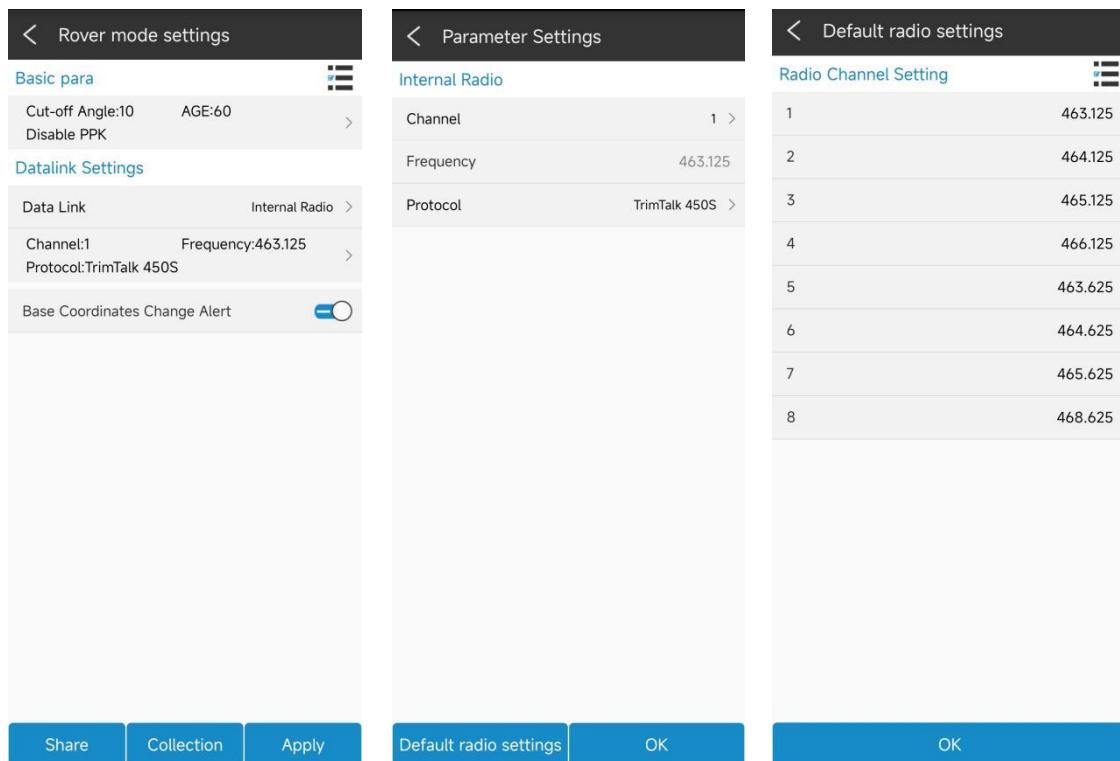

4.8 Base Mode Setting


Operation: Device → Base

Enter base ID, set differential mode, altitude cutoff angle, PDOP limit, start mode parameter, whether to enable PPK, click "Data Link ", and select the required data link.

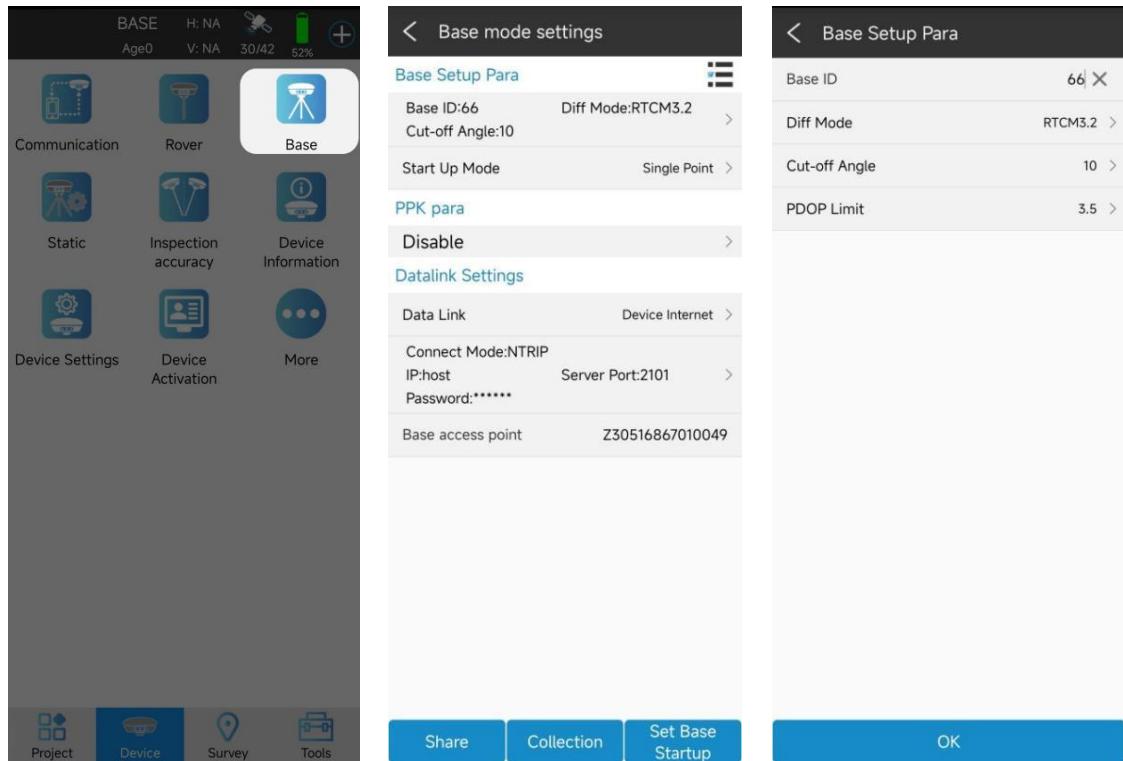


4.8.1 Device Internet Data Link

Insert the SIM card into the device, select "device Network" for the data link, enter the parameter setting, select CORS setting and APN setting, click "OK" to automatically return to the reference station setting interface, the base station access point is the machine number by default, click "Start Base Station" to automatically return to the instrument main page and check whether the base station is started.

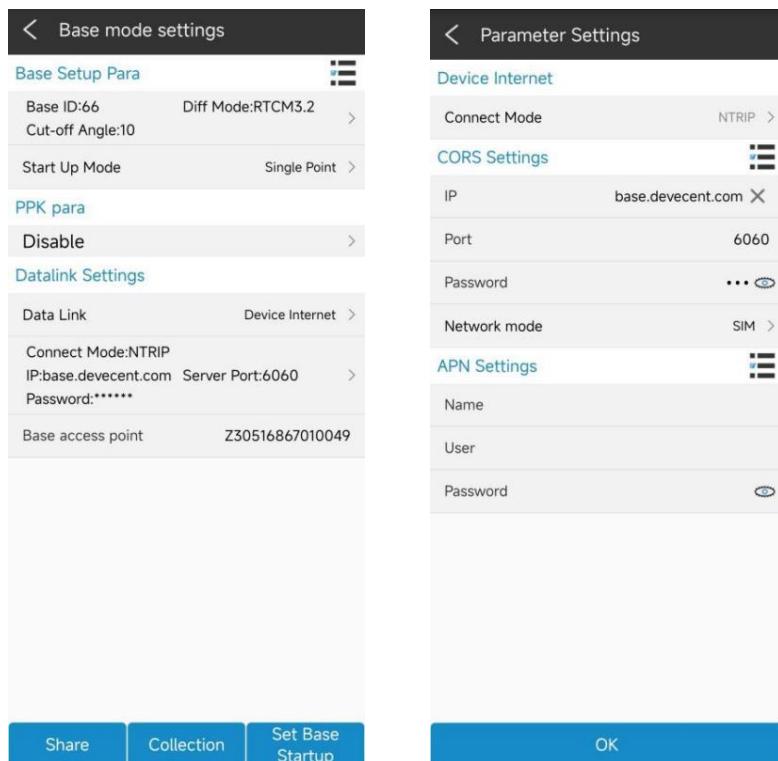

4.8.2 Internal Radio Data Link

Plug in the radio antenna of the device, select "Built-in radio" for the data link, enter the parameter setting, click "Default radio setting" at the lower left corner to configure the radio channel, select the channel and protocol content, click "OK ", and automatically return to the reference station setting interface, click" Start base station ", and automatically return to the instrument main page to check whether the base station is started.

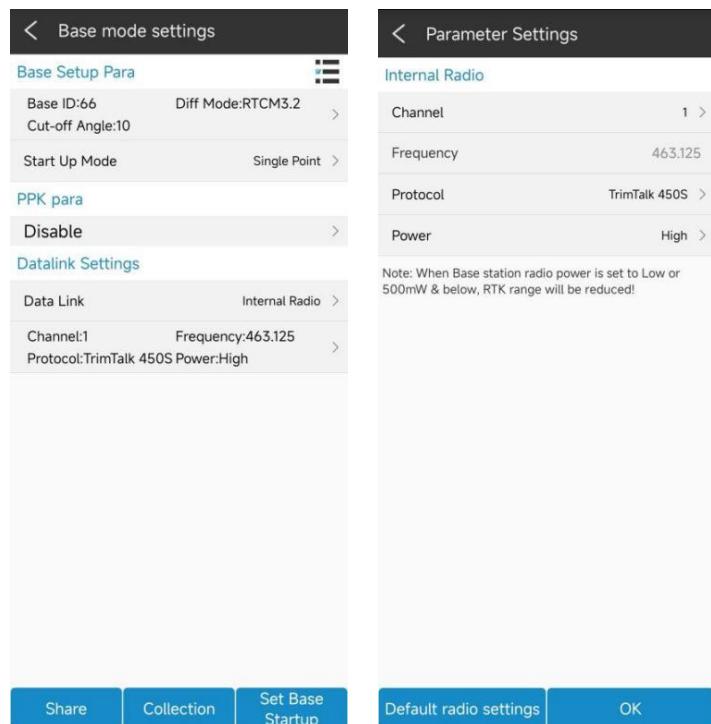

4.9 Static Mode Setting

Operation: Device → Static

Set options such as point name (the default is the equipment number), PDOP limit, altitude cut-off angle, acquisition interval, observation time, and operation after completion, input antenna survey to take altitude, select antenna survey mode, click "Start ", switch to" Stop ", and "Wait for recording" change to countdown to start static data acquisition.Click "Stop" to finish static data collection.

SINGLE H:0.957
Age0 V:1.675 43/45 55%

Communication

Static

Device Settings

Rover

Inspection accuracy

Device Activation

Base

Device Information

More

Project
Device
Survey
Tools

SINGLE H:0.914
Age0 V:1.742 29/41 60%

Options Settings

Point name	1234
PDOP Limit	3.0 >
Cut-off Angle	10 >
Collection Interval	1HZ >
Observation Time	15min >
Execute after completion	Switch to rover >

Antenna Parameters

Antenna Measured Height	0 X
Antenna Measurement Type	Vertical height >
Antenna Height	0.0693

Start

SINGLE H:0.986
Age0 V:1.862 29/42 60%


Options Settings

Point name	1234
PDOP Limit	3.0 >
Cut-off Angle	10 >
Collection Interval	1HZ >
Observation Time	15min >
Execute after completion	Switch to rover >

Antenna Parameters

Antenna Measured Height	0
Antenna Measurement Type	Vertical height >
Antenna Height	0.0693

15:11
Stop

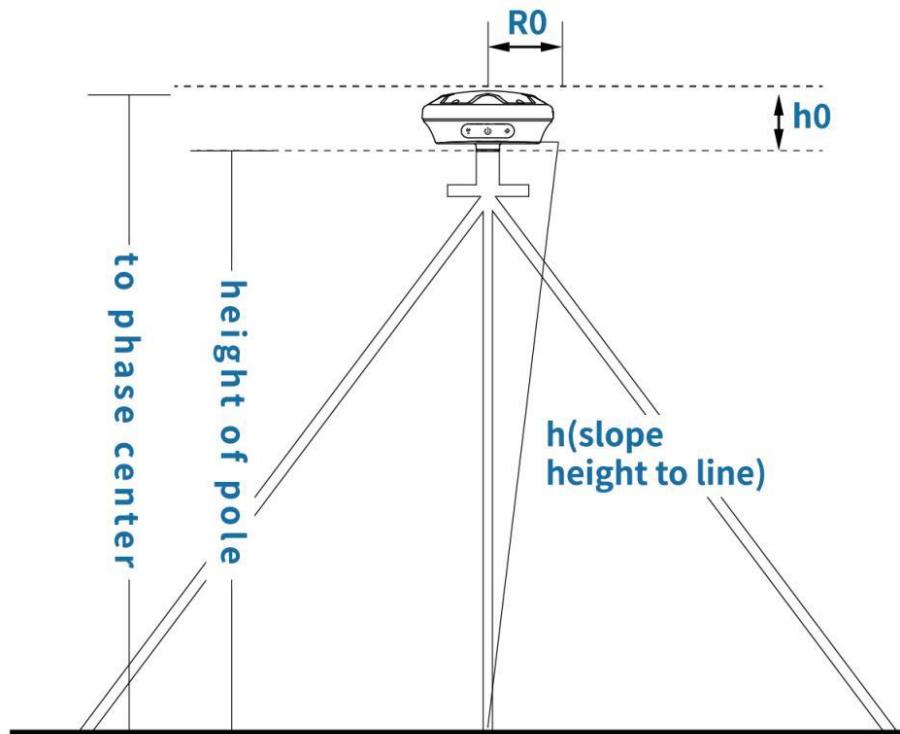

Log in to the device web page (see III WebUI for details), click [File]. Find the folder corresponding to the time to download the static data.



File


Root/ 20221130/

<input type="checkbox"/> Select All	Batch Delete
<input type="checkbox"/> Rover Raw Data/	Delete
<input type="checkbox"/> Base Raw Data/	Delete
<input type="checkbox"/> Static Raw Data/	Delete
<input type="checkbox"/> Bluetooth Interact/	Delete
<input type="checkbox"/> PPK Data/	Delete

4.10 Point Survey

Operation: Survey → Point Survey

Open the point survey page, and view the current power of the device in the upper right of the survey display interface. Amount, CORS connection status, positioning accuracy (H: horizontal accuracy and, V: elevation accuracy), satellite information status, the following column displays the current optimal position of the device (north coordinate, east coordinate, elevation, base station distance and other information), and the bottom of the interface displays the name, code and antenna height to be collected (click to set antenna parameters).

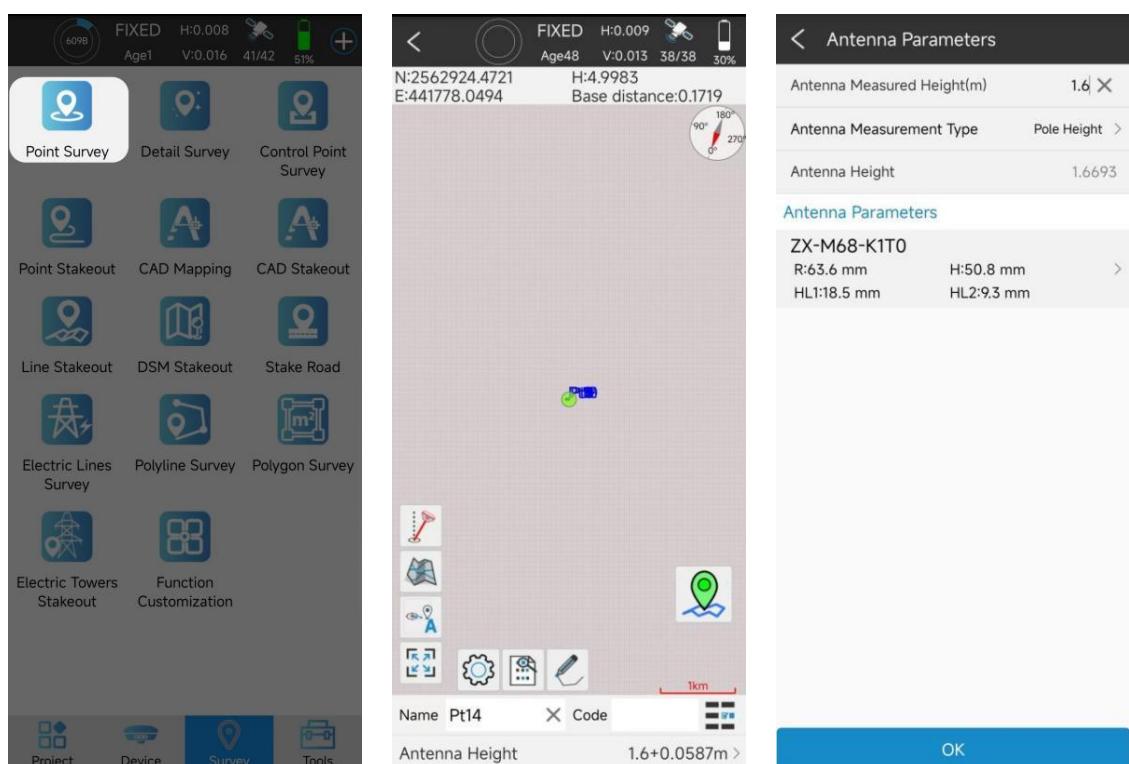

Each icon in the point survey page has the following meaning:

	Click this icon to automatically center the current anchor point.
	Click the icon to display the network map.
	Click this icon to display all survey points in the view.
	Click this icon to turn tilt survey on or off.
	Click the icon to set acquisition parameters, information display and function menu.
	Click this icon to view the coordinate point library of the current project and the collected point coordinates, which are the same as the function of "coordinate point library" in "project".
	Click the icon to collect point, line, surface and other data.

< Settings

Settings	Display Info	Tool Bar
Tolerance Setting		
Solution Limit	FIXED >	
HRMS Limit	0.05 >	
VRMS Limit	0.1 >	
PDOP Limit	3 >	
AGE Limit	5 >	
Smooth		
Survey delay	0 >	
Average GPS Count	5 >	
Settings		
The survey confirmation page pops up	<input checked="" type="checkbox"/>	
Remind when there is same point name	<input checked="" type="checkbox"/>	
Point Name Increment	1 >	
Default Code	Same as last point >	
Default		OK

Picture Settings

< Settings

Settings	Display Info	Tool Bar
Display Item		
N:2562924.5231	H:4.8057	
E:441778.0342	Base distance:0.0204	
Options		
Long	Lat	
Altitude	Ant. H	
Forward azimuth	Speed	
Time	Point dist.	
Pt. H dist.	Pt. Elevation diff.	
σN	σE	
PDOP	HDOP	
VDOP	Inclination Angle	
Projection Angle		
Display		
Point Name		<input checked="" type="checkbox"/>
Point Code		<input checked="" type="checkbox"/>
Height		<input checked="" type="checkbox"/>
Backspace	Default	OK

Picture Display Info

< Settings

Settings	Display Info	Tool Bar
Display Item		
Tilt Survey	<input checked="" type="checkbox"/>	
Display Map	<input checked="" type="checkbox"/>	
Auto jump map center	<input checked="" type="checkbox"/>	
Full Map	<input checked="" type="checkbox"/>	
Options		
Zoom in	<input checked="" type="checkbox"/>	
Zoom out	<input checked="" type="checkbox"/>	
Jump map center	<input checked="" type="checkbox"/>	
Take screen point	<input checked="" type="checkbox"/>	
Pointer Catch	<input checked="" type="checkbox"/>	
CAD Text	<input checked="" type="checkbox"/>	
Map Navigation	<input checked="" type="checkbox"/>	
Length&Area Measure	<input checked="" type="checkbox"/>	
Distance&Height Diff Measure	<input checked="" type="checkbox"/>	
Angle Measure	<input checked="" type="checkbox"/>	
Undo last point	<input checked="" type="checkbox"/>	
Background layer	<input checked="" type="checkbox"/>	
CAD Background Color	<input checked="" type="checkbox"/>	
Clear	Default	OK

Picture Tool Bar

4.11 Tilt Survey

Operation: Survey → Point Survey


The tilt survey function requires a tilt module on the device. The device with this function can:

1. The accuracy of the device machine can be maintained within 2cm within the range of 60 ° inclination;
2. The calibration process is simple, just shake the centering rod in place;
3. Support calibration of centering rod, and eliminate survey error caused by curvature of centering rod.

Open the point survey page, click the bottom column to input the antenna height parameter (height of the centering rod), and then light up the tilt survey icon at the lower left corner, that is, turn on the tilt survey function. The icon is green when it is turned on. At this time, the device needs to shake the centering rod 5~10S according to the pop-up window prompt under the fixed state, until the icon  turns green , the tilt survey can be performed.

When using the tilt survey for the first time, the alignment rod needs to be calibrated to eliminate the alignment rod curvature band for the error. Click "Device"→click "Inspection accuracy"→click "Pole calibration", then set the antenna height parameter, and calibrate the centering rod according to the calibration steps and pop-up prompt.

For the same device and the same centering rod, the centering rod calibration only needs to be carried out once, and the centering rod calibration can be eliminated when the matching is kept unchanged.

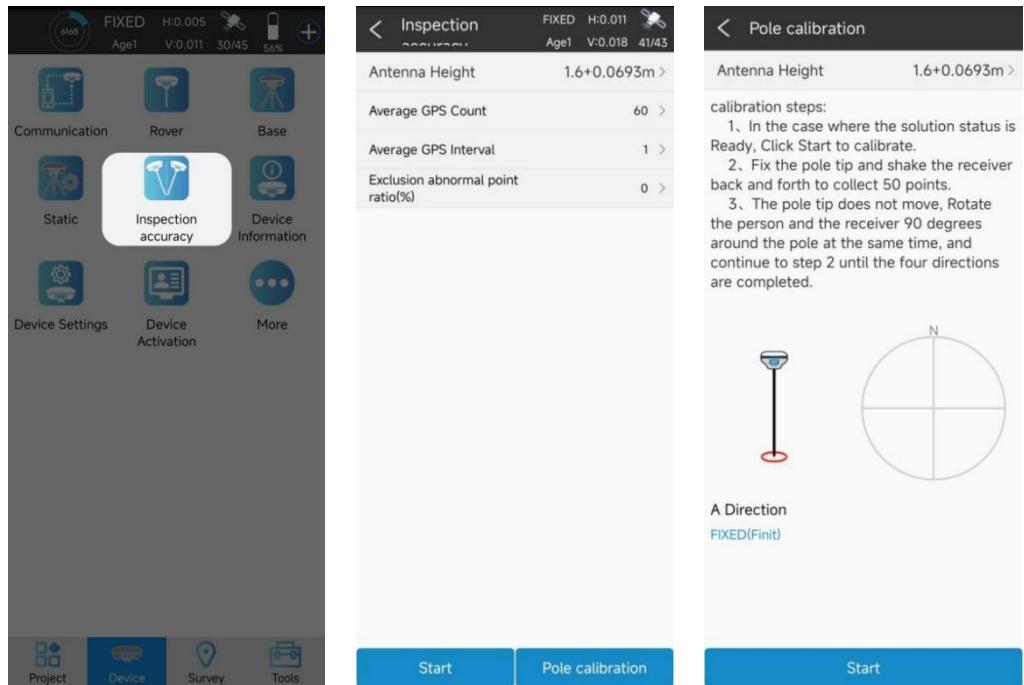


Precautions:

- When the tilt survey is started, sometimes with the movement and rotation, the tilt icon will change from green to red. At this time, the centering rod needs to shake according to the prompt, and the sampling can be carried out until the icon turns green;
- In the process of inclination survey, if the inclination is greater than 60° , it will indicate that the inclination is too large, and the accuracy of the collected points can not be guaranteed within 2cm;
- To calibrate the centering rod, set the antenna height parameter first, otherwise the calibration data will be wrong;
- Initialization of tilt survey can be completed only when it is in fixed solution state.

4.12 Device Activation

Operation: Device → Device Activation


After the device bluetooth connection is successful, you need to confirm whether the device registration code is valid. If it has expired, you need to register. Click "Device" → "Device Activation" to query the valid time of the device registration code. If it has expired, you need to input or scan the new device registration code.

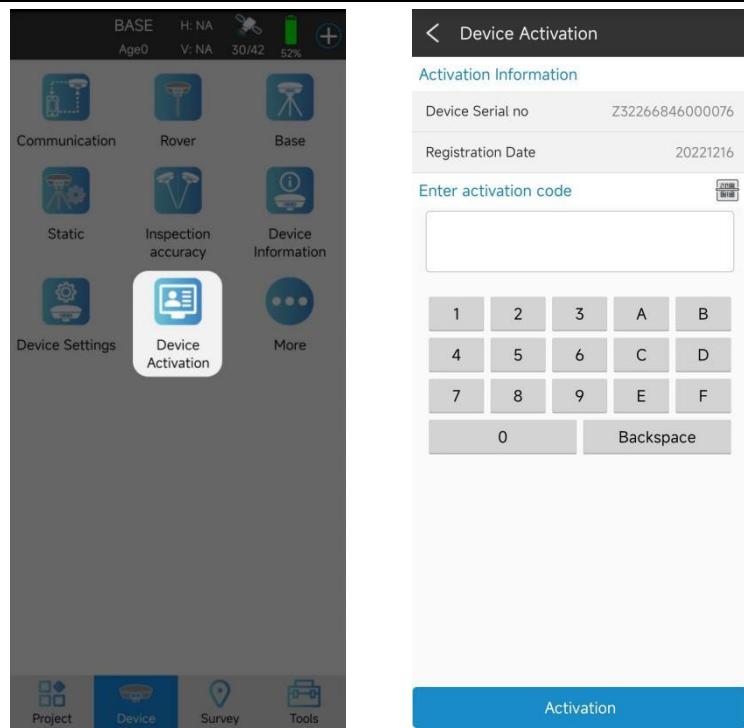

4.13 Software Activation

Operation: Project → About Software

In the process of using the software, you need to pay attention to the expiration date of the software. If it has expired, you need to activate. Click "Project" → "About Software" to query the software expiration time. If it has expired, click Software Activation and enter or scan a new software activation code on the jump page.

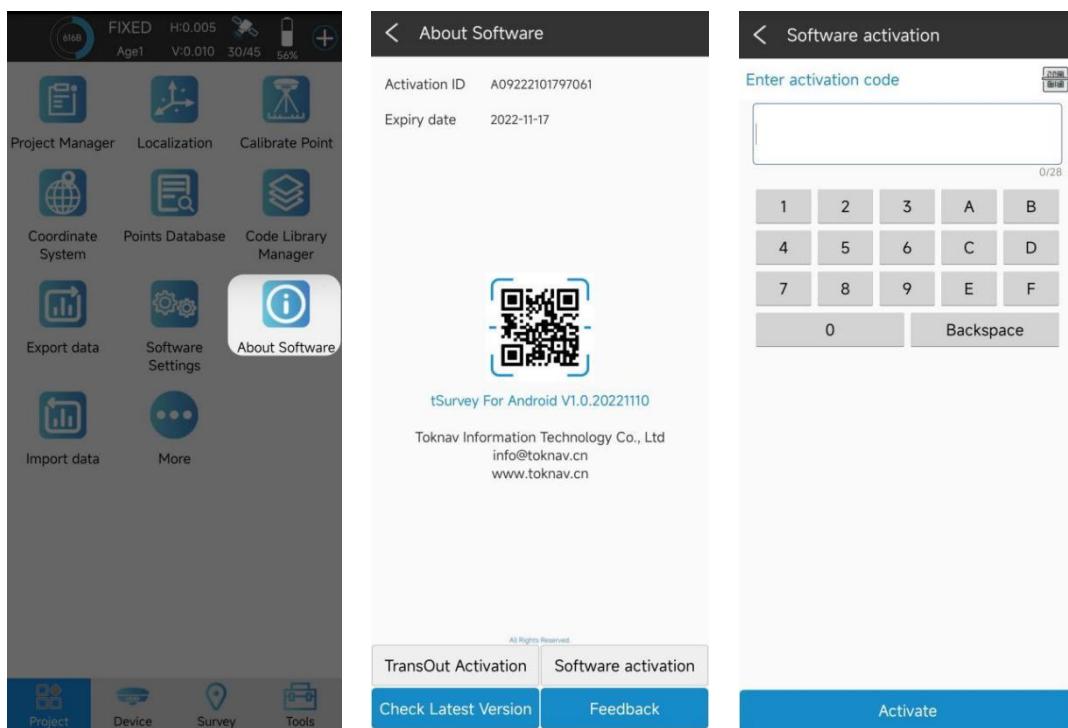

V. Technical Indicator

Item	Specification	Remarks
Hardware system	ARM Cortex-A7 1.8GHz	
OS	Linux	
Channel	1408 channels	
GNSS	GPS	L1 C/A, L1C, L2P(Y), L2C, L5
	GLONASS	L1, L2, L3
	BDS	B1I, B2I, B3I, B1C, B2a, B2b
	GALILEO	E1, E5a, E5b, E6
	QZSS	L1, L2, L5
	SBAS	L1
	NavIC(IRNSS)*	L5*
	Channel	1408
	Data format	NMEA-0183
	Correction I / O Protocol	RTCM3.X
POSITIONING ACCURACY	Data update frequency	20Hz(max)
	Recapture Time	<1s
	Cold Boot	<40s
	Single (RMS)	Horizontal: 1.5m vertical: 2.5m
	DGPS (RMS)	Horizontal: 0.4m vertical: 0.8m
	RTK (RMS)	Horizontal: $\pm(8\text{mm}+1\text{ppm})$ Vertical: $\pm(15\text{mm}+1\text{ppm})$
SYSTEM	Time Accuracy (RMS)	20ns
	Static Accuracy(RMS)	Horizontal: $\pm(2.5\text{mm}+0.5\text{ppm})$ Vertical: $\pm(5\text{mm}+0.5\text{ppm})$
	Speed Accuracy(RMS)	0.03m/s
	Tilt compensation Accuracy(within 60 °)	<2cm
	Bluetooth	BR+EDR+BLE
	WIFI	802.11 b/g/n
INDICATOR	Network	LTE FDD: B1/2/3/4/5/7/8/12/13/18/19/20/25/2 6/28 LTE TDD: B38/B39/B40/B41 WCDMA: B1/2/4/5/6/8/19 GSM: B2/3/5/8
	Data Radio	Frequency : 410~470MHz Protocol : TRIMTALK, TRIMMK3, SOUTH, TRANSEOT RF transmit power : 0.5W/1W Air baud rate : 9600 / 19200bps
	Storage	32GB Storage
BATTERY	Power Indicator	Show power status
	Satellite Indicator	Show position status
	Differential Indicator	Show differential signal status
	Battery	3.7V, 9600mAh
	Work time	More than 16 hours(Typical, Rover,GSM)

	Charge	MTK PE+ 1.1/2.0 9V/2A USB PD 12V/1.25A 5V/3A	Support fast charging adapter and adaptively and dynamically adjust charging current
ENVIRONMENTAL	Work Temperature	-20°C~+60°C	
	Storage Temperature	-40°C~+85°C	
	Shock	Withstand 1.5M pole drop	
	Protection	IP68	
PHYSICAL	Material	Magnesium alloy main body, ABS/PC top cover	
	Dimension	Φ147.9mm*68mm	
	Weight	740g	
A Full Set	Nano7 Device	1 SET	
	USB power adapter	1 PCS	
	USB A To Type-C	1 PCS	
	Radio Antenna	1 PCS	

GeoMeasure Information Technology Co., Ltd.

Support: info@GeoMeasure.cn

Website: <https://www.GeoMeasure.cn>

