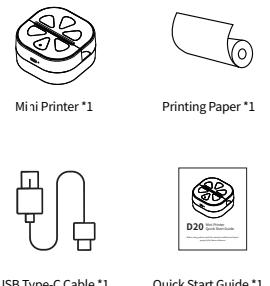
 
 
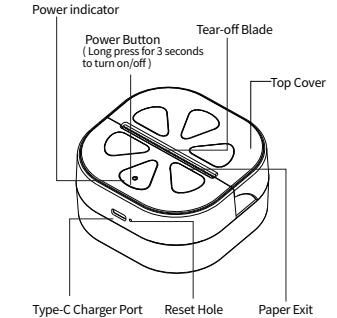
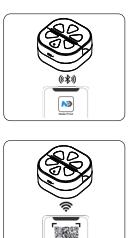
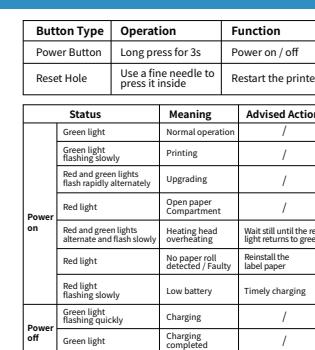


名称：D20错题机说明书 尺寸：54x66mm(展开尺寸：270x66mm ) 材质：80g书纸

正面

 <p><b>D20</b> Mini Printer Quick Start Guide</p> <p>Before using, please read this manual carefully and keep it properly for future reference</p>	<b>01 Packing List</b>	<b>02 Install the Printer Paper</b>	<b>03 Machine Description</b>	<b>04 App Download</b>
	    <p>(1) The Printing Paper faces the Power Button and is higher than the Paper Exit.</p>		 <p>More information available on the "Nada Print" app.</p>	
				<b>05 App Connection Method</b>
				 <p>(1) Please charge the printer for the first use. After charging, press and hold the power button until the red and green lights flash to turn it on successfully.  (2) Connect the machine.</p>

背面

 <p><b>Method 1</b> Turn on the Bluetooth of a phone → Open the "Nada Print" APP → Click the "Connect" button in the upper right corner of the APP homepage → Select D20 in the list of searched printers to connect → Complete the machine connection.</p> <p><b>Method 2</b> Double-click the power button after turning on the machine to print the QR code → Open the "Nada Print" APP → Click the scan code button on the search page → Scan the code to connect.</p>	<b>06 Additional Instructions</b>	<b>07 Precautions</b>	<b>08 Related Statements</b>	<b>09 Warranty</b>									
	<p><b>06 Additional Instructions</b></p> <table border="1"> <thead> <tr> <th>Button Type</th> <th>Operation</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>Power Button</td> <td>Long press for 3s</td> <td>Power on / off</td> </tr> <tr> <td>Reset Hole</td> <td>Use a fine needle to press it inside</td> <td>Restart the printer</td> </tr> </tbody> </table>	Button Type	Operation	Function	Power Button	Long press for 3s	Power on / off	Reset Hole	Use a fine needle to press it inside	Restart the printer	<p><b>07 Precautions</b></p> <p>(1) Please use 5V=2A input for charging.  (2) Please connect the USB cable to the power adapter before charging, please gently insert or unplug the charging cable when charging, to prevent excessive force from damaging the port.  (3) After the charging is completed, please unplug the charging cable in time.  (4) To avoid danger, do not use or charge in an environment of high temperature, high humidity, heavy smoke, and dust, such as in the bathroom, steam room, near open flame, etc.  (5) Improper charging may cause damage to the print head.  (6) Do not touch the print head to prevent scalding caused by overheating.  (7) The tearing blade is sharp, please be careful to avoid touching it by mistake.  (8) If the machine is malfunctioning, insert the reset hole to restart the machine.</p> <p><b>Battery Warning Instructions</b></p> <ul style="list-style-type: none"> <li>It is forbidden to disassemble, hit, squeeze the battery, or throw it into fire;</li> <li>If severe swelling occurs, please do not reuse it;</li> <li>Do not place it in a high-temperature environment, and it is strictly prohibited to use the battery after soaking it in water;</li> <li>There is a danger of explosion if the wrong type replaces the battery. Be sure to dispose of the used battery according to the instructions;</li> <li>If consumers use a power adapter as a power supply, they should purchase one that meets the requirements of corresponding safety standards or has CCC certification.</li> </ul>	<p><b>08 Related Statements</b></p> <p><b>FCC Statement</b> This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p><b>NOTE:</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: – Reorient or relocate the receiving antenna. – Increase the separation between the equipment and receiver. – Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. – Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>	<p><b>09 Warranty</b></p> <p>We offer an extensive warranty for all products that extends through 1 YEAR of the order date. This warranty covers quality related issues and product defects.</p> <p>If you post the 30-day return period on Amazon, contact us directly via the "Contact seller" option on your Order Details.</p> <p>If the product is not working properly, we can send you a replacement product. This warranty does not apply in cases of abuse, mishandling, or unauthorized modification of the product.</p> <p>If you have any questions about this warranty or would like additional information, please contact us via the "Contact Seller" option or directly via e-mail (check packing box). Please keep the original box, packing materials and all documentation in the event that service is required.</p> <p><b>Special Notes</b></p> <p>The company takes full responsibility for reviewing and explaining this manual, with utmost care taken to ensure its accuracy. However, please note that any technical improvements to the product may not be reflected in this manual, and that the images of the product, accessories, software interfaces, etc. in this manual are for illustrative purposes and reference only.</p> <p>Due to product updates and upgrades, the actual product may be slightly different from the images. Please rely on the actual product for all details.</p> <p><b>Notice:</b> If the device cannot be turned on, please charge for one hour.</p> <p><b>Zhuhai Jiuyin Technology Co., Ltd.</b>  <b>Support Email :</b>xxxxxxx  <b>Official Website :</b>xxxxxx  <b>Address:</b>  Room 302, Building 2, No. 90 Chuangzhi Road, Tangjiaowan Town, High tech Zone, Zhuhai, Guangdong Province, China</p>
Button Type	Operation	Function											
Power Button	Long press for 3s	Power on / off											
Reset Hole	Use a fine needle to press it inside	Restart the printer											