

# Tablet PC



Thank you for purchasing CRELANDER product. Hope you will have fun using it!  
Please read this user manual thoroughly before using, and keep it properly.


## Tips

1. Before first use, please fully charge the device. Please charge for about 6 hours for the first two times, and only need to charge for 4 hours afterwards.

[Note]: This tablet uses a built-in polymer battery, and charging must choose a standard adapter (input: AC100~240V 50/60Hz Maximum: 180mA, Output: DC5.0~5.5V/1.5~2A). In order to extend the service life of the machine, it is recommended that you consume the battery to about 15% before charging.

[Note]: a. If you do not use this tablet for a long time, to avoid battery damage, please charge/discharge it once a month. b. Due to device and screen power consumption, it may result in longer charging time.

## Product Overview

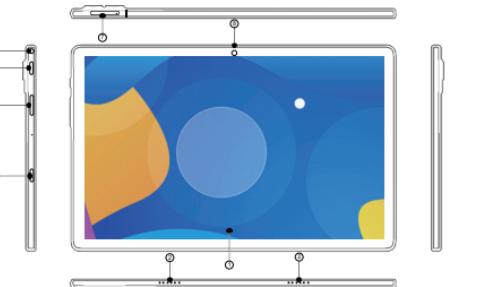

① Touch screen  
② Speaker  
③ Type-C  
④ Volume Key  
⑤ Power button  
⑥ TF-Card  
⑦ Front Camera

## Basic Operating Guidelines




- ① On the Home screen, slide up to the APP resource library, and down to the shortcut toolbar and message notification bar.
- ② Tap the "■" icon to enter the background program interface, tap the "●" icon to enter the Home screen, tap "◀" icon to return to the previous level of interface.



After entering the shortcut toolbar, tap the icon to turn on/off the corresponding function. Long press the icon to enter the setting interface for the corresponding function, which allows for more detailed function settings.



Enter the camera APP and swipe to the right to switch between photo/video functions. After clicking "...", you can choose to switch between front and rear cameras, turn on/off flash, and turn on/off HDR and other functions.

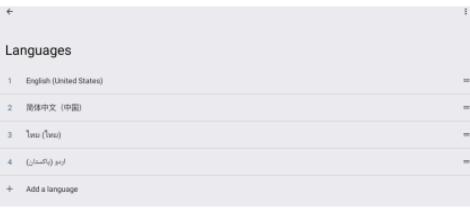

On the Home screen, slide up to enter the APP resource library, select "Settings" - "System" - "Language and input method" - "Language" - "Add language" to select the language you want - press and hold the language you select and drag it to the first position to change the system language.

## Maintenance And Upkeep Of Tablet

### Maintenance And Upkeep Of Tablet

- ① Software updates: Regularly update the operating system and software of the tablet, which helps maintain device stability and security.
- ② Cleaning the screen: Use a soft, lint-free cloth or specialized maintenance product to gently clean the surface of the screen, avoiding the use of cleaning tools such as paper towels that can easily scratch the screen.
- ③ Avoid overcharging: When using a tablet, avoid overcharging and discharging to extend battery life.
- ④ Protective casing: Use auxiliary tools such as protective sleeves and protective films to protect the equipment from falling and scratching.
- ⑤ Avoid overuse: Tablets should not be used for too long, and should be properly rested and cooled to extend device life.

## Warning

### Warning

- ◇ Do not expose the product to high temperatures, corrosive or high-pressure environment.
- ◇ Do not attempt to disassemble the product, or to replace any electronic components in it.
- ◇ If the internal devices have fluid leakage, please stop use.
- ◇ Do not expose the battery (battery or combined battery) to excessive heat such as sunlight, fire or similar.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure statement

The device has been evaluatec to mee general RF exposure requirement. The device can be used in portable exposure condition without restriction.