


**b. When equipped with a docking station, the default connection is to connect to the I/O on the docking station, and the option to connect to the I/O on the main screen is not recommended.**


- Flip the main device over 90 degrees, insert the connecting wires of each external device into the docking station correctly, and ensure that the connections are correct and stable;
- If you need to connect the I/O on the main screen, you can refer to the connection method without docking station.

**Attention: Power connection (as shown in Figure 7 on the right)**

- \* When the main device is equipped with an docking station, the power adapter is connected to the DC in on the docking station by default;
- \* When the main device does not have an docking station, the power adapter is connected to the DC in on the main screen by default;
- \* Please make sure to connect the AC power cord on the adapter to a grounded power source (such as a socket);

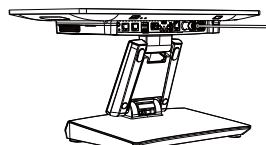

(Without docking station power connection)

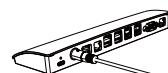

(With docking station power connection)

**【Figure 8】**

## 6. Common troubleshooting methods

Common fault phenomena and judgment solutions of equipment are for reference only;  
The listed problem points do not include all problem points, and the specific solutions shall be subject to the actual situation.

No display on the screen	Please check if the power connection is normal; Please restart the device to check if it can be restored to normal;
Network abnormality	Please check if the network interface connection is good; Please check if the network environment is normal;