

148 mm

100 mm

说明书148x100mm三折页

Selfie Stick User Manual

Product introduction

Please read this instruction manual carefully before using the product and keep it properly.

Packing list

Unfold the tripod and phone holder

1. Pull out the telescopic rod through the support foot at the bottom of the selfie stick.
2. Hold the telescopic rod and push the selfie stick vertically against the ground or table to support the tripod.
3. The tripod is manually deployed.
4. The phone holder can be rotated 90° left and right to achieve horizontal and vertical screen shooting of the phone.

Fix the phone

Open the phone clamp, place the phone close to the phone clamp (be careful to avoid the phone buttons), and clamp it. The phone clamp is suitable for phones with a width of 70-85mm.

Retract the phone clamp and tripod

1. Remove the phone from the phone clamp. 2. Hold the metal ring of the selfie stick. 3. Quickly push the telescopic rod upwards, and the tripod will close due to inertia.

How to Use

Easy to set up, Easy to use

1 STEP
Pairing

2 STEP
Shooting

1. Pairing

- a. Turn on the shutter by switching the on/off button. The Remote Shutter will enter into pairing mode and indicator LED starts flash quickly at the same time.
- b. Activate the Wireless function on your phone and sourcing the devices around.
- c. Select the device of "Remote Shutter" from the list and pairing will be finished automatic few seconds.

2. Shooting

Click "Camera" of your device, then press the button on the remote shutter to take photos or videos.

Battery type CR632
Nominal voltage 3 V

▲ WARNING

POISON HAZARD: This product contains a button cell or coin battery.
• A button cell or coin battery can cause severe injury or death.
• A button cell or coin battery can cause Internal Chemical Leakage.
• KEEP away and avoid batteries OUT OF REACH OF CHILDREN.
• Do not touch the battery terminals with your fingers.
• Do not swallow or inhale or insert into any part of the body.
• Do not short circuit the battery terminals.

a) Battery type (CR 632)
b) Nominal voltage 3 V.

a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
b) Even used batteries may cause severe injury or death.
c) "Call a local poison control center for treatment information."
d) A statement indicating the compatible battery type (CR 632)
e) A statement indicating the nominal battery voltage 3 V.
f) "Non-rechargeable batteries are not to be recharged."
g) "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."
a) "Ensure the batteries are installed correctly according to polarity (+ and -)."
b) "Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
c) "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
d) "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to residential use. This equipment uses radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

 
 
 
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

贴纸

30 mm

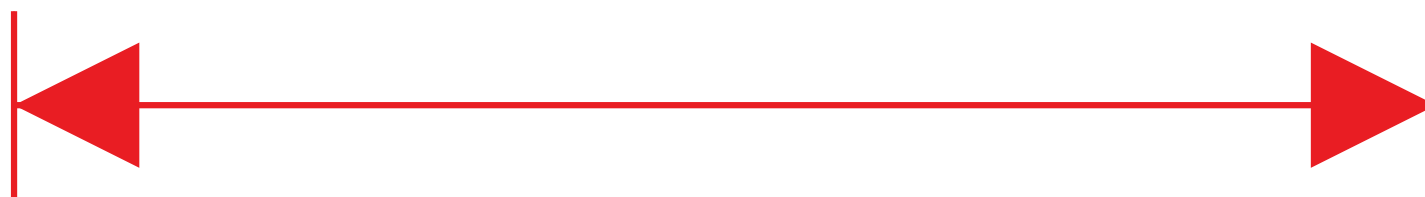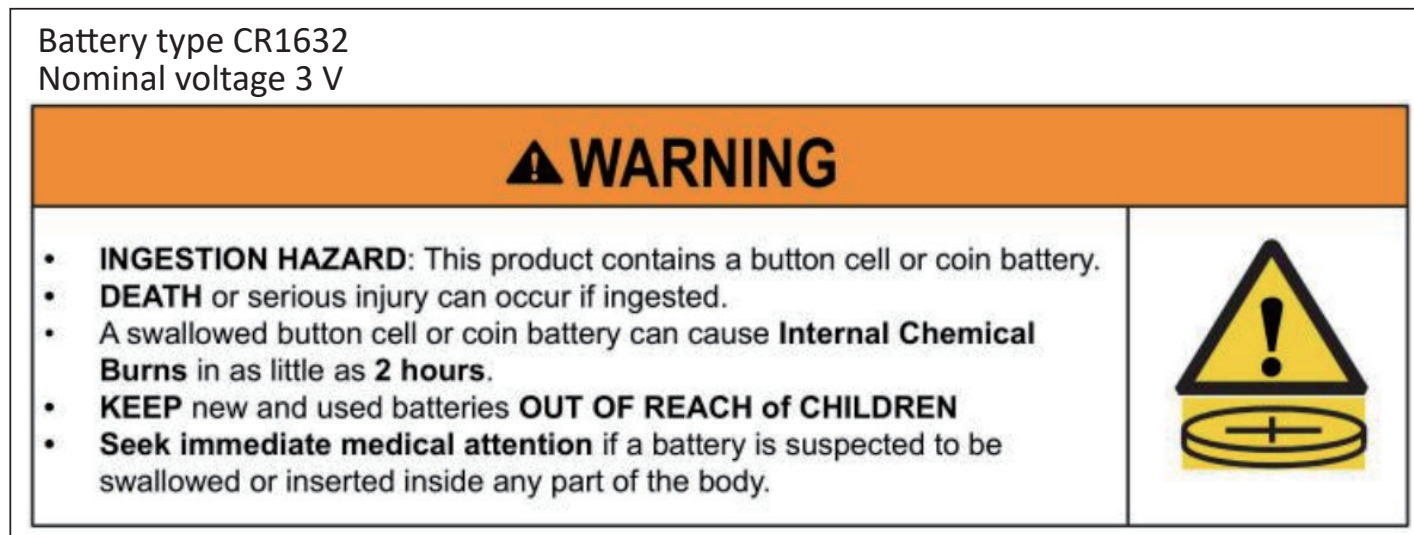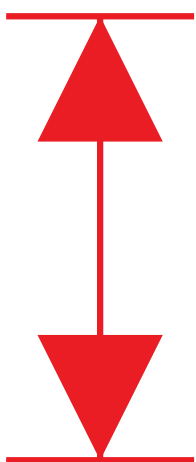

80 mm