


Model: ZY909

User Manual

Caution

- 1.1 This product contains small parts such as (batteries, battery cover and screws) that may cause suffocation if swallowed by children.
- 1.2 Consult your doctor before use if you are carrying any kind of personal medical device.
- 1.3 To avoid the risk of burns, do not use the device if the antenna is damaged in any way.
- 1.4 Do not use the device near the radio to avoid interference.
- 1.5 The device cannot be used to contact emergency services.
- 1.6 Please do not disassemble or assemble it by yourself.
- 1.7 To avoid electromagnetic interference or electromagnetic compatibility problems, please turn off the walkie-talkie when there is a "please turn off the walkie-talkie" sign.
- 1.8 Turn off the walkie-talkie before entering the flammable and explosive environment.
- 1.9 Do not charge the battery in a flammable or explosive environment.

Product Description

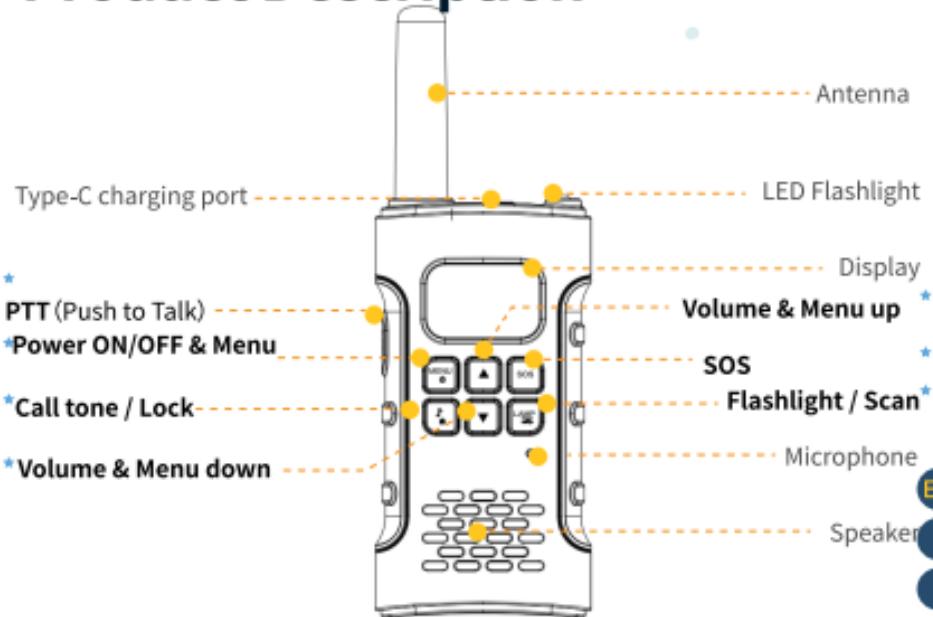

EN

- Antenna
- Type-C charging port
- PTT (Push to Talk)
- Power ON/OFF & Menu
- Call tone / Lock
- Volume & Menu down
- Channel/Menu Indicator
- Scan Indicator
- VOX Indicator
- Battery
- Key lock Indicator
- Display
- Volume & Menu up
- SOS
- Flashlight / Scan
- Microphone
- Speaker
- CTCSS/DCS
- Tx/Rx icon
- Volume

***SOS:** Long press the SOS button, the light and sound will start in the form of SOS, press PTT button to exit;

***PTT (Push to Talk):** Push to Talk, release to listen;

***Call tone/ Lock:** Short press to call, long press to lock or unlock keyboard.

***Flashlight/Scan:** Short to turn on or off flashlight, long press to scan channels.

***Power key:** Short press to enter menu setting, long press to power on or off.

***▲:** In non-menu setting state, short press to turn up volume; In menu setting state, short press to set related functions.

***▼:** In non-menu setting state, short press to turn down volume; In menu setting state, short press to set related functions

Before Use

- Please charge it before using it for the first time, please use a 5V 1A charger.
- Please charge in time. When the battery icon flashes, it means that the battery is low. When fully charged, the battery icon will stop flashing.

How to Use

1. Power on or off:

Long press  to power on or off.

2. Set the Channel:

- Channel: Short press  one time, the channel starts to flash, press  to set the channels, There are 22 channels for you to set, after selected, press PTT to confirm;
- Sub-code: Short press  2 times, the sub-code starts to flash, press  to set the sub-code, you can set 01-99, OF means no code, 01-38 means CTCSS code, 39-99 means DCS code, press PTT to confirm;
- To communicate, all walkie-talkies in the group must be set to the same channel and sub-code;
- Hold the walkie-talkies 25mm away from your mouth and speak directly into the microphone. Don't cover the microphone when you're talking, and when you're finished, release the PTT (Push to Talk, release to listen).

Note:

You must set the sub-code to OF in order to communicate with other FRS radio stations that do not have the Interference cancellation code.

3. VOX (voice-operated exchange) ,You can talk into a walkie-talkie microphone instead of pressing a PTT button.

Set: Short press  3 times to enter VOX setting, default OF(off), press  to set the sensitivity level (Level 1,2,3,level 3 is the most sensitive) , press PTT to confirm.

4. Adjust the volume:

Press  to turn up or down the volume(level 1-8).

5. Channel scanning:

Long press  to scan the channel, short press PTT to stop scanning.

6. Call:

Short press  to call group.

EN

7. Set the call tone:

Short press  4 times, screen will display “CA 01”, and “01” will starts to flash, press  to select the tone(10 calling tones) , press PTT to confirm.

8. End call tone:

- Short press  6 times, screen will display “CO on”, press  to turn on or off.
- “ON” means there will be a tone when PTT is released, “OF” means there will be no tone.

9. Turn button sounds on and off:

Short press  5 times, screen will display “L0 on”, “on” starts to flash, press  to turn on or off the button sounds.

10. Lock the keyboard:

- Long press  to lock or unlock the keyboard.

- When locked, only PTT/Call tone/ Flashlight is available, others is not available.

11. Flashlight:

Short press  to turn on or off the flashlight.

Technical specifications

Channels: 22

Sub-code: CTCSS:38+DCS:61

Frequency: 462MHz(462.5500-462.7250MHz)

467MHz(467.5625-467.7125MHz)

Range: up to 2miles/3km (Open field)

Transmission: ≤500mW

Battery: 1000mAh lithium battery

Warranty (1-Year Period)

The manufacturer's warranty is void under the following circumstances but not limited to:

Improper or inadequate maintenance or modification.

Accident, misuse, abuse, contamination, or other external causes.

The use of unspecified adapter and accessories.

Loss or damage in transit.

Damages occur as a result of one's failure to follow the instructions.

This warranty does not apply to expendable or consumable parts.