

## Smart projector

### User Guide



Touch control

Bracket design

 
#### Safety tips

- 1.1 Please read this manual carefully before you use the machine;
- 1.2 Please use the power supply type indicated on the machine and the power supply provided with the machine;
- 1.3 Use the power cord carefully to avoid excessive bending; Power cord damage may result in electric shock and fire;
- 1.4 Please do not disassemble the machine by yourself, otherwise the company will not undertake free warranty service;
- 1.5 Do not look directly into the lens of machine while it is working to avoid burning your eyes;
- 1.6 Keep a minimum gap of 30cm around the machine, do not cover newspaper, cloth and other items;
- 1.7 Please keep the machine away from humidity, exposure, high temperature and other environments, away from magnetic objects;
- 1.8 In order to extend life of machine and protect your eyesight, we recommend that you turn off machine after 3 hours of continuous use and disconnect power supply for 30 minutes before turning it on;
- 1.9 The machine will automatically enter the screensaver state if there is no operation on static interface within five minutes. You can press the back button of remote control to exit screensaver;



To prevent electric shock, do not open the shell.  
Maintenance needs to be handled by professionals

#### Tablet operation

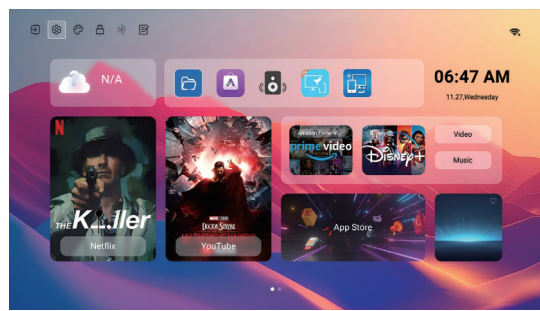

Home page



Weather mode



 
Back




Setting



Calendar

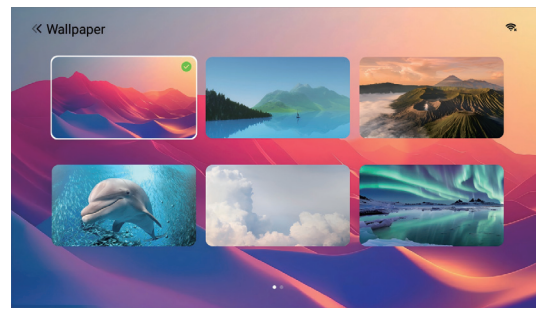

Background image

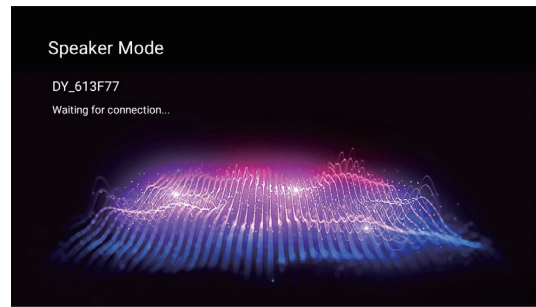 

Speaker mode



Photo



Speaker




Home



Volume

#### Remote control instructions

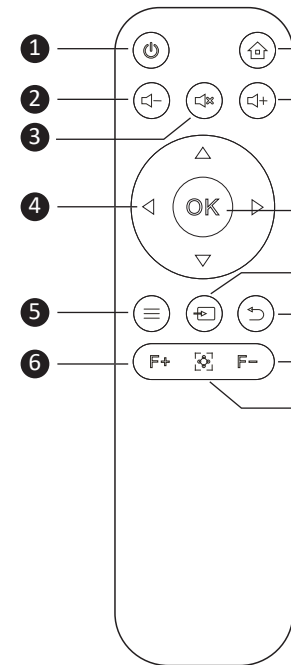 

- 1、Power button
- 2、Volume-
- 3、Mute
- 4、Arrows
- 5、Menu
- 6、Focus+
- 7、Home
- 8、Volume+
- 9、OK
- 10、Source
- 11、Back
- 12、Focus-
- 13、Focus

Adjusting Focus:  
When auto focus makes the screen unclear, you can adjust it appropriately through the "Focus ±" function on the remote control.  
Powering On/Off:  
In addition to using the remote control to turn the machine on and off, the power button located on the machine itself can also be used.


#### Focus correction

 By default, auto focus is enabled.  
If the autofocus effect is not good, please press focus key "F-, F+" to adjust until it is clear.

#### Zoom

At home page, please enter [Settings] - [Projection Settings] - [Screen zoom] to adjust screen size without moving the machine.

Press up and down to scale the screen size

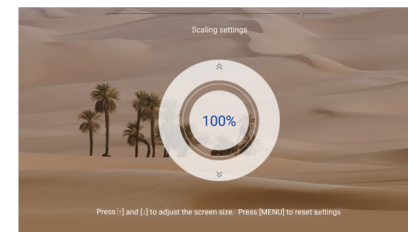

Press menu button to reset

#### Keystone correction

The auto keystone is turned on by default;  
If auto keystone effect is not good, please enter [Settings] - [Projection settings] - [Manual keystone correction] according to operation wizard to adjust until clear;



 
#### WiFi network

At home page, please press source button on remote control; At displayed page, select the required signal source, such as "HDMI", "USB". Press "OK" button to enter corresponding signal source state.




#### Application

At home page, please press right key to display the list of installed APP; select any one and press OK to open it; press menu key to uninstall it; or enter [Settings]-[Application] to check installed APP.

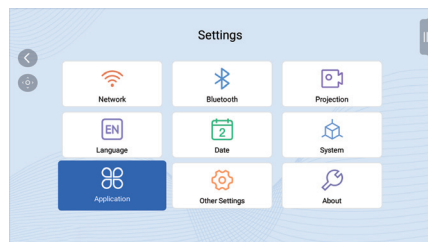


 Open App Store, please enter the required App name to search, download and install. Please note that do not exit the page during download and installation process.

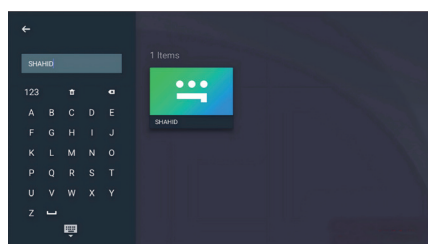


#### File management

 Insert USB flash drive with multimedia files into the USB port; Open home page, click and select "USB"; After screen is displayed, you can find the desired multimedia file and play it.

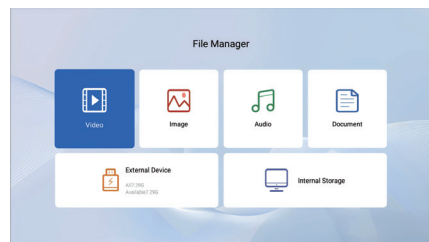


#### Sources

 At home page, please press source button on remote control; At displayed page, select the required signal source, such as "HDMI", "USB", etc. Press "OK" button to enter corresponding signal source state.

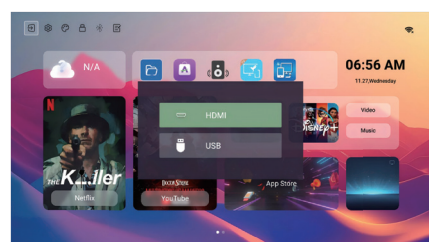


#### Installation mode

 According to use environment and needs, you can use a special hanger to hang it on the ceiling, you can also place it on a stable desktop, or you can use other ways to install it according to the following legend.

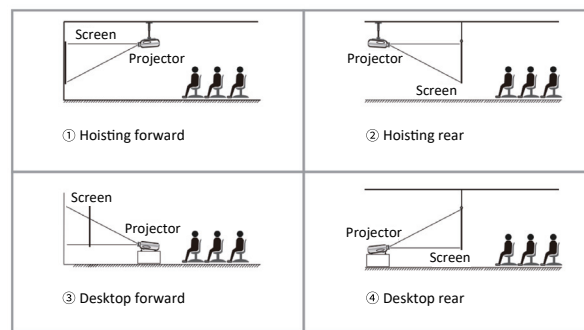

#### Notice

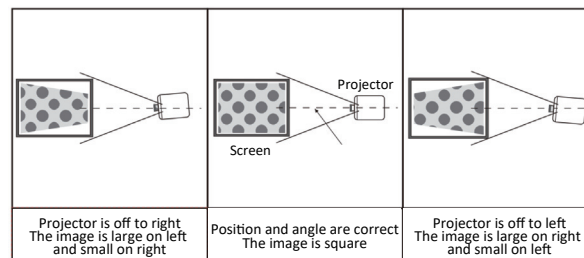 

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. RF Exposure Statement To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body.