

# Digital music player

Model: T60 User Manual



✿ Please read the instructions carefully before using this product.

## USER MANUAL 03

### 1 Notes

- When you connect T60 Music Player to a computer, you are briefly prompted to select: [Charge & transfer] or [Charge & play].
- T60 automatically applies [Charge & transfer], if no new selection is made.

### How to charge the voice recorder

T60 Music Player has a built-in battery that can be charged through the USB port of a computer or USB adaptor. When charging, the battery icon in the top right corner turns green from white .


### How to estimate battery level

You can check the remaining battery level by looking at the battery icon in the upper right corner of the display.

Less than 25% 25%-50% 50%-75% 75%-100%

## USER MANUAL 04

### Turning the Player On or Off

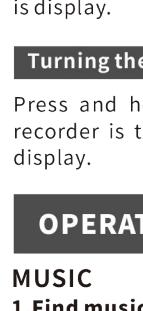

#### Turning the power on

Press and hold the button for 5 seconds. The recorder is turned on, and the "welcome" animation is displayed.

#### Turning the power off

Press and hold the button for 3 seconds. The recorder is turned off, and the animation is displayed.

## OPERATION OF MAIN FUNCTIONS

### MUSIC


#### 1. Find music on the player

After you sync the music player with your PC media library, find the music on the player.

## USER MANUAL 01

### GETTING STARTED

#### INDEX TO PARTS AND CONTROLS

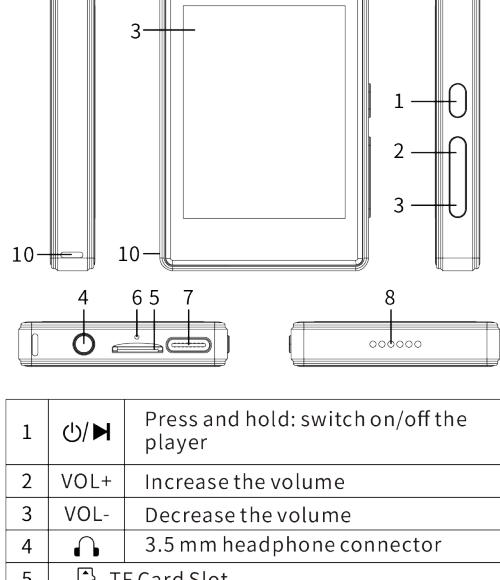

1	Press and hold: switch on/off the player
2	VOL+
3	VOL-
4	3.5 mm headphone connector
5	TF Card Slot

## USER MANUAL 05

In [Music], songs are sorted by metadata or ID3 tag under different collections: [All songs], [Artists], [Albums], or [Favorites].

### All songs

Songs are sorted by song title in alphabetical order.

### Artists

Songs are sorted by artist in alphabetical order; Under each artist, songs are sorted by album in alphabetical order.

### Albums

Songs are sorted by album in alphabetical order.

### Favorites

Display songs added to "My Favorites."

### 2. Play music

- ① Touch to Previous Track / Rewind
  - Press: Play the previous song.
  - Press and hold: Rewind.
- ② Touch Next Track / Fast Forward
  - Press: Play the next song.
  - Press and hold: Fast forward.

### 3. Play Mode

- Repeat All: Play all the songs in this unit repeatedly. The icon is displayed as .
- Shuffle: Play songs/recording in this unit randomly. The icon is displayed as .
- Repeat 1: Repeats the playback of the selected song. The icon is displayed as .

### 4. Bookmarks

- How to add a bookmark: While playing a song, press the option when you reach the desired point in the song.

## USER MANUAL 06

### E-BOOK

Find "ebook" icon on the home page to access its function.

- ① Select a book.

- ② Touch to start automatic page-turning mode, touch to pause, touch the to go to the previous screen.

- ③ On the ebook reading interface, swipe left or right with your finger on the screen to read the next page or the previous page.

- ④ Touch the button enter to the ebook settings menu a related list will show as follows:

### Set Auto Page Turn Time

You can adjust the auto page turn time of the e-book from 0.3 seconds to 30 seconds. Tap the "OK" button in the top right to save the settings.

### Background color

You can adjust the background color of the reading screen. The options are "Black," "White," and "Yellow".

## USER MANUAL 07

### USER MANUAL 08

The first time you tune in to the radio, start to search for stations.

① On the FM radio playing interface, touch to access to the FM radio settings.

② Select [Auto Tune FM] and press it, the play screen will display the message [Radio Searching]. Once the auto tune is complete, the message [Auto Tune FM Completed] will appear.

### Manual tune

Use manual tune to search for a frequency or station.

① Press the / buttons to manually tune the FM frequency.

② Fine-tune the station by pressing the buttons to move in 0.1 MHz increments.

③ Once you have tuned to the desired station, it will play automatically.

④ Press to jump to the previous saved radio station.

⑤ Press to skip to the next saved radio station.

### 2. Saving Radio Stations

To save a station, press to access to the FM radio settings, select [Preset FM Stations] > [1.FM

## USER MANUAL 09

### E-BOOK

Find "ebook" icon on the home page to access its function.

- ① Select a book.

- ② Touch to start automatic page-turning mode, touch to pause, touch the to go to the previous screen.

- ③ On the ebook reading interface, swipe left or right with your finger on the screen to read the next page or the previous page.

- ④ Touch the button enter to the ebook settings menu a related list will show as follows:

### Set Auto Page Turn Time

You can adjust the auto page turn time of the e-book from 0.3 seconds to 30 seconds. Tap the "OK" button in the top right to save the settings.

### Background color

You can adjust the background color of the reading screen. The options are "Black," "White," and "Yellow".

## USER MANUAL 10

### USER MANUAL 11

### USER MANUAL 12

The first time you tune in to the radio, start to search for stations.

① On the FM radio playing interface, touch to access to the FM radio settings.

② Select [Auto Tune FM] and press it, the play screen will display the message [Radio Searching]. Once the auto tune is complete, the message [Auto Tune FM Completed] will appear.

### Manual tune

Use manual tune to search for a frequency or station.

① Press the / buttons to manually tune the FM frequency.

② Fine-tune the station by pressing the buttons to move in 0.1 MHz increments.

③ Once you have tuned to the desired station, it will play automatically.

④ Press to jump to the previous saved radio station.

⑤ Press to skip to the next saved radio station.

### USER MANUAL 13

### 3. Deleting a File

Press and hold the file you wish to delete. A confirmation pop-up will appear. Tap "Yes" to delete the file.

### RECORDINGS

#### 1. How to start recorder?

- ① On the playback screen, select [Start Voice Recording] to begin recording.

- ② Press the pause button to pause the recording, and press it again to resume.

- ③ Press the return button end the recording, then press [Yes] to save it. Recordings are saved in the [Recordings Library].

**Note:** The recording file name follows this format:

**20230913-093430-120min.wav**

- **20230913:** The date of the recording (year/month/day)

- **093430:** The time of the recording (hour/minute/second)

- **120min:** The maximum recording duration (in minutes)

- **wav:** The file format

## USER MANUAL 14

### USER MANUAL 15

### USER MANUAL 16

The first time you tune in to the radio, start to search for stations.

① On the FM radio playing interface, touch to access to the FM radio settings.

② Select [Auto Tune FM] and press it, the play screen will display the message [Radio Searching]. Once the auto tune is complete, the message [Auto Tune FM Completed] will appear.

### Manual tune

Use manual tune to search for a frequency or station.

① Press the / buttons to manually tune the FM frequency.

② Fine-tune the station by pressing the buttons to move in 0.1 MHz increments.

③ Once you have tuned to the desired station, it will play automatically.

④ Press to jump to the previous saved radio station.

⑤ Press to skip to the next saved radio station.

### USER MANUAL 17

### Note:

- Under Bluetooth playing mode only support following formats: MP3, WMA, WAV, FLAC, APE, OGG. This mp3 player can not pair with smart phone.

- When Bluetooth mode is enabled and wireless headphones are connected, the Photo and Recording functions cannot be used. Attempting to use these features will cause the music to pause.

- If you still have trouble to pair with your headphones or speaker,

- please contact our after-sales service [eaikorwork@outlook.com](mailto:eaikorwork@outlook.com). We are always here to

### SETTING

Tap "Settings" on the main interface to access various functions. The related options will be displayed as follows:

#### 1. Language

Select from 6 available languages.

#### 2. Date & Time

You can set the Date and Time by swiping up or down on the screen to adjust the numbers. Tap the "OK" button in the upper right corner to save your settings.

## USER MANUAL 18

### USER MANUAL 19

### USER MANUAL 20

The first time you tune in to the radio, start to search for stations.

① On the FM radio playing interface, touch to access to the FM radio settings.

② Select [Auto Tune FM] and press it, the play screen will display the message [Radio Searching]. Once the auto tune is complete, the message [Auto Tune FM Completed] will appear.

### Manual tune

Use manual tune to search for a frequency or station.

① Press the / buttons to manually tune the FM frequency.

② Fine-tune the station by pressing the buttons to move in 0.1 MHz increments.

③ Once you have tuned to the desired station, it will play automatically.

④ Press to jump to the previous saved radio station.