 


BLUETOOTH SPEAKER

MINI

Magnetic Bluetooth speaker Description

Product Description and Accessories

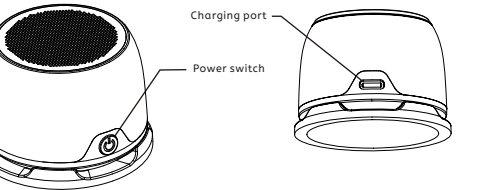

100cm Type-C cable



 
Instructions



Magnetic Plate

Important Notice:All images in this manual are for illustration purposes only. Due to technical and system upgrades,the information and parameters indicated may vary from the actual product. Please refer to the actual product for accurate information.

Power On/Off Instructions

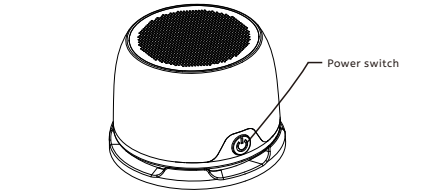

Power On

- Press and hold for 3 seconds (from off state)

Play/Pause

- Single press

Power Off

- Press and hold for 5 seconds (from on state)

Switch Off/On Light

- Double press the power button

Bluetooth Pairing

- Press and hold for 5 seconds (from off state)

BLUETOOTH SPEAKER

Specifications

 
 
Bluetooth Range: Approx. 10 meters
Bluetooth Version: V5.4
Distortion Limited Output Power: 5W
Bluetooth Protocols: A2DP, AVRCP
Battery Life:Approx. 6 hours
Size:59X45.5mm

Speaker Unit: Φ40mm Dynamic Driver
Speaker Impedance: 4Ω
Noise Level: ≤25dB(A)
Rated Input: 5V/9V-2A
Rated Frequency Response: 250Hz-15kHz
Charging Supported Devices: Mobile Phone,Earphones,iWatch

Bluetooth Pairing Procedure

1. First-Time Pairing

The device automatically enters Bluetooth pairing mode when powered on for the first time. Search for "BW200" on your device and select to connect.



2. Reconnecting

If previously paired, the speaker will automatically reconnect to the last paired device. If the connection is not re-established within 5 seconds, the speaker will enter pairing mode. If pairing is unsuccessful, the device will automatically turn off after 10 minutes. Press and hold for 5 seconds (from off state) to force pairing again.

Accessories Usage Instructions

Attach the magnetic sheet to the back of your phone case or any other surface for speaker attachment as needed.Use the Type-C port to charge the product. A red light indicates charging, and a green light indicates full charge.Wireless charging requires the product to be connected to a power source to charge phones, earphones, or watch devices.

Important Safety Information

- Please read this manual carefully and keep it for future reference.
- Use only manufacturer-specified accessories.
- Follow the installation instructions as described in the manual.
- Recommended operating environment: 0-35°C.
- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not use this product near water or immerse it in liquid. Avoid dripping or splashing liquids on the product.
- Install and use this product away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not place any water-containing vessels, such as vases, on the product. Avoid placing any form of open flame, such as lit candles, on the product.
- Do not block any ventilation openings. Ensure proper ventilation by leaving sufficient space around the product (recommended at least 5cm).
- Do not force the plug into a port. Ensure the port is clear of obstructions, and the plug matches the port's shape and orientation.
- Keep accessories out of children's reach to prevent accidental ingestion.
- This product is not a toy. Children under 14 should use it under adult supervision.
- Do not attempt to open or remove the casing yourself. Contact professional service personnel for repair if needed.
- In case of any damage, such as a power supply cord or plug damage, liquid spill, exposure to rain, malfunction, or drop, seek professional repair services.
- Unplug the product before cleaning with a dry cloth. Avoid using strong acids, bases, gasoline, alcohol, or other chemical solvents. Use neutral solvents or water if necessary.
- Excessive volume may cause hearing damage. Adjust the volume to a safe level.

⚠ Pusing the device at high volume may cause hearing damage. Please adjust the volume to a safe level.

♻ Proper Disposal of Electronic Products.Do not dispose of electronic equipment, components, or batteries with household waste. To prevent potential environmental pollution and harm to human health from hazardous substances, and to ensure resource recycling, follow local laws and regulations for recycling or contact the product's retailer.

Power Warning!

- Ensure operating voltage matches local supply voltage. The operating voltage is indicated on the product nameplate.
- For safety, unplug the product during long periods of non-use or during thunderstorms.
- The power supply may heat up under normal conditions. Ensure proper ventilation and handle with care.
- Safety warning symbols are located on the product or power adapter casing or base:
 - This symbol alerts users to uninsulated dangerous voltage inside the product that may cause electric shock.
 - This symbol indicates that the product is a CLASS I or double-insulated electronic device, requiring no grounding protection.
 - This symbol advises users not to open the casing. No user-serviceable parts inside. Qualified service personnel should perform any needed repairs.
- This product can be safely used in tropical climate conditions.
- It is suitable for safe use at altitudes below 5000 meters.

Battery Safety Warnings!

- Incorrect battery replacement may cause explosion. Replace only with the same or equivalent type.
- For products with removable batteries, ensure proper disposal or recycling. For non-removable batteries, do not disassemble.
- Do not disassemble, crush, puncture, or incinerate the battery. Avoid exposing the battery to conductive materials, liquids, fire, or high temperatures.
- Avoid metal objects contacting the battery terminals.
- Discontinue use if the battery swells, leaks, discolors, emits an odor, or exhibits any other abnormalities. Do not use a submerged battery.
- Improper use of the battery may result in explosion or Leakage, causing burns or other injuries. Dispose of batteries according to local laws and regulations.
- Shortwave radio frequency signals from wireless products may interfere with other electronic and medical devices. Turn off this product where prohibited.

Important Safety Information

Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Metal Parts	X	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O
Wires & Cables	O	O	O	O	O	O
Circuit Boards	O	O	O	O	O	O
Plated Parts	O	O	O	O	O	O

This table is compiled according to SJ/T 11364.
O Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572.
X Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GB/T 26572.
In some products, batteries may be included. Battery manufacturers should provide information regarding the hazardous substances content.

Note: The environmental protection usage period depends on the product's normal operating temperature and humidity conditions.



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.