

Precautions for First Use

Power connection:

Please use 5v1a and above power adapter and type-c data cable for power supply..

Input connection:

Connect external devices with audio cable(1) The 3.5mm plug is connected to the aux in socket of the machine.

Output connection:

Connect the plug-in audio cable to the active speaker amplifier or power amplifier:

(1) Red plug connected to r-channel output

(2) White plug connected to l-channel output
Tip: please confirm the connection before playing, and then control the volume through the power amplifier.

Operating steps for player playback

Plug in the power, put the vinyl record on the turntable, and turn on the power switch, it's Bluetooth. Open the stylus protective cap, open the latch of the singing arm, and push the rising and falling lever, move the singing arm to the top of the record, and then pull down the lifting lever to automatically switch to the black glue mode when playing the record. Generally, vinyl records on the market default to 33 revolutions, and the factory setting of the record player is also 33 revolutions. The record will stop automatically after playing. At this time, you just manually put the singing arm back to the lock position of the singing rod. The record player will automatically switch to Bluetooth mode. So the operation of the rap machine is still very simple.

Note:

It is generally recommended to turn this switch to the on position. Please note after use.

1 after the record is finished, please lift the bar with the lifting lever (3) and move it back to the bar lock position.

2 install the cartridge protective cover and fasten the stick lock (please do not get the stylus when installing the cartridge protective cover)


3 turn off the power.

4 please do not rotate the disc artificially, which will damage the singing arm and needle of the player.

Bluetooth play

1. The machine turns on the power supply and automatically Bluetooth function. The Bluetooth name is Dcolorful 211. Lift the lever to the rotary table position and the machine Bluetooth function automatic conversion, singing mechanism has a prompt tone.

2. Turn on the Bluetooth function of the mobile phone, search the Bluetooth of the attachment, select the Bluetooth of the machine for connection and pairing, and after airing, you will hear a "beep", and then you can play the songs in the mobile phone. Note: Bluetooth devices use a transmission distance of 10 meters, and different transmission environments are used in simultaneous interpreting.

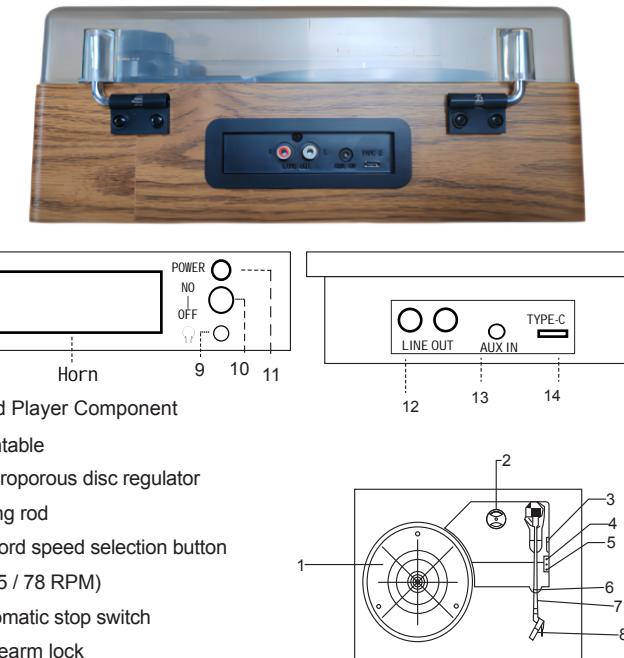

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

The manual provides detailed instructions for use, from which you can get information about the product introduction, usage methods, etc. Please read the manual carefully before using the machine. Please forgive me if there are any printing errors or translation errors.



Warning

Please click carefully and don't open it.

The lightning sign with arrows in this equilateral triangle warns users that there is a non-insulating dangerous voltage in the product's housing that can cause electric



The exclamation mark in this equilateral triangle is a warning to users that there are important instructions for operation and maintenance in the product instructions.

IMPORTANT SAFETY INSTRUCTIONS

1. Please read the instructions carefully.
2. Keep the instructions well
3. Watch out for all warnings
4. Please follow the instructions in the instructions.
5. Please don't put the speaker near water or humidity.
6. Please place the whole machine in a cool and ventilated place and use it according to the manufacturer's instructions.
7. Please do not place the whole machine in heat source accessories, such as radiators, stoves, etc.
8. Please don't move the power cord carelessly and don't squeeze the plug.
9. Please use the accessories provided by the manufacturer.
10. Please unplug the power plug when lightning flashes or long time is not used.
11. Professionals must be invited if maintenance is required.
12. Do not place the machine near a container or drip filled with liquid.
13. Please use the power supply as required.
14. Please do not use chemical reagents to clean the surface of wooden cases. This will cause damage to the surface of wooden cases. Please use clean and dry rags.
15. Please unplug the power plug before switching on.
16. Please unplug the power plug before moving the speaker.

INSTRUCTION MANUAL

TR-108



Retro Wood Grain Series Turntable